



**Natural Gas or Propane
Modulating, Condensing
Water Heater Models**

**Applicable to Serial Numbers
G-14-1450 and above**

**This guide applies to the
following Innovation models**

- Innovation 600
- Innovation 800
- Innovation 1060
- Innovation 1350

**Other documents for this product
include:**

- GF-5030 INN Gas Supply Guide
- GF-5050 INN Venting Guide
- GF-5060 INN Elect. Power Guide
- GF-5080 INN Sizing Guide

USER MANUAL

Installation, Operation and Maintenance

INNOVATION Series Gas-Fired Water Heaters



Latest Update: 08/05/2014

**Technical Support
(Mon-Fri, 8am-5pm EST)**

1-800-526-0288

www.aerco.com

Disclaimer

The information contained in this manual is subject to change without notice from AERCO International, Inc. AERCO makes no warranty of any kind with respect to this material, including but not limited to implied warranties of merchantability and fitness for a particular application. AERCO International is not liable for errors appearing in this manual. Nor for incidental or consequential damages occurring in connection with the furnishing, performance, or use of this material.

TABLE OF CONTENTS

FOREWORD	7
CHAPTER 1. SAFETY PRECAUTIONS	13
1.1 WARNINGS & CAUTIONS.....	13
1.2 EMERGENCY SHUTDOWN	14
1.3 PROLONGED SHUTDOWN	15
CHAPTER 2. INSTALLATION	17
2.1 INTRODUCTION.....	17
2.2 RECEIVING THE UNIT	17
2.3 UNPACKING.....	17
2.4 SITE PREPARATION	18
2.4.1 Installation Clearances	18
2.4.2 Setting the Unit	19
2.5 WATER INLET AND OUTLET PIPING.....	20
2.5.1 WHM Actuator-Controlled Ball Valve Installation.....	20
2.6 TEST HOSE BIB CONNECTION	21
2.7 SYSTEM RECIRCULATION LOOP.....	22
2.8 PRESSURE & TEMPERATURE RELIEF VALVE INSTALLATION	24
2.9 CONDENSATE DRAIN & PIPING.....	24
2.10 GAS SUPPLY PIPING	26
2.10.1 Gas Supply Specifications.....	26
2.10.2 Manual Gas Shutoff Valve	27
2.10.3 External Gas Supply Regulator	27
2.11 AC ELECTRICAL POWER WIRING.....	28
2.11.1 Electrical Power Requirements	28
2.12 FIELD CONTROL WIRING	29
2.12.1 OUTDOOR AIR IN Terminal.....	31
2.12.2 COMBUSTION AIR Terminals.....	31
2.12.3 O2 SENSOR Terminals	31
2.12.4 SPARK SIGNAL Terminals.....	31
2.12.5 ANALOG IN Terminals.....	31
2.12.6 VALVE FEEDBACK Terminals.....	32
2.12.7 SHIELD Terminals.....	32
2.12.8 ANALOG OUT Terminals	32
2.12.9 RS485 Comm Terminals	33
2.12.10 RS232 Comm Terminals	33
2.12.11 VFD/BLOWER Terminals.....	33
2.12.12 Interlock Terminals.....	33
2.12.13 FAULT RELAY Terminals.....	34
2.12.14 AUX RELAY Terminals	34
2.13 FLUE GAS VENT INSTALLATION.....	34
2.14 COMBUSTION AIR.....	35
2.14.1 Combustion From Outside the Building	35
2.14.2 Combustion Air from Inside the Building	35

Innovation Water Heaters Installation, Operation & Maintenance Manual

2.15 DUCTED COMBUSTION	35
CHAPTER 3. OPERATION	37
3.1 INTRODUCTION.....	37
3.2 CONTROL PANEL DESCRIPTION.....	37
3.3 CONTROL PANEL MENUS	41
3.3.1 Menu Processing Procedure	41
3.4 OPERATING MENU	43
3.5 SETUP MENU	43
3.6 CONFIGURATION MENU.....	44
3.7 WATER HEATER MANAGEMENT (WHM) MENU.....	46
3.8 TUNING MENU.....	47
3.9 START SEQUENCE	49
3.10 START/STOP LEVELS	52
CHAPTER 4. INITIAL START-UP.....	53
4.1 INITIAL START-UP REQUIREMENTS.....	53
4.2 TOOLS AND INSTRUMENTATION FOR COMBUSTION CALIBRATION.....	53
4.2.1 Required Tools & Instrumentation.....	53
4.2.2 Installing Gas Supply Manometer	54
4.2.3 Accessing the Analyzer Probe Port.....	54
4.2.4 Connecting Multimeter to Flame Detector.....	55
4.3 NATURAL GAS COMBUSTION CALIBRATION	56
4.4 PROPANE COMBUSTION CALIBRATION	59
4.5 REASSEMBLY	61
4.6 TEMPERATURE CONTROL CALIBRATION	61
4.6.1 Setting the Outlet Water Temperature Setpoint	62
4.6.2 Minimum Load Adjustment.....	62
4.6.3 Maximum Load Adjustment.....	63
4.7 OVER-TEMPERATURE LIMIT SWITCHes	64
CHAPTER 5. SAFETY DEVICE TESTING.....	65
5.1 INTRODUCTION.....	65
5.2 LOW GAS PRESSURE FAULT TEST.....	65
5.3 HIGH GAS PRESSURE FAULT TEST.....	66
5.4 LOW WATER LEVEL FAULT TEST.....	67
5.5 WATER TEMPERATURE FAULT TEST	67
5.6 INTERLOCK TESTS	68
5.6.1 Remote Interlock.....	68
5.6.2 Delayed Interlock	69
5.7 FLAME FAULT TESTs.....	69
5.8 AIR FLOW FAULT TESTS.....	70
5.9 SSOV PROOF OF CLOSURE SWITCH	72
5.10 PURGE SWITCH OPEN DURING PURGE.....	73
5.11 IGNITION SWITCH OPEN DURING IGNITION.....	73
5.12 SAFETY PRESSURE RELIEF VALVE TEST	74

Innovation Water Heaters Installation, Operation & Maintenance Manual

CHAPTER 6. MAINTENANCE	75
6.1 MAINTENANCE SCHEDULE.....	75
6.2 IGNITER 76	
6.3 FLAME DETECTOR	78
6.4 COMBUSTION CALIBRATION	78
6.5 SAFETY DEVICE TESTING	78
6.6 FIRESIDE INSPECTION.....	78
6.7 WATERSIDE INSPECTION.....	83
6.8 HEAT EXCHANGER CLEANING.....	84
6.8.1 Pumping System Set-Up Instructions.....	84
6.8.2 Cleaning Procedure	86
6.8.3 Testing HydroSkrub Effectiveness.....	86
6.9 CONDENSATE DRAIN TRAP.....	87
6.10 AIR FILTER REPLACEMENT	88
6.11 SHUTTING THE WATER HEATER DOWN FOR AN EXTENDED PERIOD OF TIME	89
6.12 PLACING THE HEATER BACK IN SERVICE AFTER A PROLONGED SHUTDOWN	90
CHAPTER 7. TROUBLESHOOTING GUIDE	91
7.1 INTRODUCTION.....	91
7.2 ADDITIONAL FAULTS WITHOUT SPECIFIC FAULT MESSAGES	103
CHAPTER 8. RS232 COMMUNICATION	107
8.1 INTRODUCTION.....	107
8.1.1 Acquiring the PuTTY Application	107
8.1.2 Logging on to a Remote Machine Using PuTTY.....	107
8.1.3 Running a Command on a Remote Machine Using PuTTY.....	108
8.2 RS232 COMMUNICATION SETUP.....	109
8.3 MENU PROCESSING UTILIZING RS232 COMMUNICATION	109
8.4 DATA LOGGING.....	110
8.4.1 Fault Log	110
8.4.2 Operation Time Log.....	111
8.4.3 Sensor Log	111
CHAPTER 9. WATER HEATER MANAGEMENT	113
9.1 INTRODUCTION.....	113
9.2 GENERAL DESCRIPTION.....	113
9.3 WHM Principles of Operation	114
9.4 NEW AERCO WHM FEATURES	114
9.4.1 Valve Feedback.....	114
9.4.2 Valve Supervisor	114
9.4.3 Valve Control.....	114
9.4.4 Modbus Header Sensor and Outdoor Sensor	115
9.4.5 Automatic Temperature Sensor Calibration	115
9.4.6 Manual Mode Password Required	115
9.4.7 Quick Re-Flash Feature – As of 3.08.05.....	115
9.4.8 WHM Auto Mstr	116
9.4.9 Run Hours and Run Cycles.....	116

Innovation Water Heaters Installation, Operation & Maintenance Manual

9.4.10 High Temperature Governor	116
9.5 WHM MENU	118
9.6 WHM hardware INSTALLATION & SET-UP INSTRUCTIONS	119
9.6.1 Hardware Installation.....	119
9.6.2 WHM Modbus Network Wiring.....	120
9.6.3 Control and Power Wiring.....	121
9.7 WHM MENU SETTINGS.....	122
9.7.1 WHM Mode.....	123
9.7.2 Comm Address (Located in Setup Menu).....	123
9.7.3 WHM Setpoint.....	123
9.7.4 WHM Nxt On VP	123
9.7.5 WHM Nxt Off VP.....	123
9.7.6 Lead/Lag Hours.....	123
9.7.7 Setback Setpoint.....	123
9.7.8 Setback Start & Setback End	123
9.7.9 WHM Auto Mstr	124
9.7.10 WHM Auto Timer	124
9.8 WHM PROGRAMMING & START-UP	124
9.9 TROUBLESHOOTING	126
9.10 SEQUENCING VALVE DESCRIPTION & OPERATION	127
9.10.1 Sequencing Valve Description	127
9.10.2 Sequencing Valve Operating Characteristics.....	129
APPENDIX A – INNOVATION MENU ITEM DESCRIPTIONS.....	131
APPENDIX B – STARTUP, STATUS AND FAULT MESSAGES.....	139
APPENDIX C – TEMPERATURE SENSOR RESISTANCE/VOLTAGE CHART	143
APPENDIX D – INNOVATION DEFAULT SETTINGS	145
APPENDIX E – DIMENSIONAL DRAWINGS.....	147
APPENDIX F – PARTS LIST DRAWINGS	149
APPENDIX G – PIPING DRAWINGS.....	165
APPENDIX H – C-MORE CONTROL PANEL VIEWS	189
APPENDIX I – C-MORE WIRING DIAGRAMS	191
APPENDIX J – RECOMMENDED SPARES	199
APPENDIX K – COMBUSTION CALIBRATION (KOREA ONLY)	201
APPENDIX L – WARRANTY	205

FOREWORD

The AERCO Innovation Series Potable Water Heaters are modulating units which represent a true industry advance that meets the needs of today's energy efficiency and environmental concerns. Designed for use in any domestic water heating system, each Innovation model provides precisely-controlled potable water within $\pm 2^{\circ}\text{F}$ of setpoint, regardless of flow rate. Innovation's compact size and varied venting capabilities allow maximum installation flexibility. The Innovation Series Heaters, with their load tracking controls modulate over a 20:1 turn down ratio to match the system demand and yield high thermal efficiencies.

Innovation Water Heaters are available in four (4) different sizes ranging from 600,000 BTU/Hr. Input to 1,350,000 BTU/Hr. Input. In addition, all Innovation Heater sizes now include Water Heater Management (WHM) software which is built in to the C-More Controllers furnished with each unit. When the heater is ordered with a Sequencing Valve (SV), up to eight (8) Innovation Water Heaters can be controlled by the WHM system utilizing RS485 Modbus protocol. All available Innovation Water Heater models are listed in the table on the following page. As this table shows, units can be ordered with Factory Mutual (FM) or Double Block and Bleed (formerly IRI) Gas Trains with or without Sequencing Valves.

When installed and operated on natural gas in accordance with this Instruction Manual, the Innovation Series Models covered herein comply with the NOx emission standards outlined in:

- South Coast Air Quality Management District (SCAQMD), Rule 1146.2
- Texas Commission on Environmental Quality (TCEQ), Title 30, Chapter 117, Rule 117.465

Whether used in singular or modular arrangements, the Innovation Heaters offer the maximum flexibility in venting with minimum installation space requirements. Innovation's advanced electronic controls offer simplified integration with today's Energy Management Systems.

For service or parts, contact your local sales representative or AERCO International, Inc.

IMPORTANT

Unless otherwise specified, the descriptions and procedures provided in this Installation, Operation & Maintenance Manual apply to all Innovation Series Water Heaters.

Innovation Water Heaters Installation, Operation & Maintenance Manual

FORWARD

INNOVATION POTABLE WATER HEATER MODELS

Part Number	Description	Shipping Weight
INN600 INN600P	Innovation Potable Water Heater, 600,000 BTU/HR Input, Natural Gas or Propane, FM Gas Train	1,060 lbs.
INN600SV INN600SVP	Innovation Potable Water Heater, 600,000 BTU/HR Input, Natural Gas or Propane, FM Gas Train with WHM Sequencing Valve	1,080 lbs.
INN600DBB INN600PDBB	Innovation Potable Water Heater, 600,000 BTU/HR Input, Natural Gas or Propane, Double Block & Bleed (Formerly IRI) Gas Train	1,085 lbs.
INN600SVDBB INN600SVPDBB	Innovation Potable Water Heater, 600,000 BTU/HR Input, Natural Gas or Propane, Double Block & Bleed (Formerly IRI) Gas Train with WHM Sequencing Valve	1,105 lbs.
INN800 INN800P	Innovation Potable Water Heater, 800,000 BTU/HR Input, Natural Gas or Propane, FM Gas Train	1,080 lbs.
INN800SV INN800SVP	Innovation Potable Water Heater, 800,000 BTU/HR Input, Natural Gas, or Propane FM Gas Train with WHM Sequencing Valve	1,100 lbs.
INN800DBB INN800PDBB	Innovation Potable Water Heater, 800,000 BTU/HR Input, Natural Gas or Propane, Double Block & Bleed (Formerly IRI) Gas Train	1,095 lbs.
INN800SVDBB INN800SVPDBB	Innovation Potable Water Heater, 800,000 BTU/HR Input, Natural Gas or Propane, Double Block & Bleed (Formerly IRI) Gas Train with WHM Sequencing Valve	1,115 lbs.
INN1060 INN1060P	Innovation Potable Water Heater, 1,060,000 BTU/HR Input, Natural Gas or Propane, FM Gas Train	1,100 lbs.
INN1060SV INN1060SVP	Innovation Potable Water Heater, 1,060,000 BTU/HR Input, Natural Gas or Propane, FM Gas Train with WHM Sequencing Valve	1,120 lbs.
INN1060DBB INN1060PDBB	Innovation Potable Water Heater, 1,060,000 BTU/HR Input, Natural Gas, or Propane Double Block & Bleed (Formerly IRI) Gas Train	1,115 lbs.
INN1060SVDBB INN1060SVPDBB	Innovation Potable Water Heater, 1,060,000 BTU/HR Input, Natural Gas or Propane, Double Block & Bleed (Formerly IRI) Gas Train with WHM Sequencing Valve	1,135 lbs.
INN1350 INN1350P	Innovation Potable Water Heater, 1,350,000 BTU/HR Input, Natural Gas or Propane, FM Gas Train	1,150 lbs.
INN1350SV INN1350SVP	Innovation Potable Water Heater, 1,350,000 BTU/HR Input, Natural Gas or Propane, FM Gas Train with WHM Sequencing Valve	1,170 lbs.
INN1350DBB INN1350PDBB	Innovation Potable Water Heater, 1,350,000 BTU/HR Input, Natural Gas or Propane, Double Block & Bleed (Formerly IRI) Gas Train	1,165 lbs.
INN1350SVDBB INN1350SVPDBB	Innovation Potable Water Heater, 1,350,000 BTU/HR Input, Natural Gas or Propane, Double Block & Bleed (Formerly IRI) Gas Train with WHM Sequencing Valve	1,205 lbs.

Innovation Water Heaters Installation, Operation & Maintenance Manual

FORWARD

Phrases, abbreviations and acronyms used in this manual are listed in the following Table:

PHRASES, ABBREVIATIONS AND ACRONYMS

Phrase, Abbreviation or Acronym	Meaning
A (Amp)	Ampere
ADDR	Address
AGND	Analog Ground
ALRM	Alarm
ASME	American Society of Mechanical Engineers
AUX	Auxiliary
BAS	Building Automation System, often used interchangeably with EMS (see below)
Baud Rate	Symbol rate, or simply the number of distinct symbol changes (signaling events) transmitted per second. It is not equal to bits per second, unless each symbol is 1 bit long.
BLDG (Bldg)	Building
BTU	British Thermal Unit. A unit of energy approximately equal to the heat required to raise 1 pound of water 1°F.
CCP	Combustion Control Panel
C-More Controller (or Control Box)	A control system developed by AERCO and currently used in all Benchmark, Innovation and KC1000 Series product lines.
CO	Carbon Monoxide
COMM (Comm)	Communication
Cal.	Calibration
CNTL	Control
DBB	Double Block & Bleed. Used to define gas trains containing two SSOVs and a solenoid operated vent valve. Used interchangeably with IRI.
DIP	Dual In-Line Package
EMS	Energy Management System; often used interchangeably with BAS
FM	Factory Mutual. Used to define boiler gas trains.
GND	Ground
HDR	Header
HX	Heat Exchanger
Hz	Hertz (Cycles Per Second)
I.D.	Inside Diameter
IGN	Ignition
IGST Board	Ignition/Stepper Board contained in C-More Control Box
INN	Innovation Water Heater
INTLK (INTL'K)	Interlock
I/O	Input/Output

Innovation Water Heaters Installation, Operation & Maintenance Manual

FORWARD

PHRASES, ABBREVIATIONS AND ACRONYMS - Continued

Phrase, Abbreviation or Acronym	Meaning
I/O Box	Input/Output (I/O) Box currently used on Benchmark, Innovation and KC1000 Series products
IP	Internet Protocol
IRI	Industrial Risk Insurers. Used to define gas trains containing two SSOVs and a solenoid operated vent valve.
ISO	Isolated
LED	Light Emitting Diode
LN	Low NOx
MA (mA)	Milliampere (1 thousand th of an ampere)
MAX (Max)	Maximum
MIN (Min)	Minimum
Modbus®	A serial, half-duplex data transmission protocol developed by AEG Modicon
NC (N.C.)	Normally Closed
NO (N.O.)	Normally Open
NOx	Nitrogen Oxide
NPT	National Pipe Thread
O ₂	Oxygen
O.D.	Outside Diameter
PMC Board	A Primary Micro-Controller (PMC) board is contained in the C-More Control Box used on all Benchmark units.
PPM	Parts Per Million
PTP	Point-to-Point (usually over RS232 networks)
REF (Ref)	Reference
RES.	Resistive
RS232 (or EIA-232)	A standard for serial, full-duplex (FDX) transmission of data based on the RS232 Standard
RS422 (or EIA-422)	A standard for serial, full-duplex (FDX) transmission of data based on the RS422 Standard
RS485 (or EIA-485)	A standard for serial, half-duplex (HDX) transmission of data based on the RS485 Standard
RTN (Rtn)	Return
SETPT (Setpt)	Setpoint Temperature
SHLD (Shld)	Shield
SSD	Slave to Slave programming
SSOV	Safety Shut Off Valve
SV	Sequencing Valve (Used with Water Heater Management (WHM) system)
TEMP (Temp)	Temperature

PHRASES, ABBREVIATIONS AND ACRONYMS - Continued

Phrase, Abbreviation or Acronym	Meaning
Terminating Resistor	A resistor placed at each end of a daisy-chain or multi-drop network in order to prevent reflections that may cause invalid data in the communication
VAC	Volts, Alternating Current
VDC	Volts, Direct Current
VFD	Vacuum Fluorescent Display, or Variable Frequency Drive
W	Watt
W.C.	Water Column
WHM	Water Heater Management
μ A	Micro amp (1 million th of an ampere)

(This Page Is Intentionally Blank)

CHAPTER 1. SAFETY PRECAUTIONS

1.1 WARNINGS & CAUTIONS

Installers and operating personnel **MUST**, at all times, observe all safety regulations. The following warnings and cautions are general and must be given the same attention as specific precautions included in these instructions. In addition to all the requirements included in this AERCO Instruction Manual, the installation of units **MUST** conform with local building codes, or, in the absence of local codes, ANSI Z223.1 (National Fuel Gas Code Publication No. NFPA-54) for gas-fired heaters and ANSI/NFPASB for LP gas-fired heaters. Where applicable, the equipment shall be installed in accordance with the current Installation Code for Gas Burning Appliances and Equipment, CSA B149.1, and applicable Provincial regulations for the class; which should be carefully followed in all cases. Authorities having jurisdiction should be consulted before installations are made.

See pages 15 and 16 for information on installations within the Commonwealth of Massachusetts.

IMPORTANT

This Instruction Manual is an integral part of the product and must be maintained in legible condition. It must be given to the user by the installer and kept in a safe place for future reference.

IMPORTANT

Read the following restrictions prior to installing the water heater:

1. The water heater can only be used for applications where the chlorine concentrations Do Not Exceed 4 mg/L which is the Environmental Protection Agency limit for chlorine concentrations in drinking water.
2. Do Not use this heater for a pool heating application.

WARNING

DO NOT USE MATCHES, CANDLES, FLAMES, OR OTHER SOURCES OF IGNITION TO CHECK FOR GAS LEAKS.

WARNING

FLUIDS UNDER PRESSURE MAY CAUSE INJURY TO PERSONNEL OR DAMAGE TO EQUIPMENT WHEN RELEASED. BE SURE TO SHUT OFF ALL INCOMING AND OUTGOING WATER SHUTOFF VALVES. CAREFULLY DECREASE ALL TRAPPED PRESSURES TO ZERO BEFORE PERFORMING MAINTENANCE.

WARNING

ELECTRICAL VOLTAGES UP TO 120 VAC MAY BE USED IN THIS EQUIPMENT. THEREFORE THE COVER ON THE UNIT'S POWER BOX (LOCATED BEHIND THE FRONT PANEL DOOR) MUST BE INSTALLED AT ALL TIMES, EXCEPT DURING MAINTENANCE AND SERVICING.

⚠️ WARNING ⚠️

A DOUBLE-POLE SWITCH MUST BE INSTALLED ON THE ELECTRICAL SUPPLY LINE OF THE UNIT. THE SWITCH MUST BE INSTALLED IN AN EASILY ACCESSIBLE POSITION TO QUICKLY AND SAFELY DISCONNECT ELECTRICAL SERVICE. DO NOT AFFIX SWITCH TO UNIT SHEET METAL ENCLOSURES.

⚠️ CAUTION ⚠️

Many soaps used for gas pipe leak testing are corrosive to metals. The piping must be rinsed thoroughly with clean water after leak checks have been completed.

⚠️ CAUTION ⚠️

DO NOT use this heater if any part has been under water. Call a qualified service technician to inspect and replace any part that has been under water.

1.2 EMERGENCY SHUTDOWN

If overheating occurs or the gas supply fails to shut off, close the manual gas shutoff valve (Figure 1-1) located external to the unit.

IMPORTANT

The Installer must identify and indicate the location of the emergency shutdown manual gas valve to operating personnel.

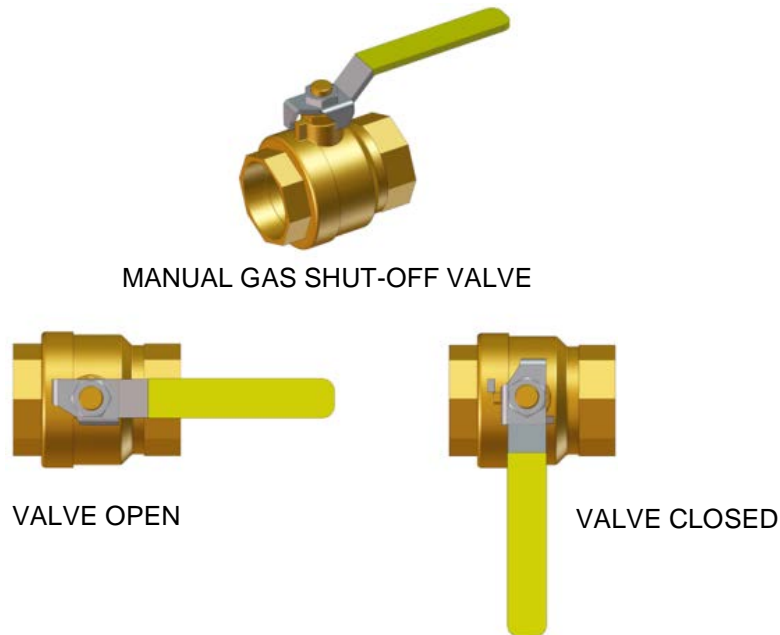


Figure 1-1. Manual Gas Shutoff Valve

1.3 PROLONGED SHUTDOWN

After prolonged shutdown, it is recommended that the startup procedures in Chapter 4 and the safety device test procedures in Chapter 6 of this manual be performed to verify all system-operating parameters. If there is an emergency, turn off the electrical power supply to the AERCO heater and close the manual gas valve located upstream of the unit. The installer must identify the emergency shut-off device.

IMPORTANT – FOR MASSACHUSETTS INSTALLATIONS

Water heater Installations within the Commonwealth of Massachusetts must conform to the following requirements:

- Heater must be installed by a plumber or a gas fitter who is licensed within the Commonwealth of Massachusetts.
- Prior to unit operation, the complete gas train and all connections must be leak tested using a non-corrosive soap.
- The vent termination must be located a minimum of 4 feet above grade level. If side-wall venting is used, the installation must conform to the following requirements **extracted from 248 CMR 5.08 (2)**:

(a) For all side wall horizontally vented gas fueled equipment installed in every dwelling, building or structure used in whole or in part for residential purposes, including those owned or operated by the Commonwealth and where the side wall exhaust vent termination is less than seven (7) feet above finished grade in the area of the venting, including but not limited to decks and porches, the following requirements shall be satisfied:

1. **INSTALLATION OF CARBON MONOXIDE DETECTORS.** At the time of installation of the side wall horizontal vented gas fueled equipment, the installing plumber or gasfitter shall observe that a hard wired carbon monoxide detector with an alarm and battery back-up is installed on the floor level where the gas equipment is to be installed. In addition, the installing plumber or gasfitter shall observe that a battery operated or hard wired carbon monoxide detector with an alarm is installed on each additional level of the dwelling, building or structure served by the side wall horizontal vented gas fueled equipment. It shall be the responsibility of the property owner to secure the services of qualified licensed professionals for the installation of hard wired carbon monoxide detectors.

a. In the event that the side wall horizontally vented gas fueled equipment is installed in a crawl space or an attic, the hard wired carbon monoxide detector with alarm and battery back-up may be installed on the next adjacent floor level.

b. In the event that the requirements of this subdivision cannot be met at the time of completion of installation, the owner shall have a period of thirty (30) days to comply with the above requirements; provided, however, that during said thirty (30) day period, a battery operated carbon monoxide detector with an alarm shall be installed.

2. **APPROVED CARBON MONOXIDE DETECTORS.** Each carbon monoxide detector as required in accordance with the above provisions shall comply with NFPA 720 and be ANSI/UL 2034 listed and IAS certified.

3. **SIGNAGE.** A metal or plastic identification plate shall be permanently mounted to the exterior of the building at a minimum height of eight (8) feet above grade directly in line with

Innovation Water Heaters Installation, Operation & Maintenance Manual

CHAPTER 1 – SAFETY PRECAUTIONS

the exhaust vent terminal for the horizontally vented gas fueled heating appliance or equipment. The sign shall read, in print size no less than one-half (1/2) inch in size, "**GAS VENT DIRECTLY BELOW. KEEP CLEAR OF ALL OBSTRUCTIONS**".

4. INSPECTION. The state or local gas inspector of the side wall horizontally vented gas fueled equipment shall not approve the installation unless, upon inspection, the inspector observes carbon monoxide detectors and signage installed in accordance with the provisions of 248 CMR 5.08(2)(a)1 through 4.

(b) EXEMPTIONS: The following equipment is exempt from 248 CMR 5.08(2)(a)1 through 4:

1. The equipment listed in Chapter 10 entitled "Equipment Not Required To Be Vented" in the most current edition of NFPA 54 as adopted by the Board; and
2. Product Approved side wall horizontally vented gas fueled equipment installed in a room or structure separate from the dwelling, building or structure used in whole or in part for residential purposes.

(c) MANUFACTURER REQUIREMENTS - GAS EQUIPMENT VENTING SYSTEM PROVIDED. When the manufacturer of Product Approved side wall horizontally vented gas equipment provides a venting system design or venting system components with the equipment, the instructions provided by the manufacturer for installation of the equipment and the venting system shall include:

1. Detailed instructions for the installation of the venting system design or the venting system components; and
2. A complete parts list for the venting system design or venting system.

(d) MANUFACTURER REQUIREMENTS - GAS EQUIPMENT VENTING SYSTEM NOT PROVIDED. When the manufacturer of a Product Approved side wall horizontally vented gas fueled equipment does not provide the parts for venting the flue gases, but identifies "special venting systems", the following requirements shall be satisfied by the manufacturer:

1. The referenced "special venting system" instructions shall be included with the appliance or equipment installation instructions; and
2. The "special venting systems" shall be Product Approved by the Board, and the instructions for that system shall include a parts list and detailed installation instructions.

(e) A copy of all installation instructions for all Product Approved side wall horizontally vented gas fueled equipment, all venting instructions, all parts lists for venting instructions, and/or all venting design instructions shall remain with the appliance or equipment at the completion of the installation.

[End of Extracted Information From 248 CMR 5.08 (2)]

CHAPTER 2. INSTALLATION

2.1 INTRODUCTION

This Chapter provides the descriptions and procedures necessary to unpack, inspect and install AERCO Innovation Water Heater Models INN600, INN800, INN1060 and INN1350.

2.2 RECEIVING THE UNIT

Each Innovation Water Heating System is shipped as a single crated unit. The shipping weight is approximately 1200 pounds. The unit must be moved with the proper rigging equipment for safety and to avoid equipment damage. The unit should be completely inspected for evidence of shipping damage and shipment completeness at the time of receipt from the carrier and before the bill of lading is signed.

NOTE

AERCO is not responsible for lost or damaged freight. Each unit has a Tip-N-Tell indicator on the outside of the crate. This indicates if the unit has been turned on its side during shipment. If the Tip-N-Tell indicator is tripped, do not sign for the shipment. Note the information on the carrier's paperwork and request a freight claim and inspection by a claims adjuster before proceeding. Any other visual damage to the packaging materials should also be made clear to the delivering carrier.

2.3 UNPACKING

Carefully unpack the unit taking care not to damage the unit enclosure when cutting away packaging materials

After unpacking, closely inspect the unit to make sure there is no evidence of damage not indicated by the Tip-N-Tell indicator. Notify the freight carrier immediately if any damage is detected.

The following accessories come standard with each unit and are either packed separately within the unit's shipping container or are factory installed on the unit:

- Pressure/Temperature Gauge
- ASME Pressure Relief Valve
- Condensate Drain Trap

If the Innovation Water Heater is equipped for use with the AERCO Water Heater Management (WHM) system, an actuator-controlled ball valve will also be included with the unit.

When optional accessories are ordered, they may be packed within the unit's shipping container, factory installed on the unit, or packed and shipped in a separate container. Any standard or optional accessories shipped loose should be identified and stored in a safe place until ready for installation or use.

2.4 SITE PREPARATION

Ensure that the site selected for installation of the Innovation Water Heater includes:

- Access to AC Input Power at 120 VAC, Single-Phase, 60 Hz @ 20 Amps.
- Access to Natural Gas line at a minimum pressure of 4 inches W.C. or to Propane at a minimum pressure of 7 inches W.C. with the **unit operating at maximum capacity**.

2.4.1 Installation Clearances

All Innovation Models are packaged in enclosures having identical exterior dimensions. The unit must be installed with the prescribed clearances for service as shown in Figure 2-1 (shown with optional Sequencing Valve). The minimum clearance dimensions, required by AERCO, are listed below. However, if Local Building Codes require additional clearances, these codes shall supersede AERCO's requirements. Minimum acceptable clearances required are as follows:

- Sides: 24 inches
- Front : 24 inches
- Rear: 30 inches
- Top: 18 inches

All gas piping, water piping and electrical conduit or cable must be arranged so that they do not interfere with the removal of any panels, or inhibit service or maintenance of the unit.

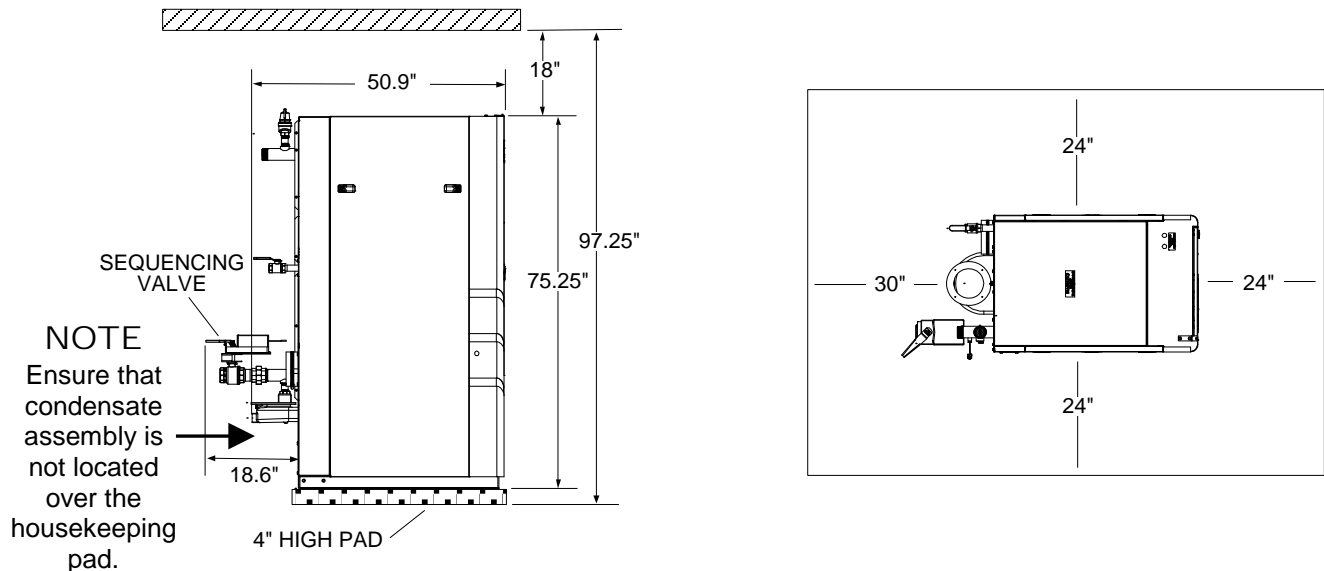


Figure 2-1. Innovation Water Heater Clearances

⚠ **WARNING** ⚠

KEEP THE UNIT AREA CLEAR AND FREE FROM ALL COMBUSTIBLE MATERIALS AND FLAMMABLE VAPORS OR LIQUIDS.

⚠ **CAUTION** ⚠

While packaged in the shipping container, the unit must be moved by pallet jack or forklift from the **FRONT ONLY**.

FOR MASSACHUSETTS ONLY

For Massachusetts installations, the unit must be installed by a plumber or gas-fitter who is licensed within the Commonwealth of Massachusetts. In addition, the installation must comply with all requirements specified in Chapter 1 (Safety Precautions), pages 13 and 14.

2.4.2 Setting the Unit

The unit must be installed on a 4 inch to 6 inch housekeeping pad to ensure proper condensate drainage. Two lifting lugs are provided with the unit and are wire-tied to the top of the heat exchanger. The top sheet metal cover of the unit must first be removed and the lifting lugs must be installed as shown in Figure 2-2. **USE THESE TWO LUGS TO LIFT AND MOVE THE UNIT.** Remove the top panel from the unit to provide access to the lifting lugs. Remove the four (4) lag screws securing the unit to the shipping skid. Lift the unit off the shipping skid and position it on the 4 inch to 6 inch housekeeping concrete pad (required) in the desired location.

In multiple unit installations, it is important to plan the position of each unit in advance. Sufficient space for piping connections and future service/maintenance requirements must also be taken into consideration. All piping must include ample provisions for expansion.

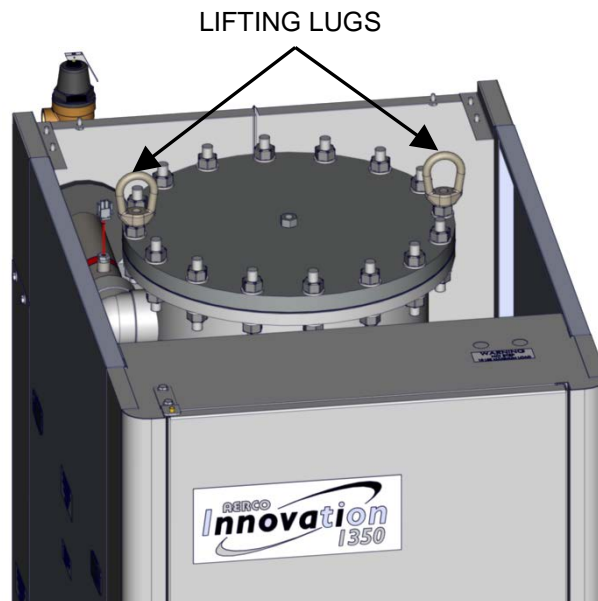


Figure 2-2. Partial Top View Showing Installed Lifting Lugs

IMPORTANT

If the Innovation Water Heater is equipped for use with the C-More Water Heater Management (WHM) system, then an actuator-controlled ball valve will be included with the shipment. If the valve is not already installed on the water inlet of the unit, refer to section 2.5.1 for installation instructions prior to connecting inlet piping.

2.5 WATER INLET AND OUTLET PIPING

The locations of the 2" NPT cold water inlet and hot water outlet piping connections are shown in Figure 2-3a. Flow rates through the unit are limited to 50 gpm continuous and 75 gpm intermittent.

Shut-off valves and union connections must be installed in the inlet and outlet lines for maintenance. The use of dielectric unions is recommended.

NOTE

All piping must be arranged so that it does not interfere with removal of any covers, inhibit service or maintenance, or prevent access between the unit and walls, or another unit.

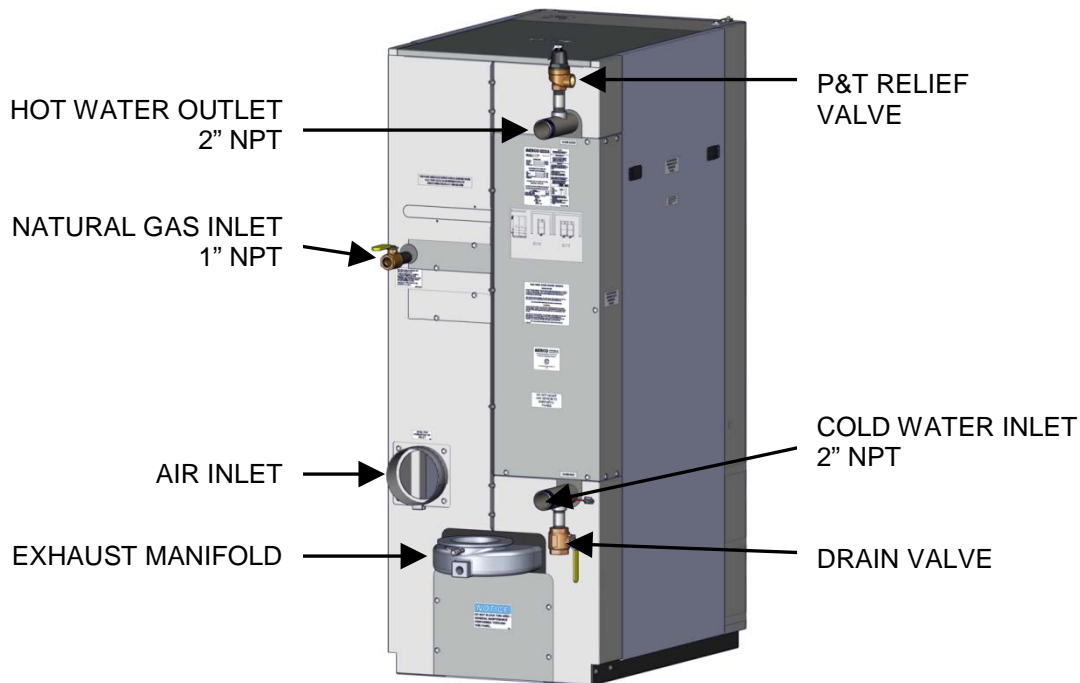


Figure 2-3a. Water Inlet & Outlet Locations

2.5.1 WHM Actuator-Controlled Ball Valve Installation

If the Innovation Water Heater was ordered for use with the C-More Water Heater Management (WHM) system and the actuator-controlled ball valve is not already installed on the unit (Figure 2-3b), it will be packed separately within the shipping container. If installation is required, proceed as follows:

WHM Ball Valve Installation

1. Remove the ball valve from its stowed location within the shipping container.
2. Attached the valve to the cold water inlet of the unit using the pipe union and nipple provided.

WHM Ball Valve Installation – Continued

3. Ensure that the valve is positioned with the actuator enclosure position as shown in Figure 2-3A.
4. AERCO recommends that another pipe nipple and union be attached to the valve inlet prior to connecting the cold water supply piping.
5. Tighten all pipe connections after the valve is properly positioned.
6. Connect the 3-pin Molex connector on the valve to the mating connector on the Innovation harness at the rear of the unit.
7. This completes the actuator-controlled ball valve installation.

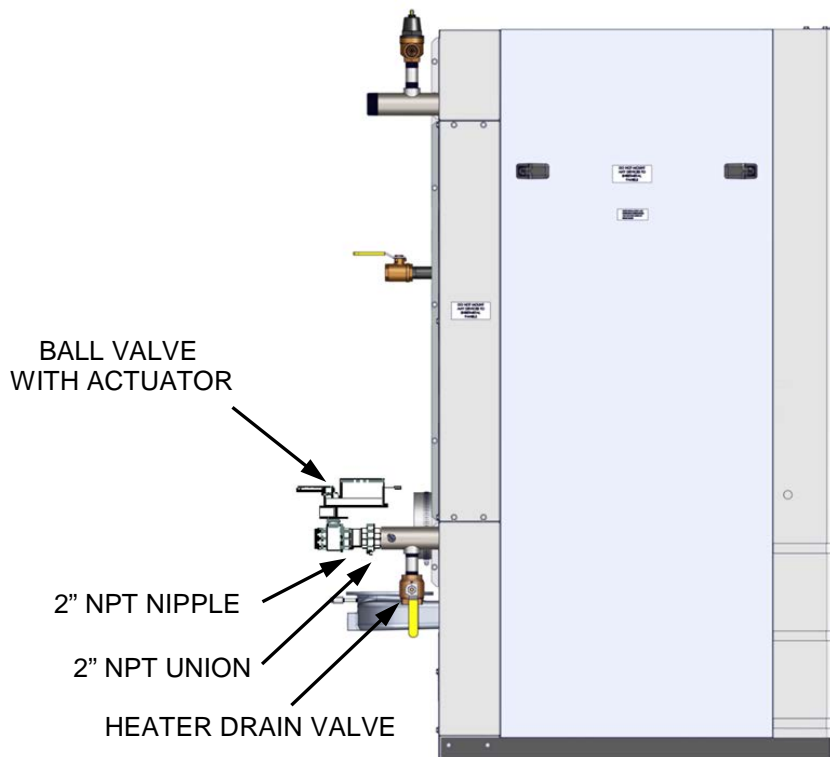


Figure 2-3b. Innovation Water Heater Equipped With Sequencing Valve

2.6 TEST HOSE BIB CONNECTION

A Test Hose Bib connection, upstream of the shut off valve on the hot water outlet, is required for startup and testing (Figure 2-4). The pipe diameter should be a minimum of 3/4". The Test Hose Bib **cannot be omitted**.


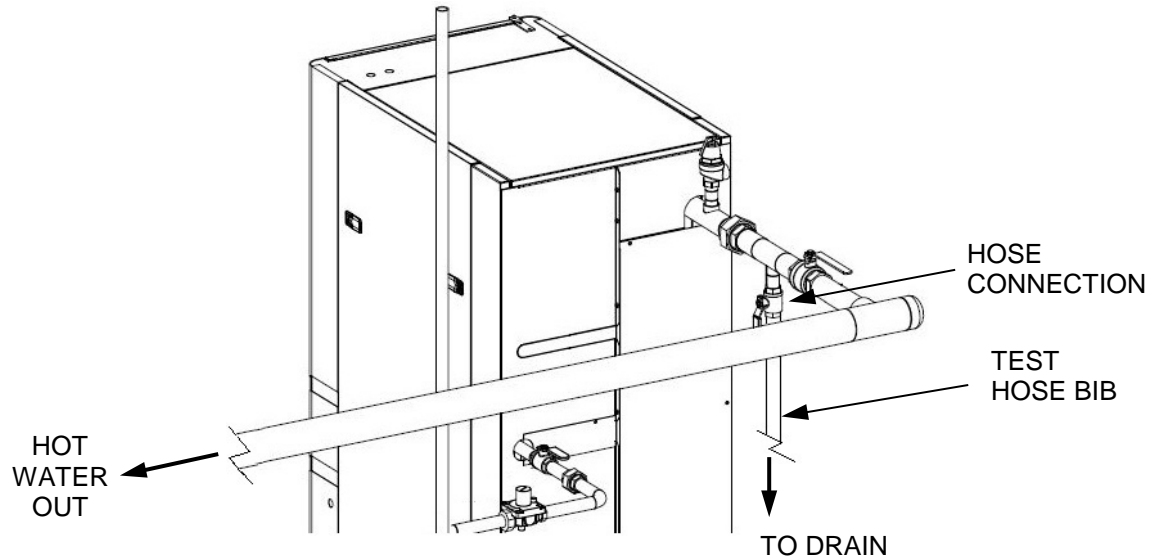


Figure 2-4. Test Hose Bib Location

2.7 SYSTEM RECIRCULATION LOOP

The System Recirculation Loop Assembly is located inside the unit enclosure at the rear of the unit. In order to access this assembly, the right rear middle panel must be removed. Refer to Figure 2-5. This assembly contains a recirculation pump that connects the upper hot water outlet to the lower cold water inlet of the unit's heat exchanger. The purpose of this loop is to provide feed-forward (FFWD) temperature control by mixing a portion of the hot water outlet with the cold water inlet of the unit. Temperature sensors located in the hot water outlet and cold water inlet provide temperature data to the C-More Control System. The Control System utilizes this data to modulate the fire rate (Air/Fuel Valve position) to precisely maintain the hot water outlet temperature at the selected setpoint temperature.

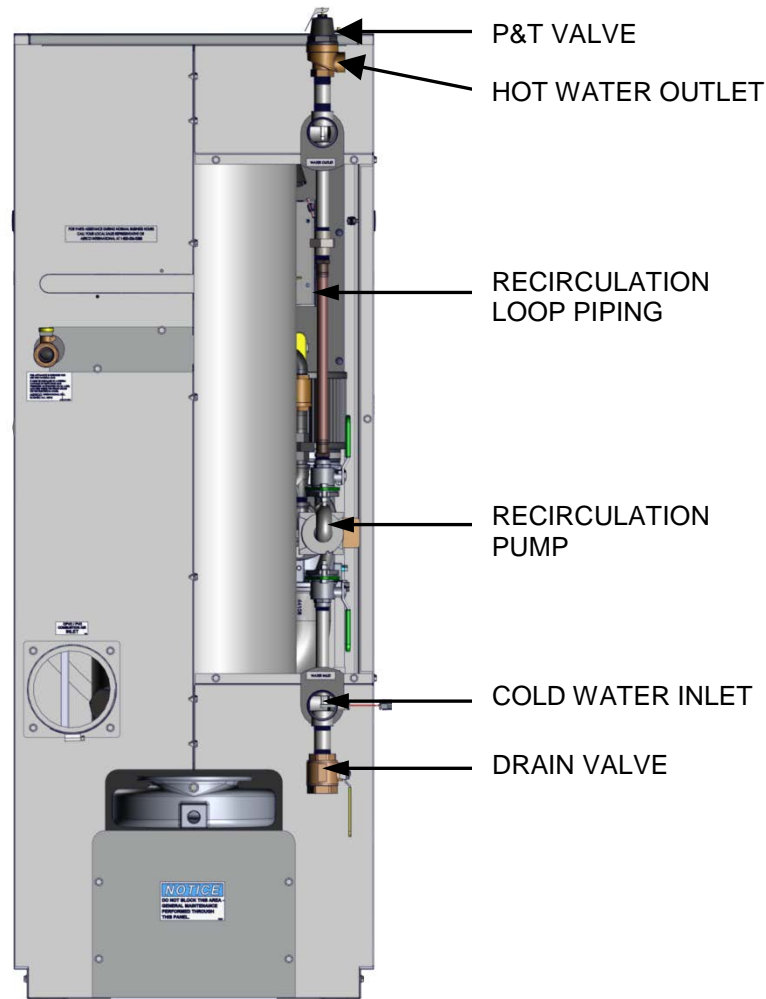

REAR VIEW WITH CENTER PANEL REMOVED

Figure 2-5. Recirculation Loop

NOTE

The maximum working pressure for installations within the Province of Alberta is 87 psig. Therefore, a pressure & temperature relief valve with a setting of 75 psig/210°F is supplied with Alberta shipments.

2.8 PRESSURE & TEMPERATURE RELIEF VALVE INSTALLATION


An ASME rated Pressure & Temperature (P&T) Relief Valve is factory installed on each Innovation water heater on the hot water outlet at the top of the Recirculation Loop Assembly as shown in Figure 2-5. With the exception of Alberta installations (see above Note), the valve setpoint is 150 psig/210°F.

A suitable pipe joint compound should be used on the threaded connections. Any excess should be wiped off to avoid getting any into the valve body. The relief valve should be piped to within 12 inches of the floor to prevent injury in the event of a discharge. The relief outlet piping must be equal to the outlet size of the relief valve without reduction. No valves, restrictions, or other blockages are allowed in the discharge line. In multiple unit installations the discharge lines must not be manifolded together. Each must be individually run to a suitable discharge location.

2.9 CONDENSATE DRAIN & PIPING

The Innovation Water Heater is designed to condense water vapor from the flue products. Therefore, the installation must have provisions for suitable condensate drainage or collection.

The condensate drain port is located on the exhaust manifold at the rear of the unit (Figure 2-6). This drain port must be connected to the Condensate Trap (part no. 24060) which is ordered separately and packed within the unit's shipping container. The Condensate Trap inlet and outlet connections contain tapped 3/4" NPT ports.

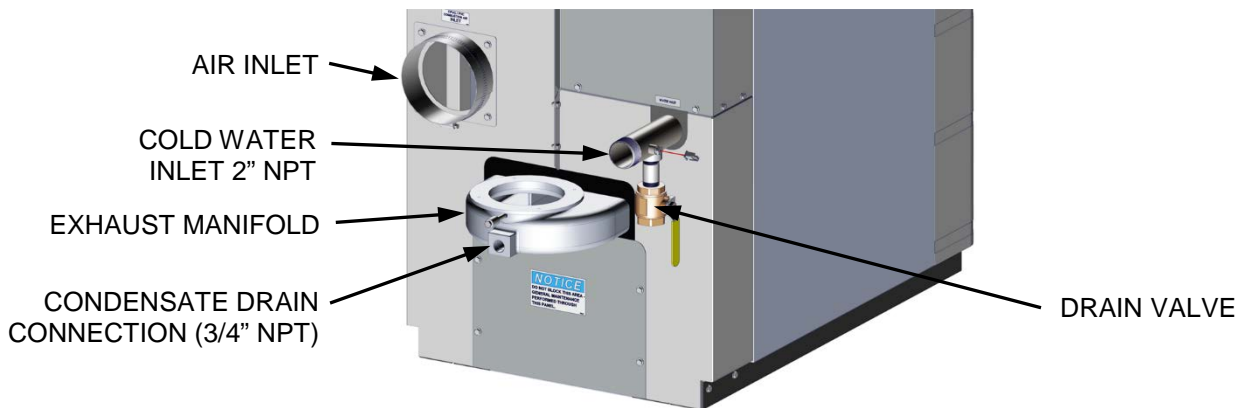

PARTIAL REAR VIEW

Figure 2-6. Condensate Drain Connection Location

A sample Condensate Trap installation is shown in Figure 2-7. However, the actual installation details for the trap will vary depending on the available clearances, housekeeping pad height/ dimensions and other prevailing conditions at the site. The following general guidelines must be observed to ensure proper condensate drainage:

- The condensate trap inlet (Figure 2-7) must be level with, or lower than the exhaust manifold drain port.
- The base of the condensate trap must be supported to ensure that it is level (horizontal).
- The trap must be removable for routine maintenance. AERCO recommends that a union be utilized between the exhaust manifold condensate drain port and the trap inlet port.

While observing the above guidelines, install the condensate trap as follows:

Condensate Trap Installation

1. Connect the condensate trap inlet to the exhaust manifold drain connection using the appropriate piping components (nipples, reducers, elbows, etc.) for the heater installation site
2. At the condensate trap outlet, install a 3/4" NPT nipple.
3. Connect a length of 1" I.D. polypropylene hose to the trap outlet and secure with a hose clamp.
4. Route the hose on the trap outlet to a nearby floor drain.


If a floor drain is not available, a condensate pump can be used to remove the condensate to drain. The maximum condensate flow rate is 20 GPH. The condensate drain trap, associated fittings and drain line must be removable for routine maintenance.

⚠ CAUTION ⚠

Use PVC, stainless steel, aluminum or polypropylene for condensate drain piping (Figure 2-7). DO NOT use carbon or copper components.

NOTE

Two different styles of condensate traps are currently in use. The functions and connections provided are nearly identical however they look slightly different.

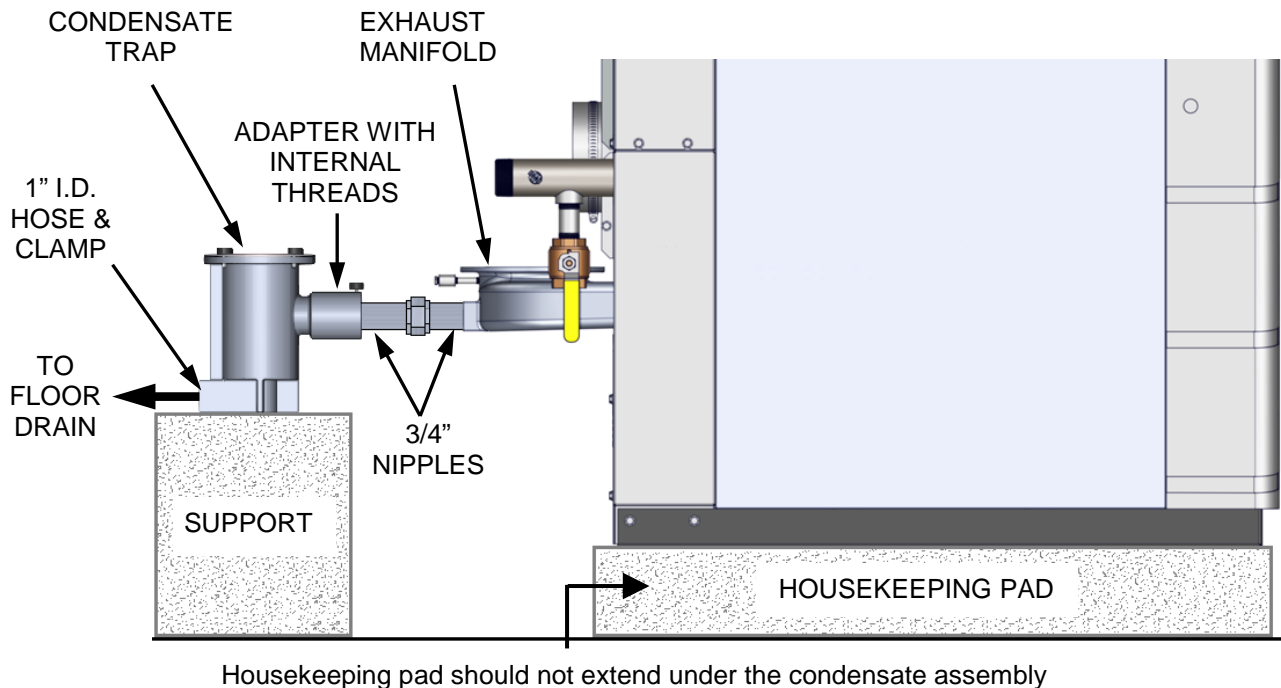

Housekeeping pad should not extend under the condensate assembly

LEFT SIDE VIEW

Figure 2-7. Sample Condensate Trap Installation

NOTE

As a general guideline, AERCO recommends use of its Neutralizer Kit to raise the pH level of the condensate prior to drainage. At a minimum, the installation must be designed in accordance with local codes that specify acceptable pH limits.

2.10 GAS SUPPLY PIPING

The AERCO Innovation Gas Components and Supply Design Guide, GF-5030 must be consulted prior to designing or installing any gas supply piping.

WARNING

NEVER USE MATCHES, CANDLES, FLAMES OR OTHER SOURCES OF IGNITION TO CHECK FOR GAS LEAKS.

CAUTION

Many soaps used for gas pipe leak testing are corrosive to metals. Therefore, piping must be rinsed thoroughly with clean water after leak checks have been completed.

NOTE

All gas piping must be arranged so that it does not interfere with removal of any covers, inhibit service/maintenance, or restrict access between the unit and walls, or another unit.

Innovation units contain a 1 inch NPT gas inlet connection on the rear of the unit as shown in Figure 2-3.

Prior to installation, all pipes should be de-burred and internally cleared of any scale, metal chips or other foreign particles. Do Not install any flexible connectors or unapproved gas fittings. Piping must be supported from the floor, ceiling or walls only and must not be supported by the unit.

A suitable piping compound, approved for use with natural gas, should be used. Any excess must be wiped off to prevent clogging of components.

To avoid unit damage when pressure testing gas piping, isolate the unit from the gas supply piping. At no time should the gas pressure applied to the unit exceed 14" W.C.. Leak test all external piping thoroughly using a soap and water solution or suitable equivalent. The gas piping used must meet all applicable codes.

2.10.1 Gas Supply Specifications.

The gas supply input specifications to the unit for Natural Gas are as follows:

- The maximum static pressure to the unit must not exceed 14" W.C.
- The gas supply pressure to the unit must be of sufficient capacity to provide 1060 cfh while maintaining the gas pressure of 7" W.C. for FM gas trains **operating at maximum capacity**.

2.10.2 Manual Gas Shutoff Valve

A manual shut-off valve is factory-installed in the gas supply line at the unit, as shown in Figure 2-3a. Additionally, if a gas regulator is installed upstream of the unit, refer to Figure 2-8 to determine the location of the manual shut-off valve installation in relation to the regulator. The maximum allowable gas pressure to the Heater is 14" W.C.

2.10.3 External Gas Supply Regulator

An external gas pressure regulator is required on the gas inlet piping under most conditions (see sections 2.10.3.1 and 2.10.3.2, below). Regulators must conform to the following specifications:

- The external natural gas regulator must be capable of regulating 200,000 – 3,180,000 BTU/HR of natural gas while maintaining a gas pressure of 8.0" W.C. minimum to the unit.
- A lock-up style regulator **MUST** be used when gas supply pressure will exceed 14" W.C.

2.10.3.1 Massachusetts Installations Only

For Massachusetts installations, a mandatory external gas supply regulator must be positioned as shown in Figure 2-8. The gas supply regulator must be properly vented to outdoors. Consult the local gas utility for detailed requirements concerning venting of the supply gas regulator.

2.10.3.2 All Installations (Except Massachusetts)

For all installations (other than Massachusetts) that EXCEED 7" W.C. gas pressure, a mandatory external gas supply regulator must be positioned as shown in Figure 2-8. No regulator is required for gas pressures below 7" W.C. of pressure. Consult the local gas utility for detailed requirements concerning venting of the supply gas regulator.

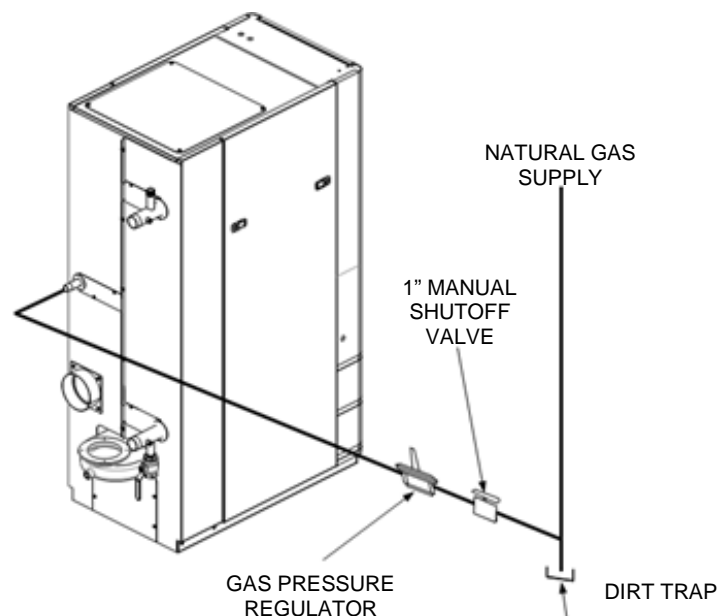


Figure 2-8. Manual Gas Shut-Off Valve Location

NOTE

It is the responsibility of the customer to source and purchase the appropriate gas regulator as described above. However, AERCO offers for sale an appropriate regulator, which may be ordered at the time of unit purchase or separately. Contact AERCO for more information.

2.11 AC ELECTRICAL POWER WIRING

The AERCO Innovation Electrical Power Wiring Guide, GF-5060, must be consulted prior to connecting any AC power wiring to the unit. External AC power connections are made to the unit inside the Power Box on the front of the unit. Remove the front door of the unit to access the Power Box mounted directly above the Control Box. Loosen the four Power Box cover screws and remove the cover to access the AC terminal connections inside the Power Box (Figure 2-9).

NOTE

All electrical conduit and hardware must be installed so that it does not interfere with the removal of any unit covers, inhibit service/maintenance, or prevent access between the unit and walls or another unit.

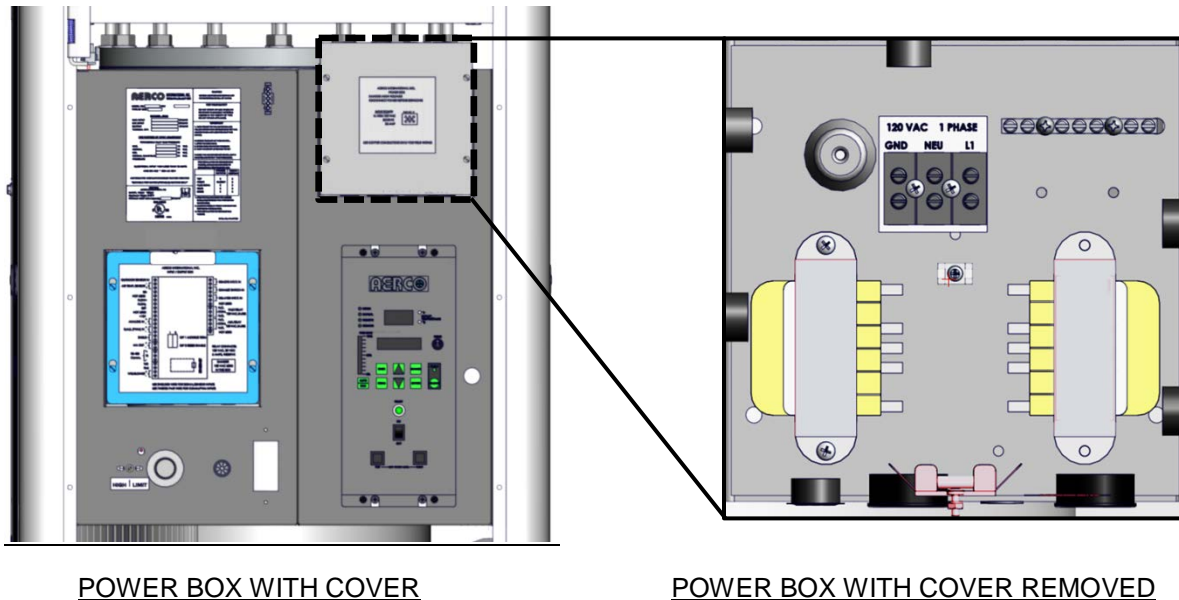


Figure 2-9. Power Box Location – Partial Front View, Front Panel Removed

2.11.1 Electrical Power Requirements

The AERCO Innovation Heater accepts 120 VAC, single-phase, 60 Hz @ 20A. The Power Box contains a terminal block as shown in Figure 2-10. In addition, a wiring diagram showing the required AC power connections is provided on the front cover of the Power Box.

Each unit must be connected to a dedicated electrical circuit. **NO OTHER DEVICES SHOULD BE ON THE SAME ELECTRICAL CIRCUIT AS THE HEATER.**

Innovation Water Heaters Installation, Operation & Maintenance Manual

CHAPTER 2 – INSTALLATION

A double-pole switch must be installed on the electrical supply line in an easily accessible location to quickly and safely disconnect electrical service. DO NOT attach the switch to sheet metal enclosures of the unit.

After placing the unit in service, the ignition safety shutoff device must be tested. If an external electrical power source is used, the installed boiler must be electrically bonded to ground in accordance with the requirements of the authority having jurisdiction. In the absence of such requirements, the installation shall conform to National Electrical Code (NEC), ANSI/NFPA 70 and/or the Canadian Electrical Code (CEC) Part I, CSA C22.1 Electrical Code.

For electrical power wiring diagrams, see the AERCO Innovation Electrical Power Wiring Guide, (GF-5060).



Figure 2-10. AC Terminal Block Configurations

2.12 FIELD CONTROL WIRING

Each unit is fully wired from the factory with an internal operating control system. No field control wiring is required for normal operation. However, the C-More control system used with all Innovation Heaters does allow for some control and monitoring features. Wiring connections for these features are made in the Input/Output (I/O) Box. The I/O Box is located on the upper-left portion of the unit front panel (Figure 2-11) behind the removable front panel door. To access the I/O Box terminal strips shown in Figure 2-11, loosen the four cover screws and remove the cover. All field wiring is installed from the rear of the panel by routing the wires through one of the four bushings provided.

Refer to the wiring diagram provided on the cover of the I/O Box (Figure 2-12) when making all wiring connections.

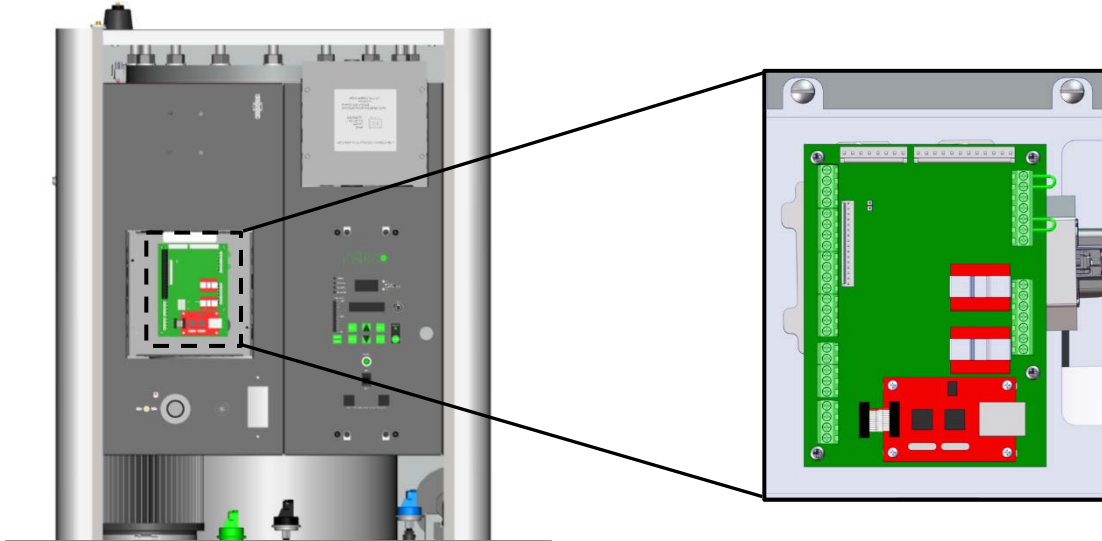


Figure 2-11. Input/Output (I/O) Box Location – Partial Front View

Since identical I/O Boxes are used with both AERCO gas-fired boilers and water heaters, some of the input and output connections apply only to boilers while others are common to both boilers and heaters. These I/O Box connections are noted in the sections below.

NOTE

Use Figure 2-12 to determine the functions of the I/O PCB connections. Do not use the silkscreened labels on the PCB itself, as these may not match.

⚠ CAUTION ⚠

DO NOT make any connections to the I/O Box terminals labeled “NOT USED”. Attempting to do so may cause equipment damage.

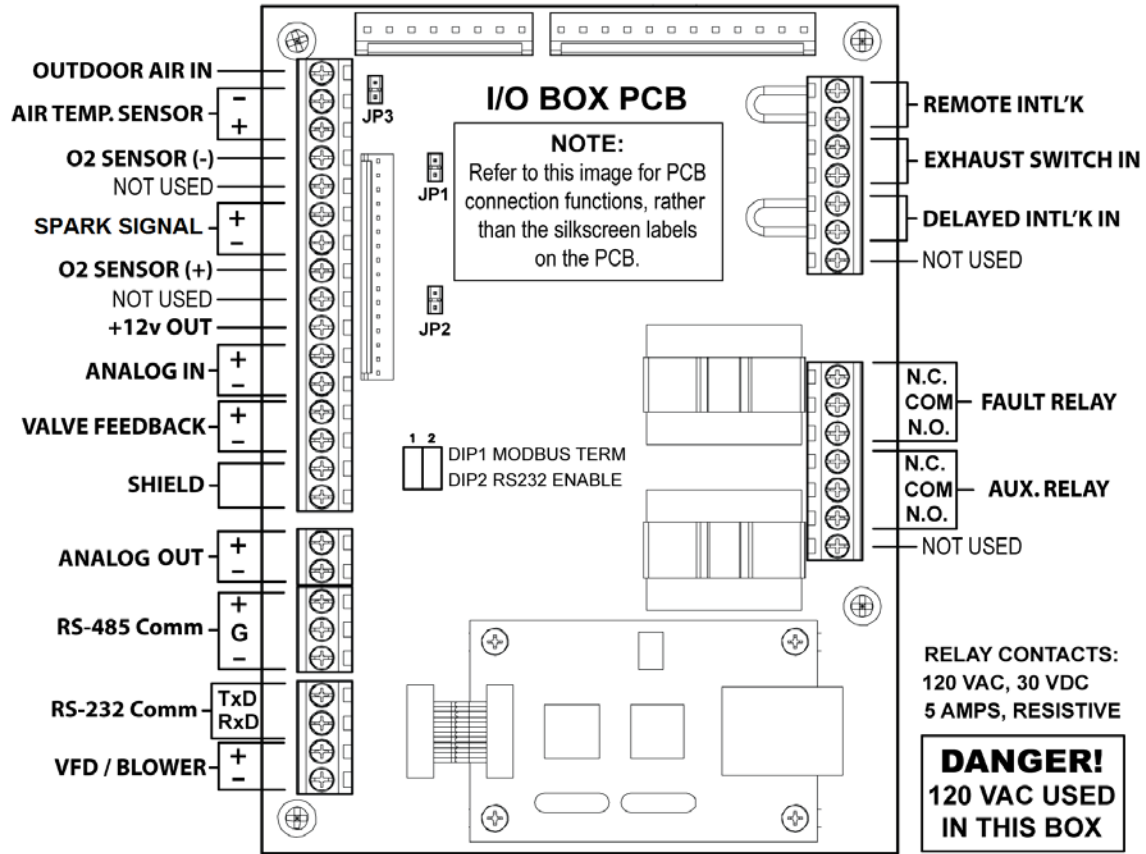


Figure 2-12. I/O Box Terminal Strips

2.12.1 OUTDOOR AIR IN Terminal

The OUTDOOR AIR IN and AIR SENSOR COMMON terminals are not applicable to this unit.

2.12.2 COMBUSTION AIR Terminals

The COMBUSTION AIR and AIR SENSOR COMMON terminals are not applicable to this unit.

2.12.3 O2 SENSOR Terminals

The O2 SENSOR (-) and O2 SENSOR (+) terminals are not currently used in this unit.

2.12.4 SPARK SIGNAL Terminals

The SPARK SIGNAL terminals (+ & -) permit an external current sensor to be connected for ignition spark monitoring purposes. If no spark is present during the ignition sequence, the controller will abort the ignition cycle. The controller will attempt up to three ignition cycles. If no spark is present by the third try, the controller will shut down and display a fault message.

2.12.5 ANALOG IN Terminals

The ANALOG IN terminals (+ & -) are used when an external signal is used to change the setpoint (Remote Setpoint Mode) of the heater.

Either a 4 to 20 mA / 1 to 5 VDC or a 0 to 20 mA / 0 to 5 VDC signal may be used to vary the setpoint or air/fuel valve position. The factory default setting is for 4 to 20 mA / 1 to 5 VDC,

however this may be changed to 0 to 20 mA / 0 to 5 VDC using the Configuration Menu described in Chapter 3.

If voltage rather than current is selected as the drive signal, a DIP switch must be set on the PMC Board located inside the C-More Control Box. Refer to Appendix D in C-More Manual GF-112 for information on setting DIP switches.

All supplied signals must be floating (ungrounded) signals. Connections between the source and the Heater's I/O Box must be made using twisted shielded pair of 18–22 AWG wire such as Belden 9841. Polarity must be maintained and the shield must be connected only at the source end and must be left floating (not connected) at the Heater's I/O Box.

Whether using voltage or current for the drive signal, they are linearly mapped to a 40°F to 240°F setpoint or a 0% to 100% air/fuel valve position. No scaling for these signals is provided

2.12.6 VALVE FEEDBACK Terminals

The Valve Feedback terminals are used when the Sequencing Isolation Valve Feedback option is selected. The Valve Feedback signal is connected to the "Valve Fdbk" terminals and is used to confirm that the valve has properly opened or closed. If the Valve Feedback signal does not match the Valve-Open or Valve-Close command for the time defined in the "Valve Fdbk timer" entry, the controller will proceed as follows:

- (a) If the valve fails with the Valve Stuck Open fault, the "Valve Stuck Open" message will be displayed and the unit will remain active.
- (b) If the valve fails with the Valve Stuck Closed fault, the "Valve Stuck Closed" message will be displayed and the unit will shut down.

NOTE! If the Valve Feedback option is used, Shorting Jumper #JP2 on the I/O Board Must be inserted.

2.12.7 SHIELD Terminals

The two SHIELD terminals are used to terminate any shields used on sensor wires connected to the unit. Only shields must be connected to these terminals.

2.12.8 ANALOG OUT Terminals

The ANALOG OUT terminals (+ & -) output from 0 to 20 mA and may be used to monitor Setpoint, Outlet Temperature, Valve Position 4-20 mA, Valve Position 0-10v or be set to OFF. Default setting in the C-More controller is Valve Position 0-10v and settings behave as follows:

1. When 0-10VDC is selected, the voltage output is used by the controller to modulate the combustion blower via the I/O Box terminals labeled VFD/Blower (Section 2.10.11).
2. If On Board Boiler Sequencing Technology (BST) is enabled, the Analog Output terminals are used to drive the sequencing isolation valve open and closed.

NOTE

When driving an isolation valve, shorting jumper #JP2 *MUST* be installed on the I/O Board.

3. When the 4-20mA is selected for the Analog Output, the 0-10VDC is disabled at the VFD/Blower terminals, and the selected output is available at the terminals labeled Analog Output +/-.

2.12.9 RS485 Comm Terminals

The RS485 communication terminals (+, GND, & -) are used when the Innovation Water Heaters are being controlled by an Energy Management System (EMS) or the C-More Water Heater Management (WHM) system using Modbus (RS485) communication. The WHM software required to control up to 8 AERCO Innovation Water Heaters is included in the C-More Control System used with each Innovation unit.

2.12.10 RS232 Comm Terminals

The RS232 communication terminals (TxD, RxD) are enabled by setting DIP switch 2 (DIP2) on the I/O Board to RS232 ENABLE position. When enabled these RS232 terminals permit a laptop computer or other suitable terminal to be connected to the unit. This RS232 communication feature permits viewing or changing of control panel menu options. In addition, it provides access to data logs showing: Event Time Line, Fault Log and Sensor Log displays.

2.12.11 VFD/BLOWER Terminals

These terminals (0-10 & AGND) send an analog signal to control the blower speed. When any of the 4-20mA options is selected for the Analog Outputs (Section 2.12.8), the output from the VFD/Blower terminals is disabled.

2.12.12 Interlock Terminals

The unit offers two interlock circuits for interfacing with Energy Management Systems and auxiliary equipment such as pumps or louvers or other accessories. These interlocks are called the Remote Interlock and Delayed Interlock (REMOTE INTL'K IN and DELAYED INTL'K IN in Figure 2-12). Both interlocks, described below, are factory wired in the closed position.

NOTE

Both the Remote Interlock and Delayed Interlock must be in the closed position for the unit to fire.

2.12.12.1 REMOTE INTL'K Terminals

The remote interlock circuit is provided to remotely start (enable) and stop (disable) the unit if desired. The circuit is 24 VAC and comes factory pre-wired closed (jumped).

2.12.12.2 DELAYED INTL'K Terminals

The delayed interlock is typically used in conjunction with the Auxiliary Relay Contacts described in section 2.12.14. This interlock circuit is located in the purge section of the start string. It can be connected to the proving device (end switch, flow switch etc.) of an auxiliary piece of equipment started by the unit's auxiliary relay. The delayed interlock must be closed for the heater to fire. If the delayed interlock is connected to a proving device that requires time to close (make), a time delay (Aux Start On Dly) that holds the start sequence of the unit long enough for a proving switch to make (close) can be programmed.

Should the proving switch not prove within the programmed time frame, the unit will shut down. The Aux Start On Dly can be programmed from 0 to 120 seconds. This option is located in the Configuration Menu (Chapter 3).

2.12.13 FAULT RELAY Terminals

The fault relay is a single pole double throw (SPDT) relay having a normally open and normally closed set of relay contacts that are rated for 5 amps at 120 VAC and 5 amps at 30 VDC. The relay energizes when any fault condition occurs and remains energized until the fault is cleared and the **CLEAR** button is depressed. The Fault Relay connections are shown in Figure 2-12.

2.12.14 AUX RELAY Terminals

Each unit is equipped with a single pole double throw (SPDT) auxiliary relay that is energized when there is a demand for heat and de-energized after the demand for heat is satisfied. The relay is provided for the control of auxiliary equipment, such as pumps and louvers, or can be used as a unit status indicator (firing or not firing). Its contacts are rated for 120 VAC @ 5 amps. Refer to Figure 2-12 to locate the AUX RELAY terminals (N.C., COM, & N.O.) for wiring connections.

2.13 FLUE GAS VENT INSTALLATION

AERCO Gas Fired Venting and Combustion Air Guide, GF-5050 must be consulted before any flue or combustion air venting is designed or installed. Suitable, U/L approved, positive pressure, watertight vent materials **MUST** be used for safety and UL certification. Because the unit is capable of discharging low temperature exhaust gases, the flue must be pitched back towards the unit a minimum of 1/4" per foot to avoid any condensate pooling and to allow for proper drainage.

While there is a positive flue pressure during operation, the combined pressure drop of vent and combustion air systems must not exceed 140 equivalent feet of 1.9" W.C. Fittings as well as pipe lengths must be calculated as part of the equivalent length. For a natural draft installation the draft must not exceed - 0.10" W.C. These factors must be planned into the vent installation. If the maximum allowable equivalent lengths of piping are exceeded, the unit will not operate properly or reliably.

For Massachusetts installations, the following companies provide vent systems which conform to all applicable requirements for installations within the Commonwealth of Massachusetts. Contact information is as follows:

Selkirk Corporation - Heatfab Division

130 Industrial Blvd.
Turners Falls, MA 01376
Phone: 1-800-772-0739
www.heat-fab.com

Watertown Supply

33Grove St.
Watertown, MA 02472
Phone: (617) 924-2840
<http://www.watertownsupply.com/>

M. A. Peacard

1250 Massachusetts Ave.
Boston MA 02125-1689
Phone: (617) 288-0629
www.mapeacard.com

Glover Sheet Metal, Inc.

44 Riverdale Ave.
Newton, MA 02485
Phone: (617) 527-8178
www.gloversheetmetal.com

2.14 COMBUSTION AIR

The AERCO Gas-Fired Heater Venting and Combustion Air Guide, GF-5050 MUST be consulted before any flue or inlet air venting is designed or installed. Air supply is a direct requirement of ANSI 223.1, NFPA-54, CSA B149.1 and local codes. These codes should be consulted before a permanent design is determined.

The combustion air must be free of chlorine, halogenated hydrocarbons or other chemicals that can become hazardous when used in gas-fired equipment. Common sources of these compounds are swimming pools, degreasing compounds, plastic processing, and refrigerants. Whenever the environment contains these types of chemicals, combustion air MUST be supplied from a clean area outdoors for the protection and longevity of the equipment and warranty validation.

The more common methods of combustion air supply are outlined in the following sections. For combustion air supply from ducting, consult the AERCO GF-5050, Gas Fired Venting and Combustion Air Guide.

2.14.1 Combustion From Outside the Building

Air supplied from outside the building must be provided through two permanent openings. For each unit these two openings must have a free area of not less than one square inch for each 4000 BTUs input of the equipment or 250 square inches of free area. The free area must take into account restrictions such as louvers and bird screens. For Canada installations, refer to the requirements specified in CSA B149.1-10, 8.4.1 and 8.4.3.

2.14.2 Combustion Air from Inside the Building

When combustion air is provided from within the building, it must be supplied through two permanent openings in an interior wall. Each opening must have a free area of not less than one square inch per 1000 BTUH of total input or 1000 square inches of free area. The free area must take into account any restrictions, such as louvers.

2.15 DUCTED COMBUSTION

The AERCO Innovation Water Heater is UL listed for 100%-ducted combustion. For ducted combustion installations, the screen inlet air ductwork must then be attached directly to the unit's air inlet.

In a ducted combustion air application, the combustion air ducting pressure losses must be taken into account when calculating the total maximum allowable venting run. See the AERCO Innovation Venting and Combustion Air Guide, GF-5050. When using the heater in a ducted combustion air configuration, each unit must have a minimum 6 inch diameter connection at the unit.

(This Page Is Intentionally Blank)

CHAPTER 3. OPERATION

3.1 INTRODUCTION

The information in this Chapter provides a guide to the operation of the Innovation Water Heater using the Control Panel mounted on the front of the unit. It is imperative that the initial startup of this unit be performed by factory trained personnel. Operation prior to initial startup by factory trained personnel will void the equipment warranty. In addition, the following WARNINGS and CAUTIONS must be observed at all times.

 **CAUTION** 

All of the installation procedures in Chapter 2 must be completed before attempting to start the unit.

 **WARNING** 

ELECTRICAL VOLTAGES IN THIS SYSTEM INCLUDE 120 AND 24 VOLTS AC. IT MUST BE SERVICED ONLY BY FACTORY CERTIFIED SERVICE TECHNICIANS

 **WARNING** 

DO NOT ATTEMPT TO DRY FIRE THE UNIT. STARTING THE UNIT WITHOUT A FULL WATER LEVEL CAN SERIOUSLY DAMAGE THE UNIT AND MAY RESULT IN INJURY TO PERSONNEL OR PROPERTY DAMAGE. THIS SITUATION WILL VOID ANY WARRANTY.

3.2 CONTROL PANEL DESCRIPTION

The Innovation Control Panel shown in Figure 3-1 contains all of the controls, indicators and displays necessary to operate, adjust and troubleshoot the Innovation Water Heater. These operating controls, indicators and displays are listed and described in Table 3-1. Additional information on these items is provided in the individual operating procedures provided in this Chapter.

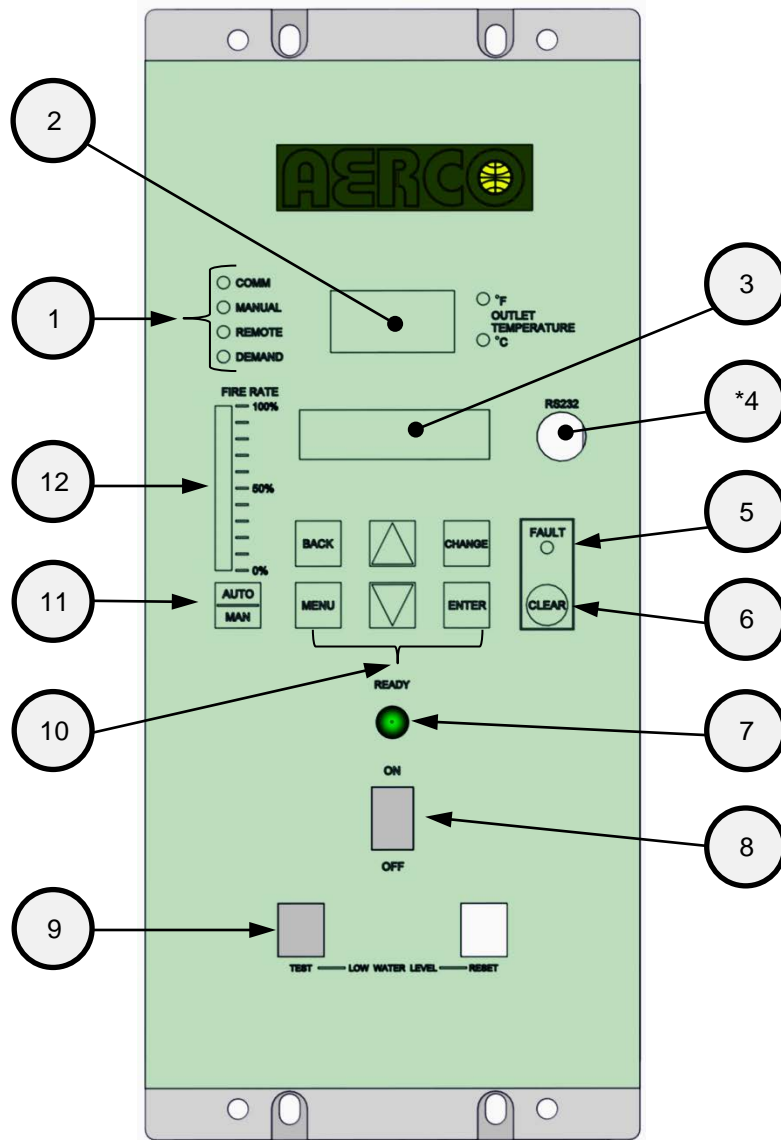


Figure 3-1. Control Panel Front View

***NOTE**

If there is a requirement to use the RS232 port (Item 4) on the C-More controller front panel, contact AERCO to purchase the RS232 Adaptor Cable (P/N 124675), which is designed for this purpose. This cable features a DB9 connector for connection to older computers with serial ports or can be used with a Serial-to-USB adaptor for use in modern computer USB ports.

Table 3-1 Operating Controls, Indicators and Displays

ITEM NO.	CONTROL, INDICATOR OR DISPLAY	FUNCTION
<u>LED Status Indicators</u>		
Four Status LEDs indicate the current operating status as follows:		
1	COMM	Lights when RS-232 communication is occurring
	MANUAL	Lights when the valve position (fire rate) is being controlled using the front panel keypad. This mode of operation is for service technician use only.
	REMOTE	Lights when the unit is being controlled by an external signal from an Energy Management System
	DEMAND	Lights when there is a demand for heat.
2	OUTLET TEMPERATURE Display	3-Digit, 7-Segment LED display continuously displays the outlet water temperature. The °F or °C LED next to the display lights to indicate whether the displayed temperature is in degrees Fahrenheit or degrees Celsius. The °F or °C blinks when operating in the Deadband Mode.
3	VFD Display	Vacuum Fluorescent Display (VFD) consists of 2 lines each capable of displaying up to 16 alphanumeric characters. The information displayed includes: <ul style="list-style-type: none"> • Startup Messages • Fault Messages • Operating Status Messages • Menu Selection
4	RS-232 Port	Port permits a Laptop Computer or External Modem to be connected to the unit's Control Panel. AERCO offers for purchase the RS232 Adaptor Cable (P/N 124675), which is designed to work with this port. This cable features a DB9 connector for connection to older computers with serial ports or can be used with a Serial-to-USB adaptor for use in computer USB ports.
5	FAULT Indicator	Red FAULT LED indicator lights when a boiler alarm condition occurs. An alarm message will appear in the VFD.
6	CLEAR Key	Turns off the FAULT indicator and clears the alarm message if the alarm is no longer valid. Lockout type alarms will be latched and cannot be cleared by simply pressing this key. Troubleshooting may be required to clear these types of alarms.
7	READY Indicator	Lights when ON/OFF switch is set to ON and all Pre-Purge conditions have been satisfied.
8	ON/OFF Switch	Enables and disables boiler operation.
9	LOW WATER LEVEL TEST/RESET Switches	Allows operator to test operation of the water level monitor. Pressing TEST opens the water level probe circuit and simulates a Low Water Level alarm. Pressing RESET resets the water level monitor circuit. Pressing the CLEAR key (item 6) resets the display.

Table 3-1 Operating Controls, Indicators and Displays – Continued

ITEM NO.	CONTROL, INDICATOR OR DISPLAY	FUNCTION
10	<u>MENU Keypad</u> Six (6) keys which provide the following functions for the Control Panel Menus:	
	MENU	Steps through the main menu categories shown in Figure 3-2. The Menu categories wrap around in the order shown.
	BACK	Allows you to go back to the previous menu level without changing any information. Continuously pressing this key will bring you back to the default status display in the VFD. Also, this key allows you to go back to the top of a main menu category.
	▲ (UP) Arrow	When in one of the main menu categories (Figure 3-2), pressing the ▲ arrow key will select the displayed menu category. If the CHANGE key was pressed and the menu item is flashing, pressing the ▲ arrow key will increment the selected setting.
	▼ (DOWN) Arrow	When in one of the main menu categories (Figure 3-2), pressing this key will select the displayed menu category. If the CHANGE key was pressed and the menu item is flashing, pressing the ▼ arrow key will decrement the selected setting.
	CHANGE	Permits a setting to be changed (edited). When the CHANGE key is pressed, the displayed menu item will begin to flash. Pressing the ▲ or ▼ arrow key when the item is flashing will increment or decrement the displayed setting.
	ENTER	Saves the modified menu settings in memory. The display will stop flashing.
11	AUTO/MAN Switch	This switch toggles the heater between the Automatic and Manual modes of operation. When in the Manual (MAN) mode, the front panel controls are enabled and the MANUAL status LED lights. Manual operation is for service technicians only. When in the Automatic (AUTO) mode, the MANUAL status LED will be off and the front panel controls disabled.
12	VALVE POSITION Bargraph	20 segment red LED bargraph continuously shows the Air/Fuel Valve position in 5% increments from 0 to 100%

3.3 CONTROL PANEL MENUS

The Control Panel incorporates an extensive menu structure which permits the operator to set up, and configure the unit. The menu structure consists of five major menu categories which are applicable to this manual. These categories are shown in Figure 3-2. Each of the menus shown, contain options which permit operating parameters to be viewed or changed. The menus are protected by password levels to prevent unauthorized use.

Prior to entering the correct password, the options contained in the Operation, Setup, Configuration and Tuning Menu categories can be viewed. However, with the exception of Internal Setpoint Temperature (Configuration Menu), none of the viewable menu options can be changed.


Once the valid level 1 password (159) is entered, the options listed in the Setup, Configuration, Water Heater Management (WHM) and Tuning Menus can be viewed and changed, if desired.

3.3.1 Menu Processing Procedure

Accessing and initiating each menu and option is accomplished using the Menu Keys shown in Figure 3-1. Therefore, it is imperative that you be thoroughly familiar with the following basic steps before attempting to perform specific menu procedures.

Menu Processing Procedure

1. The Control Panel will normally be in the Operating Menu and the VFD will display the current unit status. Pressing the ▲ or ▼ arrow key will display the other available data items in the Operating Menu.
2. Press the **MENU** key. The display will show the Setup Menu, which is the next menu category shown in Figure 3-2. This menu contains the Password option which must be entered if other menu options will be changed.
3. Continue pressing the **MENU** key until the desired menu is displayed.
4. With the desired menu displayed, press the ▲ or ▼ arrow key. The first option in the selected menu will be displayed.
5. Continue to press the ▲ or ▼ arrow key until the desired menu option is displayed. Pressing the ▲ arrow key will display the available menu options in the Top-Down sequence. Pressing the ▼ arrow key will display the options in the Bottom-Up sequence. The menu options will wrap-around after the first or last available option is reached.
6. To change the value or setting of a displayed menu option, press the **CHANGE** key. The displayed option will begin to flash. Press the ▲ or ▼ arrow key to scroll through the available menu option choices for the option to be changed. The menu option choices do not wrap around.
7. To select and store a changed menu item, press the **ENTER** key.

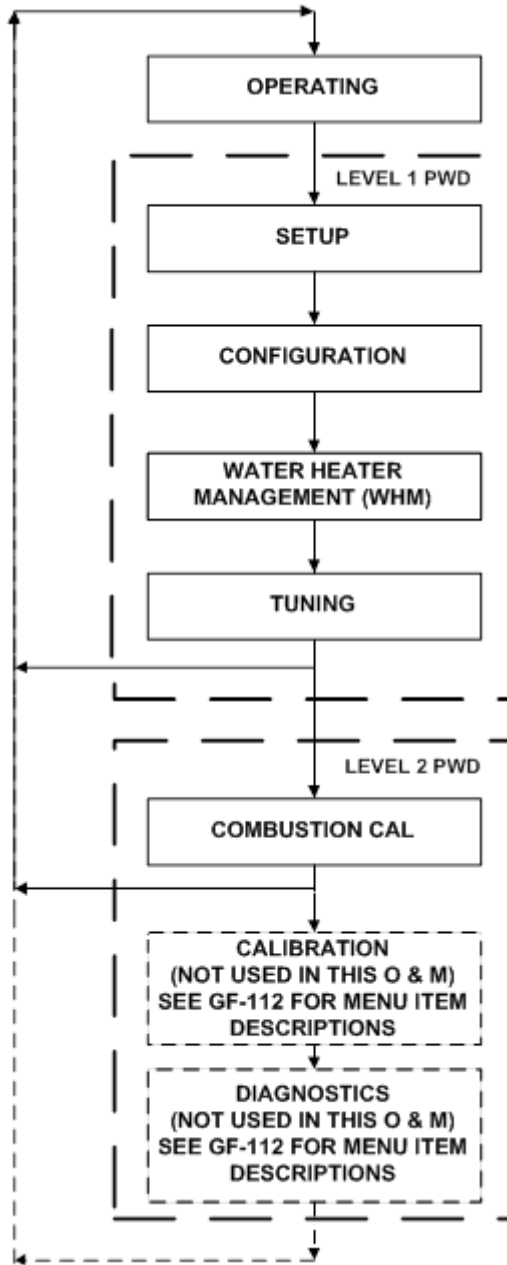

NOTE
THE WHM MENU IS ONLY DISPLAYED WHEN THE UNIT TYPE IN THE CONFIGURATION MENU IS SET TO INNOVATION WH.

Figure 3-2. Menu Structure

NOTE

The following sections provide brief descriptions of the options contained in each menu. Refer to Appendix A for detailed descriptions of each menu option. Refer to Appendix B for listings and descriptions of displayed startup, status and error messages.

3.4 OPERATING MENU

The Operating Menu displays a number of key operating parameters for the unit as listed in Table 3-2. This menu is “Read-Only” and does not allow personnel to change or adjust any displayed items. Since this menu is “Read-Only”, it can be viewed at any time without entering a password. Pressing the ▲ arrow key to display the menu items in the order listed (Top-Down). Pressing the ▼ arrow key will display the menu items in reverse order (Bottom-Up).

Table 3-2. Operating Menu

Menu Item Display	Available Choices or Limits		Default
	Minimum	Maximum	
Active Setpoint	40°F	240°F	
Inlet Temp	40°F	140°F	
Air Temp	-70°F	245°F	
Outdoor Temp*	-70°F	130°F	
Valve Position In	0%	100%	
Valve Position Out*	0%	100%	
Exhaust Temp	°F	°F	
Flame Strength	0%	100%	
Oxygen Level	0%	21%	
Run Cycles	0	999,999,999	
Ignition Time	0.00	10.00	
SSOV Time to OPN	0.00	10.00	
Run Hours	0	999,999,999	
Fault Log	0	19	0

NOTE

The Outdoor Temp display item shown with an asterisk in Table 3-2 will not be displayed unless the Outdoor Sensor function has been enabled in the Configuration Menu (Table 3-4).

3.5 SETUP MENU

The Setup Menu (Table 3-3) permits the operator to enter the unit password (159) which is required to change the menu options. To prevent unauthorized use, the password will time-out after 1 hour. Therefore, the correct password must be reentered when required. In addition to permitting password entries, the Setup Menu is also used to enter date and time, units of temperature measurements and entries required for external communication and control of the unit via the RS-232 port. A view-only software version display is also provided to indicate the current Control Box software version.

Table 3-3. Setup Menu

Menu Item Display	Available Choices or Limits		Default
	Minimum	Maximum	
Password	0	9999	0
Language	English		English
Time	12:00 am	11:59 pm	
Date	01/01/00	12/31/99	
Unit of Temp	Fahrenheit or Celsius		Fahrenheit
Comm Address	0	127	0
Baud Rate	2400, 4800, 9600, 19.2K		9600
OnAER Mode	Ethernet or SD Card		Ethernet
Upload Timer	0	9999 Sec	0
Unit Alpha	E, G, H, R, N or A		A
Unit Year	0	99	0
Unit Serial #	0	9999	0
Software	Ver 0.00	Ver 9.99	0

3.6 CONFIGURATION MENU

The Configuration Menu shown in Table 3-4 permits adjustment of the Internal Setpoint (Setpt) temperature regardless of whether the valid password has been entered. Setpt is required for operation in the Constant Setpoint mode. The remaining options in this menu require the valid password to be entered, prior to changing existing entries. This menu contains a number of other configuration settings which may or may not be displayed, depending on the current operating mode setting.

NOTE

The Configuration Menu settings shown in Table 3-4 are Factory-Set in accordance with the requirements specified for each individual order. Therefore, under normal operating conditions, no changes will be required.

Table 3-4. Configuration Menu

Menu Item Display	Available Choices or Limits		Default
	Minimum	Maximum	
Internal Setpt	Lo Temp Limit	Hi Temp Limit	130°F
Unit Type	KC Boiler, KC Boiler LN, BMK Boiler, BMK Boiler LN, BMK Boiler Dual, KC Water Heater, KC Water Heater LN, RECON Wtr Heater, Innovation WH		Innovation WH
Unit Size (Only if Unit Type is Innovation WH)	600 MBH, 800 MBH, 1060 MBH, 1350 MBH		600, 800, 1060 or 1350 MBH
Fuel Type	Natural Gas, Propane		Natural Gas

Table 3-4: Configuration Menu – Continued

Menu Item Display	Available Choices or Limits		Default
	Minimum	Maximum	
Water Heater Mode	Constant Setpoint, Remote Setpoint,		Constant Setpoint
Remote Signal (If Mode = Remote Setpoint, Direct Drive or Combination)	4 – 20 mA/1 – 5V 0 -20 mA/0 – 5V PWM Input (Legacy BMS), Network		4 – 20 mA, 1-5V
Bldg Ref Temp (If Mode = Outdoor Reset)	40°F	230°F	70°F
Reset Ratio (If Mode = Outdoor Reset)	0.1	9.9	1.2
Outdoor Sensor	Enabled or Disabled		Disabled
System Start Tmp (If Outdoor Sensor = Enabled)	30°F	100°F	60°F
Setpt Lo Limit	40°F	Setpt Hi Limit	60°F
Setpt Hi Limit	Setpt Lo Limit	220°F	140°F
Temp Hi Limit	40°F	240°F	160°F
Max Valve Position	40%	100%	100%
Pump Delay Timer	0 min.	30 min.	0 min.
Aux Start On Dly	0 sec.	120 sec.	0 sec.
Failsafe Mode	Shutdown or Constant Setpt		Shutdown
Analog Output	Off, Setpoint, Outlet Temp, Valve Pos 4- 20mA, valve Pos 0-10v		Valve Pos 0-10v
Low Fire Timer	2 sec.	600 sec.	2 sec.
Setpt Limiting	Enabled or Disabled		Disabled
Setpt Limit Band	0°F	10°F	0
Network Timeout	5 Sec	999 Sec	30 Sec
Shutoff Dly Temp	0	25	10
Demand Offsert	0	25	0
Deadband High	0	25	0
Deadband Low	0	25	0
IGST Version	V2.00 or Lower	V2.02	0
Spark Monitor	Enabled or Disabled		Disabled
Spark Current	Display		



DO NOT CHANGE the Analog Output Menu Item from its Default setting (Valve Position 0-10V).

3.7 WATER HEATER MANAGEMENT (WHM) MENU

The WHM Menu in each C-More can only be viewed when the *Unit Type* option in the Configuration Menu is set to *Innovation WH*. Most of the options in this menu are preset at the factory and cannot be altered by the user. Therefore, the WHM Menu contains only eight (8) user-selectable menu options. These menu options are listed in Table 3-5. Descriptions for each of these menu items are included in Appendix A.

Table 3-5. WHM Menu

SN	Menu Item Display	Available Choices or Limits		Default
		Minimum	Maximum	
1.	WHM Mode	Off, WHM Slave, WHM Master		Off
2.	WHM Setpoint	40°F	200°F	130°F
3.	WHM Nxt On VP	16%	100%	60%
4.	WHM Nxt Off VP	16%	100%	35%
5.	Lead/Lag Hours	25	225	72
6.	WHM Upld Timer	0	9999	0
7.	Setpoint Setback	Enable, Disable		Disable
8.	Setback Setpoint	40°F	220°F	130°F
9.	Setback Start	12:00am	11:59pm	12:00am
10.	Setback End	12:00am	11:59pm	12:00am
11.	WHM Auto Mstr	Yes or No		No
12.	WHM Auto Timer	10 sec.	120 sec.	30 sec.
13.	WHM min addr	1	8	4
14.	WHM max addr	1	8	8
15.	SSD address	0	250	0
16.	SSD Temp Format	Degrees or Points		Degrees
17.	1 Valve Status 8	0	0	0
18.	1 Comm Errors 8	0	0	0
19.	WHM On Delay	30 sec	300 sec	60 sec
20.	WHM Off Delay	30 sec	300 sec	60 sec
21.	Over WHM Under	0	0	0
22.	WHM Min Units	1	8	1
23.	WHM Warmup Time	0	300 sec	30 sec
24.	WHM On Timeout	15 Sec	300 Sec	30 Sec
25.	WHM Valve State	0	1	0

Table 3-5. WHM Menu – Continued

SN	Menu Item Display	Available Choices or Limits		Default
		Minimum	Maximum	
26.	Valve Override	Auto, Open or Closed		Auto
27.	Valve Feedback	Enable or Disable		Disable
28.	Valve Fdbk timer	30 sec	240 sec	60 sec
29.	ValveFdbk Status	Close	Open	Fdbk state
30.	MB Head Temp En	Enable or Disable		Disable
31.	WHM Header Temp	0	0	Header Temp
32.	Mdbus Temp Units	°F or °C		°F
33.	Header Temp Addr	0	255	240
34.	Header Tmp Point	0	255	14
35.	MB Outdr Sens En	Enable or Disable		Disable
36.	WHM Outdr Temp	0	0	Outdr Temp
37.	Outdoor Tmp Addr	0	255	240
38.	Outdoor Tmp Pnt	0	255	15
39.	1 WHM Units 8	0	0	0
40.	SSD Poll Control	0	1000	0
41.	Err Threshold	1	9	5
42.	Comm Address	0	127	0

***NOTE**

The Level 2 Password (6817) in the Setup Menu must be entered to view or change the WHM Auto Mstr and WHM Auto Timer options.

3.8 TUNING MENU

The Tuning Menu items in Table 3-6 are Factory set for each individual unit. Do not change these menu entries unless specifically requested to do so by Factory-Trained personnel.

Table 3-6. Tuning Menu

Menu Item Display	Available Choices or Limits		Default
	Minimum	Maximum	
Prop Band	1°F	120°F	8°F
Integral Gain	0.00	2.00	1.6
Derivative Time	0.0 min	2.00 min	0.10 min
Min Load Adj	-50F	50F	0
Max Load Adj	-50F	50F	0
FFWD Temp	0	0	0
Outlet Feedback	Yes	No	Yes
Feedback Gain	0.01	1.00	0.10
Warmup Prop Band	1F	120F	95
Warmup Int Gain	0	200	50
Warmup PID timer	0	240	20
FDbck Start Pos	0	100	45
Fdbck End Pos	0	100	65
Max Feedback	0	100	50
Fdbck Value	0	0	0
Temp Gov	Enable	Disable	Enable
GOV Limit-4	0	100	30
GOV Limit-5	0	100	25
GOV Limit-6	0	100	20
GOV Limit-7	0	100	15
GOV Limit-8	0	100	10
PID Output	0	0	0
P Output	0	0	0
I Output	0	0	0
D Output	0	0	0
Valve Debug	0	0	0
Reset Defaults?	Yes, No, Are You Sure?		No

3.9 START SEQUENCE

When the Control Box **ON/OFF** switch is set to the **ON** position, it checks all pre-purge safety switches to ensure they are closed. These switches include:

- Safety Shut-Off Valve Proof of Closure (POC) switch
- Low Water Level switch
- High Water Temperature switch
- High Gas Pressure switch
- Low Gas Pressure switch
- Blower Proof switch

NOTE


The downstream Low Gas Pressure switch is *not* checked prior to starting the pre-purge.

If all of the above switches are closed, the **READY** light above the **ON/OFF** switch will light and the unit will be in the Standby mode.

When there is a demand for hot water, the following events will occur:

NOTE

If any of the Pre-Purge safety device switches are open, the appropriate fault message will be displayed. Also, if the required conditions are not observed at any point during the start sequence, appropriate messages will be displayed and the unit will go into fault mode.

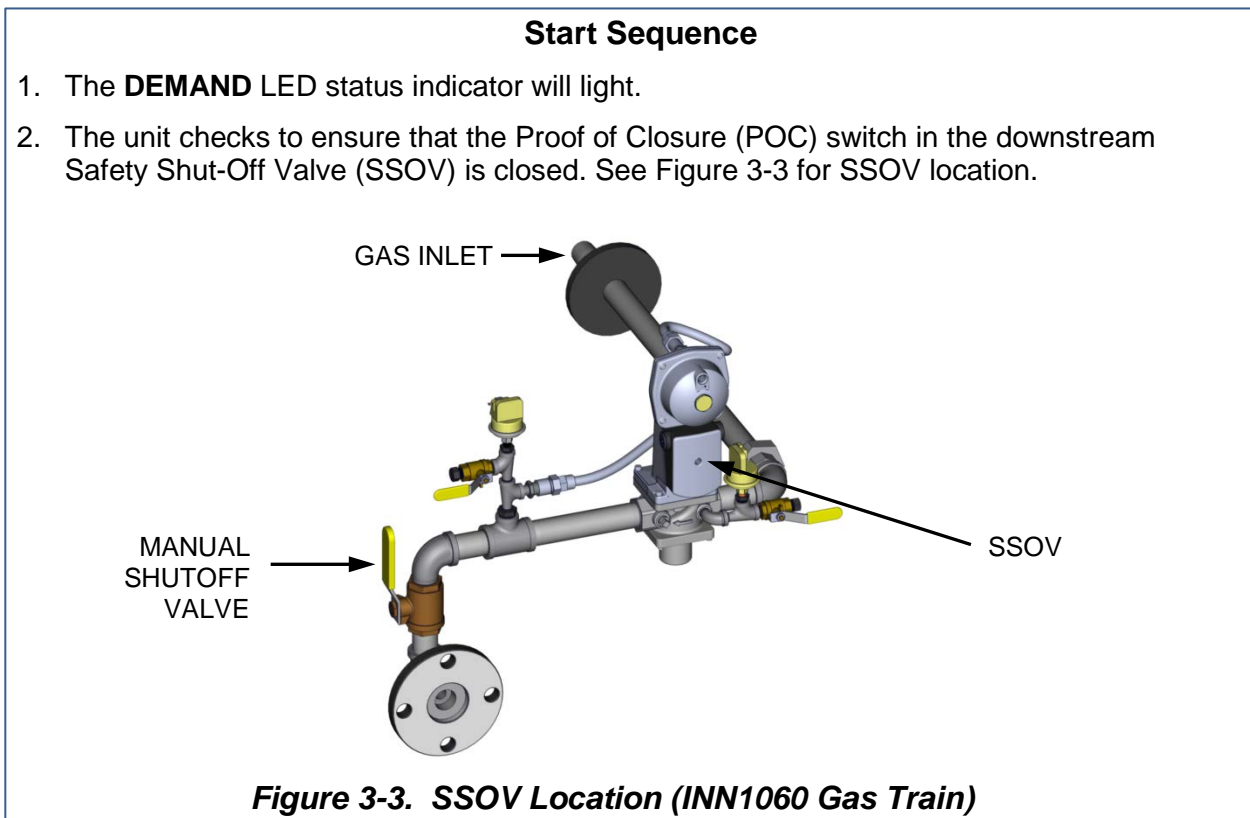

Start Sequence – Continued

3. With all required safety device switches closed, a purge cycle will be initiated and the following events will occur:
 - (a) The Blower relay energizes and turns on blower.
 - (b) The Air/Fuel Valve rotates to the full-open purge position and closes purge position switch. The dial on the Air/Fuel Valve (Figure 3-4) will read 100 to indicate that it is full-open (100%).
 - (c) The **VALVE POSITION** bargraph will show 100%.

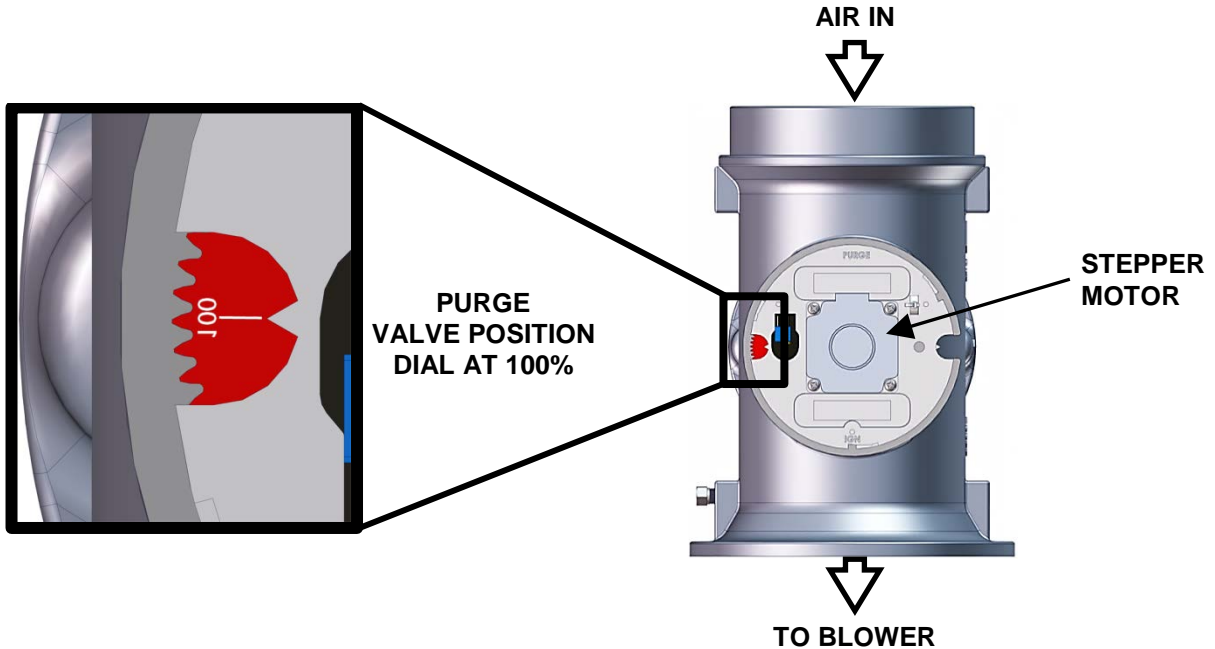


Figure 3-4. Air/Fuel Valve In Purge Position

4. Next, the blower proof switch on the Air/Fuel Valve (Figure 3-5) closes. The display will show *Purging* and indicate the elapsed time of the purge cycle in seconds.

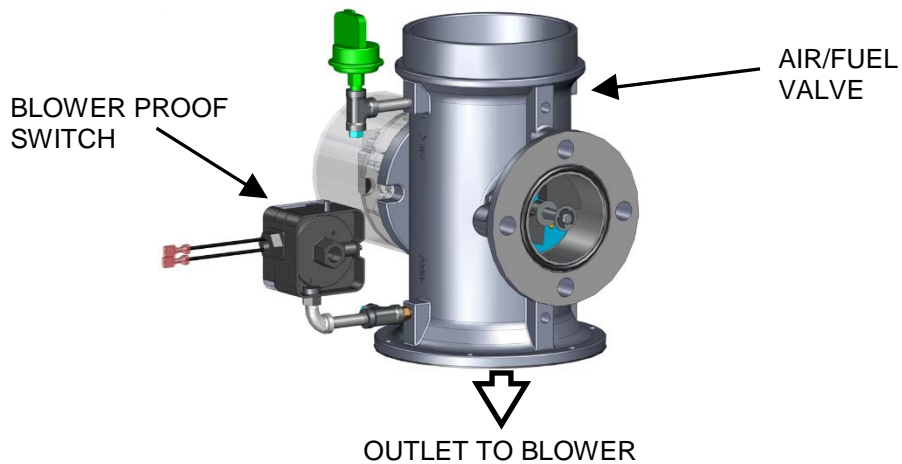


Figure 3-5. Blower Proof Switch

Start Sequence – *Continued*

5. Upon completion of the purge cycle, the Control Box initiates an ignition cycle and the following events occur:
 - (a) The Air/Fuel Valve rotates to the low-fire ignition position and closes the ignition switch. The dial on the Air/Fuel Valve (Figure 3-6) will read between 25 and 35 to indicate that the valve is in the low-fire position.
 - (b) The igniter relay is activated and provides ignition spark.
 - (c) The gas Safety Shut-Off Valve (SSOV) is energized (opened) allowing gas to flow into the Air/Fuel Valve.

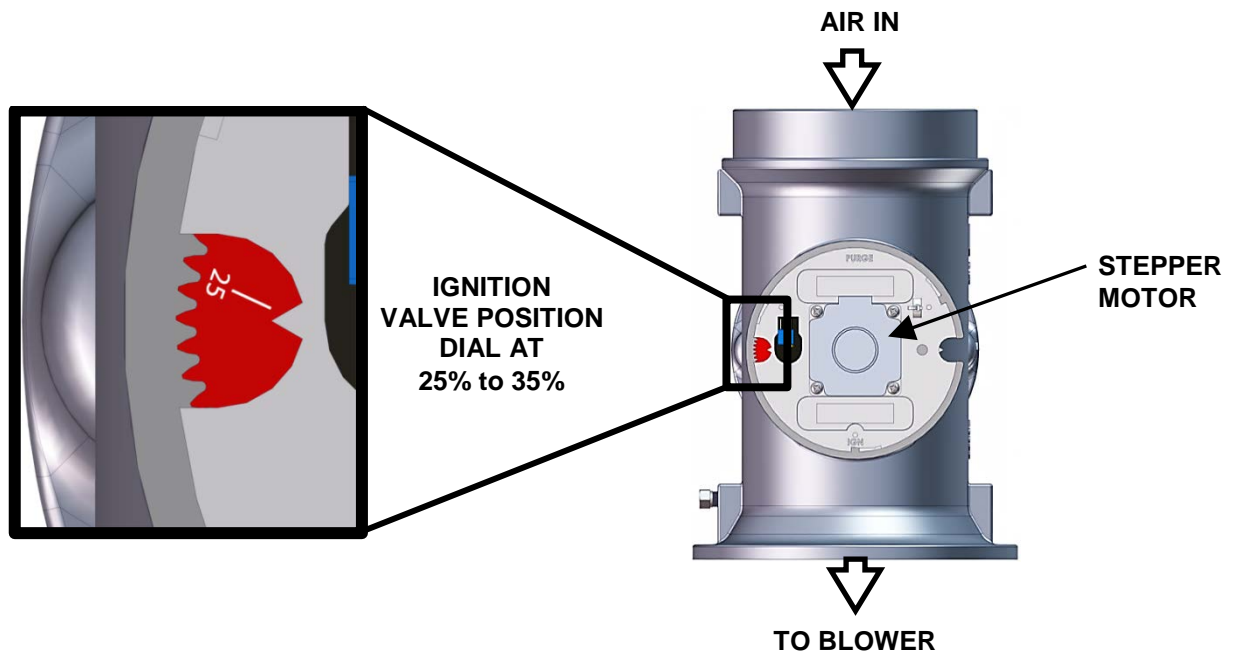


Figure 3-6. Air/Fuel Valve In Ignition Position

6. Up to 7 seconds will be allowed for ignition to be detected. The igniter relay will be turned off one second after flame is detected.
7. After 2 seconds of continuous flame, *Flame Proven* will be displayed and the flame strength will be indicated. After 5 seconds, the current date and time will be displayed in place of the flame strength.
8. With the unit firing properly, it will be controlled by the temperature controller circuitry. The heater's **VALVE POSITION** will be continuously displayed on the front panel bar-graph.

Once the demand for hot water has been satisfied, the Control Box will turn off the SSOV gas valve. The blower relay will be deactivated and the Air/Fuel Valve will be closed. *Standby* will be displayed.

3.10 START/STOP LEVELS

The start and stop levels are the Air/Fuel Valve positions (% open) that start and stop the unit, based on load. These levels are Factory preset as follows:

Start Level: 25%

Stop Level: 16%

Normally, these settings should not require adjustment.

Note that the energy input is not linearly related to the Air/Fuel Valve position. Refer to Table 3-7 for the relationship between the energy input and Air/Fuel Valve position for a unit running on natural gas.

**Table 3-7. Relationship Between Air/Fuel Valve Position and Energy Input
For Units Running Natural Gas**

Air/Fuel Valve Position (% Open)	Innovation Water Heater Model: Energy Input (BTU/Hr.)			
	INN600	INN800	INN1060	INN1350
16%	45,000	45,000	45,000	45,000
20%	87,000	97,000	97,000	181,000
30%	174,000	192,000	222,000	370,000
40%	243,000	330,000	416,000	665,000
50%	306,000	424,000	520,000	870,000
60%	370,000	486,000	715,000	1,001,000
80%	483,000	615,000	845,000	1,203,000
100%	600,000	800,000	1,060,000	1,350,000

CHAPTER 4. INITIAL START-UP

4.1 INITIAL START-UP REQUIREMENTS

The requirements for the initial start-up of the Innovation Water Heater consists of the following:

- Complete installation (Chapter 2)
- Set proper controls and limits (Chapter 3)
- Perform combustion calibration (Chapter 4)
- Test safety devices (Chapter 5)

All applicable installation procedures in Chapter 2 must be fully completed prior to performing the initial start-up of the unit. The initial start-up must be successfully completed prior to putting the unit into service. Starting a unit without the proper piping, venting, or electrical systems can be dangerous and may void the product warranty. The following start-up instructions should be followed precisely in order to operate the unit safely and at a high thermal efficiency, with low flue gas emissions.

Initial unit start-up must be performed **ONLY** by AERCO factory trained start-up and service personnel. After performing the start-up procedures in this Chapter, it will be necessary to perform the Safety Device Testing procedures specified in Chapter 5 to complete all initial unit start-up requirements.

An AERCO Gas Fired Startup Sheet, included with each Innovation Heater, must be completed for each unit for warranty validation and a copy must be returned promptly to AERCO at:

**AERCO International, Inc.
100 Oritani Drive
Blauvelt, New York 10913
(FAX: 845-580-8090)**



DO NOT ATTEMPT TO DRY FIRE THE HEATER. STARTING THE UNIT WITHOUT A FULL WATER LEVEL CAN SERIOUSLY DAMAGE THE UNIT AND MAY RESULT IN INJURY TO PERSONNEL OR PROPERTY DAMAGE. THIS SITUATION WILL VOID ANY WARRANTY.

4.2 TOOLS AND INSTRUMENTATION FOR COMBUSTION CALIBRATION

To properly perform combustion calibration, the proper instruments and tools must be used and correctly attached to the unit. The following sections outline the necessary tools and instrumentation as well as their installation.

4.2.1 Required Tools & Instrumentation

The following tools and instrumentation are necessary to perform combustion calibration of the unit:

- Digital Combustion Analyzer: Oxygen accuracy to $\pm 0.4\%$; Carbon Monoxide (CO) and Nitrogen Oxide (NOx) resolution to 1PPM.
- 16 inch W.C. manometer or equivalent gauge and plastic tubing.
- Multimeter (Capable of measuring 0 – 10 μA)
- 1/8 inch NPT-to-barbed fittings for use with gas supply manometer or gauge.
- Small and large flat blade screwdrivers.
- Tube of silicone adhesive

4.2.2 Installing Gas Supply Manometer

The gas supply manometer is installed in the gas train as follows:

Installing Gas Supply Manometer

1. Close the main manual gas supply shut-off valve upstream of the unit.
2. Remove the front door and left side panels from the heater to access the gas train components.
3. Remove the 1/4 inch NPT pipe plug from the leak detection ball valve on the downstream side of the Safety Shut Off Valve (SSOV) as shown in Figure 4-1.
4. Install a NPT-to-barbed fitting into the tapped plug port.
5. Attach one end of the plastic tubing to the barbed fitting and the other end to the 16 inch W.C. manometer.

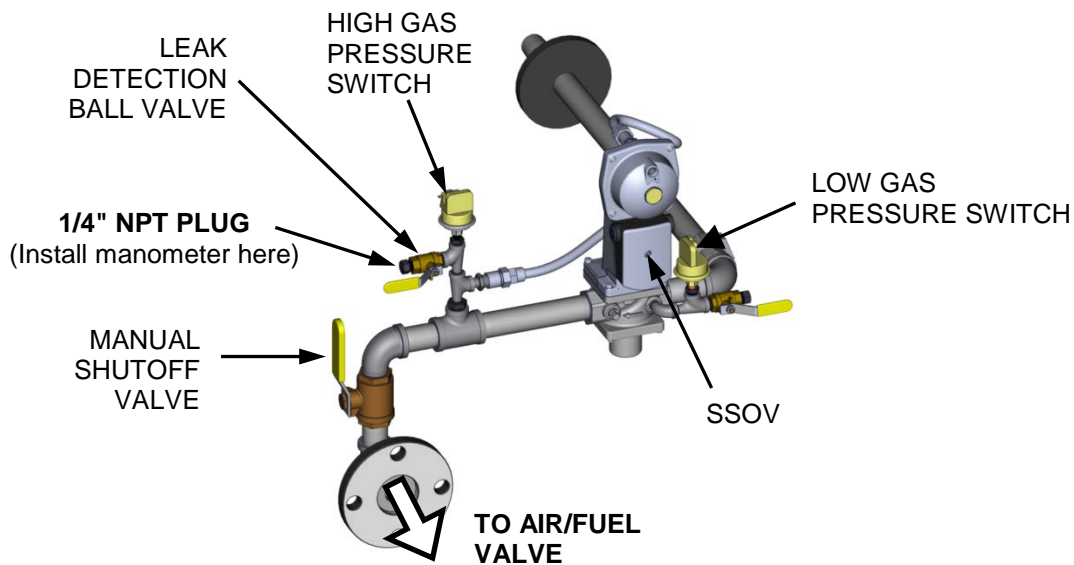


Figure 4-1. 1/4 Inch Gas Plug Location (INN1060 Gas Train Shown)

4.2.3 Accessing the Analyzer Probe Port

The unit contains a 1/8" NPT port at the rear of the exhaust manifold. This port is located above the condensate drain connection as shown in Figure 4-2. Prepare the port for the combustion analyzer probe as follows:

Accessing Analyzer Probe Port

1. Refer to Figure 4-2 and remove the 1/8" NPT plug from the rear of the exhaust manifold.
2. If necessary, adjust the stop on the combustion analyzer probe so it will extend mid-way into the flue gas flow. DO NOT install the probe at this time

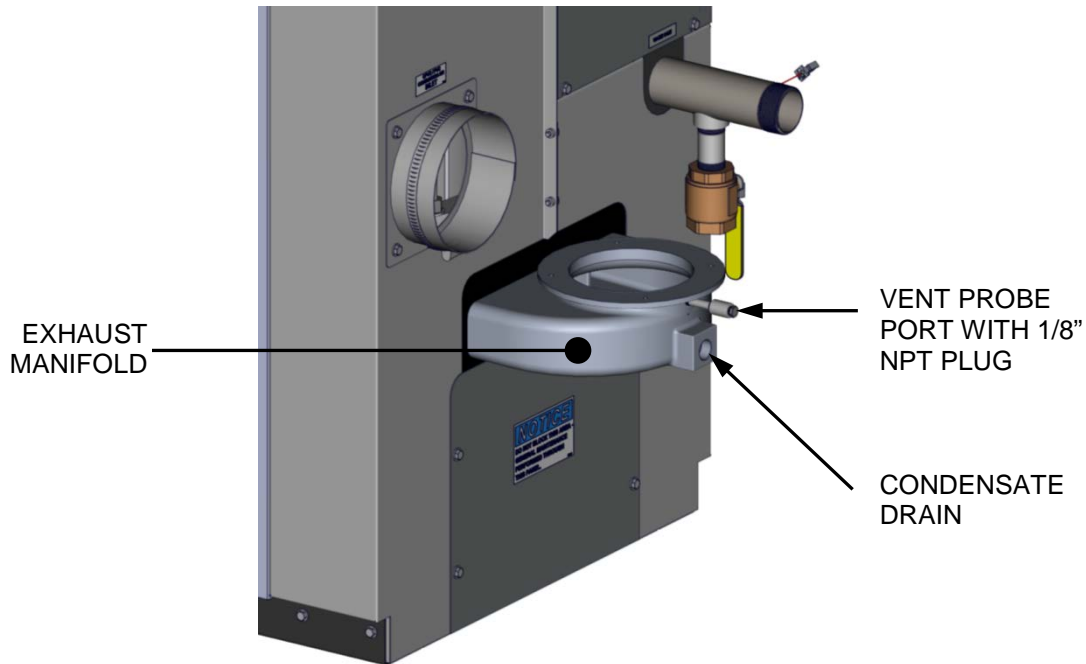


Figure 4-2. Analyzer Probe Hole Location

IMPORTANT

For Innovation Water Heater installations in Korea, refer to the Natural Gas Combustion Calibration procedures in Appendix K.

4.2.4 Connecting Multimeter to Flame Detector

During Combustion Calibration, the flame strength generated by the flame detector is measured using a multimeter set to the μA scale. The flame detector is mounted on the flange of the blower side intake manifold as shown in Figure 4-3.

Proceed as follows to set up the multimeter to measure the flame strength current:

Connecting Multimeter to Measure Flame Strength

1. Refer to Figure 4-3 and remove the right side panel from the unit to access the flame detector.
2. Disconnect the flame detector wire lead 135 from the detector and connect the multimeter in series with the wire lead using alligator clips as shown in Figure 4-3.
3. Ensure that the multimeter is set to the μA scale.

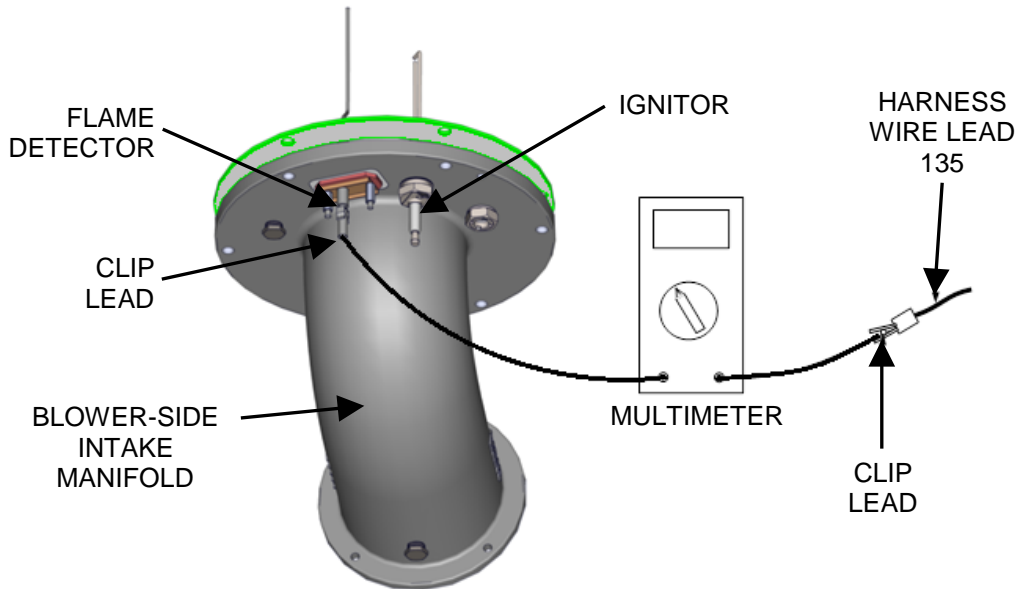


Figure 4-3. Flame Strength Set-Up Using Multimeter

IMPORTANT

The unit is shipped from the factory set up for either Natural Gas or Propane, as specified by the Style Number on the Sales Order. Perform the appropriate Combustion Calibration procedures in section 4.3 for Natural Gas, or section 4.4 for Propane.

4.3 NATURAL GAS COMBUSTION CALIBRATION

The Innovation Heater is combustion calibrated at the factory prior to shipping. However, recalibration is necessary as part of initial start-up due to changes in the local altitude, gas BTU content, gas supply piping and supply regulators. Start-Up & Registration Test Data sheets are shipped with each unit. These sheets must be filled out and returned to AERCO for proper Warranty Validation.

It is important to perform the calibration procedure as outlined below. This will keep readjustments to a minimum and provide optimum performance.

Natural Gas Combustion Calibration

1. Open the water supply and return valves to the unit and ensure that the system pumps are running.
2. Open the natural gas supply valve(s) to the unit.
3. Set the control panel ON/OFF switch to the **OFF** position.
4. Turn on external AC power to the unit. The display will show LOSS OF POWER and the time and date.
5. Set the unit to the Manual Mode by pressing the **AUTO/MAN** key. A flashing Manual Valve Position message will be displayed with the present position in %. Also, the MANUAL LED will light.
6. Adjust the air/fuel valve position to **0%** by pressing the ▼ arrow key.
7. Ensure that the leak detection ball valve downstream of the SSOV is open.
8. Set the ON/OFF switch to the **ON** position.
9. Change the valve position to **29%** using the ▲ arrow key. The unit should begin its start sequence and fire.
10. Next, verify that the gas pressure downstream of the SSOV is within the appropriate range shown below for the Innovation Model being tested. If gas pressure adjustment is required, remove the brass hex nut on the SSOV actuator to access the gas pressure adjustment screw (Figure 4-4). Make gas pressure adjustments using a flat-tip screwdriver to obtain a gas pressure reading within the required range for the INN model being tested.

INNOVATION MODEL	GAS PRESSURE RANGE DOWNSTREAM OF SSOV
INN 1350	3.0" – 3.2" W.C.
INN1060	2.6" – 2.8" W.C.
INN800	1.5" – 1.7" W.C.
INN600	1.2" – 1.4" W.C.



Figure 4-4. Gas Pressure Adjustment Screw Location

Natural Gas Combustion Calibration - *Continued*

11. Next, decrease the valve open position to **16%** using the ▼ arrow key. Verify that the gas pressure at the inlet of the SSOV is **8.0" to 11.0" W.C.** Readjust the inlet gas pressure if necessary.
12. Insert the combustion analyzer probe into the 1/8" port at the rear of the exhaust manifold. Allow enough time for the combustion analyzer to settle.
13. Verify that the oxygen (O₂) level is within the range shown below. Also, ensure that the carbon monoxide (CO), nitrogen oxide (NOx) and flame strength readings are within the values shown. If a combustion tone exists, you can adjust the O₂ level up or down to avoid annoyance issues.

Combustion Oxygen Level at 16% Valve Position

Oxygen %	Carbon Monoxide	NOx	Flame Strength
6.0 % ± 0.5%	<50 ppm	<15 ppm	>2.0 µA

14. If the oxygen level is not within the required tolerance, the gas pressure on the downstream side of the SSOV must be adjusted using the adjustment screw on the SSOV regulator (Figure 4-4). Slowly rotate the gas pressure adjustment (approximately 1/4-turn increments). Allow the combustion analyzer to stabilize following each adjustment. Clockwise rotation reduces the oxygen level, while counterclockwise rotation increases the oxygen level.
15. Once the oxygen level is within the required range listed in step 13, the gas pressure on the downstream side of the SSOV should be within the appropriate range shown below for the Innovation Model being tested.

INNOVATION MODEL	GAS PRESSURE RANGE DOWNSTREAM OF SSOV
INN 1350	3.0" – 3.2" W.C.
INN1060	2.6" – 2.8" W.C.
INN800	1.5" – 1.7" W.C.
INN600	1.2" – 1.4" W.C.

16. Replace the brass cap on the SSOV gas pressure adjustment if it was previously removed.
17. Following combustion calibration at the 16% valve position, check the combustion readings at each of the valve positions listed below and record the readings on the Start-Up & Registration data sheets provided with the unit. During these checks, **DO NOT** attempt to adjust the downstream gas pressure using the SSOV gas pressure adjustment screw. Fan speed adjustment is encouraged to maintain O₂ at **6.75% ± 0.75%** at all other valve positions.

NOTE

Based on the water heater load, it may not be possible to obtain data at all of the points listed without encountering an Over-Temp condition.

18. Valve Positions to be checked:
 - 20%
 - 60%
 - 30%
 - 80%
 - 40%
 - 100%
 - 50%

Natural Gas Combustion Calibration - *Continued*

NOTE

If the combustion calibration needs to be adjusted to maintain the O₂% range referenced above, you must follow the attached Combustion Calibration instructions to change the fan speed and air flow for a series of valve positions.

This completes the Natural Gas combustion calibration procedure.

4.4 PROPANE COMBUSTION CALIBRATION

IMPORTANT

The unit is shipped from the factory set up for either Natural Gas or Propane as specified by the Style Number on the Sales Order. Complete the instructions below only if your unit has been set up for Propane.

The Innovation Heater is combustion calibrated at the factory prior to shipping. However, recalibration as part of initial start-up is necessary due to changes in the local altitude, gas BTU content, gas supply piping and supply regulators. Start-Up & Registration Test Data sheets are shipped with each unit. These sheets must be filled out and returned to AERCO for proper Warranty Validation.

It is important to perform the calibration procedure as outlined in the following steps. This will keep readjustments to a minimum and provide optimum performance.

Propane Combustion Calibration

1. Open the water supply and return valves to the unit and ensure that the system pumps are running.
2. Open the propane gas supply valve(s) to the unit.
3. Set the control panel **ON/OFF** switch to the **OFF** position.
4. Turn on external AC power to the unit. The display will show **LOSS OF POWER** and the time and date.
5. Set the unit to the Manual Mode by pressing the **AUTO/MAN** key. A flashing Manual Valve Position message will be displayed with the present position in %. Also, the **MANUAL LED** will light.
6. Adjust the air/fuel valve position to 0% by pressing the ▼ arrow key.
7. Ensure that the leak detection ball valve downstream of the SSOV is open.
8. Set the **ON/OFF** switch to the **ON** position.
9. Change the valve position to 29% using the ▲ arrow key. The unit should begin its start sequence and fire.

Propane Combustion Calibration - *Continued*

10. Next, verify that the gas pressure downstream of the SSOV is within the appropriate range shown below for the Innovation Model being tested. If gas pressure adjustment is required, remove the brass hex nut on the SSOV actuator to access the gas pressure adjustment screw (Figure 4-4). Make gas pressure adjustments using a flat-tip screwdriver to obtain a gas pressure reading within the required range for the INN model being tested.

INNOVATION MODEL	GAS PRESSURE RANGE DOWNSTREAM OF SSOV
INN 1350	2.0" – 2.2" W.C.
INN1060	1.8" – 2.0" W.C.
INN800	2.8" – 3.0" W.C.
INN600	1.6" – 1.8" W.C.

11. Next, decrease the valve open position to 16% using the ▼ arrow key. Verify that the gas pressure at the inlet of the SSOV is 11.0" W.C. Readjust the inlet gas pressure if necessary.
12. Insert the combustion analyzer probe into the 1/8" port at the rear of the exhaust manifold. Allow enough time for the combustion analyzer to settle.
13. Verify that the oxygen (O₂) level is within the range shown below. Also, ensure that the carbon monoxide (CO), nitrogen oxide (NO_x) and flame strength readings are within the values shown.

Combustion Oxygen Level at 16% Valve Position

Oxygen % ± 0.5	Carbon Monoxide	NO _x	Flame Strength
6.0 %	<50 ppm	<15 ppm	>2.0 µA

14. If the oxygen level is not within the required tolerance, the gas pressure on the downstream side of the SSOV must be adjusted using the adjustment screw on the SSOV regulator (Figure 4-4). Slowly rotate the gas pressure adjustment (approximately 1/4-turn increments). Allow the combustion analyzer to stabilize following each adjustment. Clockwise rotation reduces the oxygen level, while counterclockwise rotation increases the oxygen level.
15. Once the oxygen level is within the required range listed in step 13, the gas pressure on the downstream side of the SSOV should be within the appropriate range shown below for the Innovation Model being tested.

INNOVATION MODEL	GAS PRESSURE RANGE DOWNSTREAM OF SSOV
INN 1350	2.0" – 2.2" W.C.
INN1060	1.8" – 2.0" W.C.
INN800	2.8" – 3.0" W.C.
INN600	1.6" – 1.8" W.C.

16. Replace the brass cap on the SSOV gas pressure adjustment if it was previously removed.

Propane Combustion Calibration - *Continued*

17. Following combustion calibration at the 16% valve position, check the combustion readings at each of the valve positions listed below and record the readings on the Start-Up & Registration data sheets provided with the unit. During these checks, **DO NOT** attempt to adjust the downstream gas pressure using the SSOV gas pressure adjustment screw.

NOTE

Based on the water heater load, it may not be possible to obtain data at all of the points listed without encountering an Over-Temp condition.

18. Valve Positions to be checked:

- 20%,
- 30%,
- 40%,
- 50%,
- 60%,
- 80%,
- 100%

This completes the Propane combustion calibration procedure.

4.5 REASSEMBLY

Once the combustion calibration adjustments are properly set, the unit can be reassembled for service operation.

Reassembly

1. Set the **ON/OFF** switch in the **OFF** position.
2. Disconnect AC power from the unit.
3. Shut off the gas supply to the unit.
4. Remove the manometer and barbed fittings and reinstall the NPT plug using a suitable pipe thread compound.
5. Remove the combustion analyzer probe from the 1/8" vent hole in the exhaust manifold. Replace the 1/8" NPT plug in the manifold.
6. Replace the unit's side panels and front door.

4.6 TEMPERATURE CONTROL CALIBRATION

Carefully follow the procedures below to properly set up the temperature control for the heater. Ignoring this commissioning step may cause water temperature faults, poor water temperature control, and rapid cycling of the heater.

The unit normally comes factory set and calibrated for a 130°F setpoint (default value). However, if a different setpoint temperature is desired, it can be changed using the procedure in section 4.6.1. If the setpoint is changed, it must be done prior to temperature control calibration.

There are two primary adjustments for performing temperature calibration. These are Min Load Adj and Max Load Adj (minimum and maximum load adjustment).

Adjustments to these settings are made at minimum and maximum load conditions and should be made in small increments from 1 to 3 degrees. After making an adjustment, the outlet water

temperature must be allowed to settle for several minutes prior to making any further adjustments.

When calibrating temperature control, observe the following:

Temperature Control Calibration

1. The unit must be in the Auto mode of operation.
2. The Outlet Feedback option in the Tuning Menu must be set to **DISABLED** while performing calibration.
3. Monitor the OUTLET TEMPERATURE display and VALVE POSITION bar-graph to set load conditions and observe the effect of adjustments.
4. Perform the calibration using the Tuning Menu of the C-More Control Box.
5. Make small adjustments and allow time between adjustments for the outlet water temperature to stabilize.
6. Maintain water flow as constant as possible during these adjustments.
7. Ensure that recirculation loops are operational while the calibration is being performed.
8. Upon completion of calibration, set the Outlet Feedback back to **ENABLE**.

Temperature control calibration is accomplished by performing the Minimum and Maximum Load Adjustment procedures in sections 4.6.2 and 4.6.3, respectively.

4.6.1 Setting the Outlet Water Temperature Setpoint

The setpoint temperature of the unit may be changed using the following steps. However, once a setpoint has been changed, recalibration may be necessary. The temperature calibration procedures are provided in sections 4.6.2 and 4.6.3.

To adjust the unit's setpoint, proceed as follows:

Setting Outlet Water Temperature Setpoint

1. Press the **MENU** key until **Configuration Menu** is displayed.
2. Press the **▲** or **▼** arrow key until Internal Setpt is displayed along with the present setpoint temperature.
3. To change the setpoint, press the **CHANGE** key. The display will begin to flash.
4. Press the **▲** or **▼** arrow key until the desired setpoint is displayed.
5. Press the **ENTER** key to save the change.

4.6.2 Minimum Load Adjustment

With the unit in operation, check the temperature control at minimum load as follows:

Minimum Load Adjustment

1. While monitoring the VALVE POSITION bar-graph, create a minimum load on the system that will yield a steady valve position between 25% and 35%.

Minimum Load Adjustment – *Continued*

NOTE

It may be desirable to shut off the outlet valve and use the hose bib (see Figure 2-4) to simulate a minimum flow load condition.

2. Wait several minutes to allow the outlet temperature to stabilize under load conditions.
3. Once stabilized, the OUTLET TEMPERATURE display should read no more than 2 to 3 degrees above the unit's setpoint.
4. If the outlet temperature is stabilized, proceed to the Maximum Load Adjustment procedure in section 4.6.3. If the temperature is not stabilized, proceed to step 5.
5. Press the **MENU** key and select the *Tuning Menu*.
6. Press the ▲ or ▼ arrow key until *Min Load Adj* is displayed.
7. Press the **CHANGE** key. The display will begin to flash.
8. Raise or lower the minimum load adjustment in increments of one or two using the ▲ or ▼ arrow key. Increasing this value will increase outlet water temperature, while decreasing it will decrease outlet water temperature.
9. Press **ENTER** to save the change. Allow time for the system to stabilize between adjustments
10. Repeat steps 5 through 9 as needed until the temperature is stabilized at no more than 2 to 3 degrees above the unit's setpoint.

4.6.3 Maximum Load Adjustment

Check the temperature control at maximum load as follows:

Maximum Load Adjustment

1. While monitoring the VALVE POSITION bar-graph, create a maximum load on the system that will yield a steady valve position between 80% and 90%.

NOTE

It may be necessary to open the outlet valve if it was closed during minimum load adjustment to obtain a sufficient flow rate for maximum adjustment.

2. Wait several minutes to allow the outlet water temperature to stabilize under load conditions.
3. Once stabilized, the OUTLET TEMPERATURE display should read no more than 2 to 3 degrees below the unit's setpoint.
4. If the outlet temperature is stabilized, no adjustment is necessary. If the temperature is not stabilized, proceed to step 5.
5. Press the **MENU** key and select the *Tuning Menu*.
6. Press the ▲ or ▼ arrow key until *Max Load Adj* is displayed.

Maximum Load Adjustment – *Continued*

7. Press the **CHANGE** key. The display will begin to flash.
8. Raise or lower the maximum load adjustment using the ▲ or ▼ arrow key. Increasing this value will increase outlet water temperature, while decreasing it will decrease water temperature.
9. Press **ENTER** to save the change. Allow time for the system to stabilize between adjustments.
10. Repeat steps 5 through 9 as needed until the temperature is stabilized 2 to 3 degrees below the unit's setpoint.

If the outlet temperature does not maintain setpoint after a reasonable amount of time and adjustment, contact your local AERCO representative.

NOTE

After performing Temperature Calibration and prior to placing the water heater into service, be sure to set the *Outlet Feedback* option in the *Tuning Menu* back to ON.

4.7 OVER-TEMPERATURE LIMIT SWITCHES

The unit contains both automatic and manual reset over-temperature limit switches. These switches are mounted on a plate as shown in Figure 4-5. The switches can be accessed by opening the front panel door of the unit. The manual reset switch is not adjustable and is permanently fixed at 210°F. This switch will shut down and lock out the heater if the water temperature exceeds 210°F. Following an over-temperature condition, it must be manually reset by pressing the RESET button before the heater can be restarted. The automatic reset over-temperature switch is adjustable and allows the unit to restart, once the temperature drops below its temperature setting. Set the automatic over-temperature switch to the desired setting.

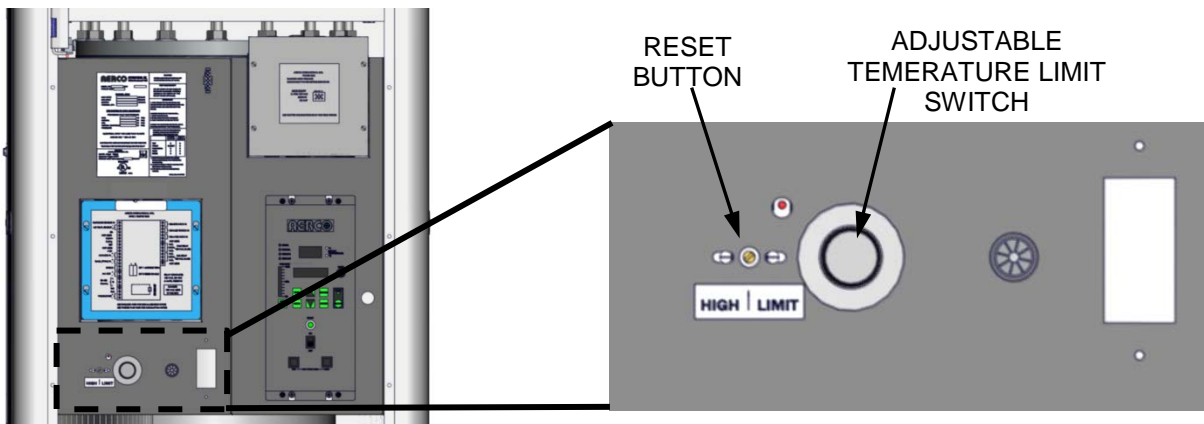


Figure 4-5. Over Temperature Limit Switch Location

CHAPTER 5. SAFETY DEVICE TESTING

5.1 INTRODUCTION

Periodic safety device testing is required to ensure that the control system and safety devices are operating properly. The heater control system comprehensively monitors all combustion-related safety devices before, during and after the start sequence. The following tests check to ensure that the system is operating as designed.

Operating controls and safety devices should be tested on a regular basis or following service or replacement. All testing must conform to local codes such as ASME CSD-1.

NOTE

MANUAL and AUTO modes of operation are required to perform the following tests. For a complete explanation of these modes, see Chapter 3.

NOTE

It will be necessary to remove the front door and side panels from the unit to perform the following tests.



ELECTRICAL VOLTAGES IN THIS SYSTEM MAY INCLUDE 120 AND 24 VOLTS AC. POWER MUST BE REMOVED PRIOR TO PERFORMING WIRE REMOVAL OR OTHER TEST PROCEDURES THAT CAN RESULT IN ELECTRICAL SHOCK.

5.2 LOW GAS PRESSURE FAULT TEST

Refer to Figure 5-1 and ensure that the leak detection ball valve located at the high gas pressure switch is closed.

Low Gas Pressure Fault Test

1. Remove the 1/8" plug from the ball valve at the low gas pressure switch shown in the lower portion of Figure 5-1.
2. Install a 0 – 16" W.C. manometer or a W.C. gauge where the 1/8" plug was removed.
3. Slowly open the ball valve near the low gas pressure switch.
4. Place the unit in Manual Mode and adjust the air/fuel valve position (% open) between 25 and 30%.
5. While the unit is firing, slowly close the external manual gas shut-off valve.
6. The unit should shut down and display a *LOW GAS PRESSURE* fault message at approximately 2.6" W.C. The **FAULT** indicator should also start flashing.
7. Fully open the external manual gas shut-off valve and press the **CLEAR** button on the Control Box.
8. The fault message should clear and the **FAULT** indicator should go off. The unit should restart.

Low Gas Pressure Fault Test – *Continued*

9. Upon test completion, close the ball valve and remove the manometer. Replace the 1/8" plug removed in step 1.

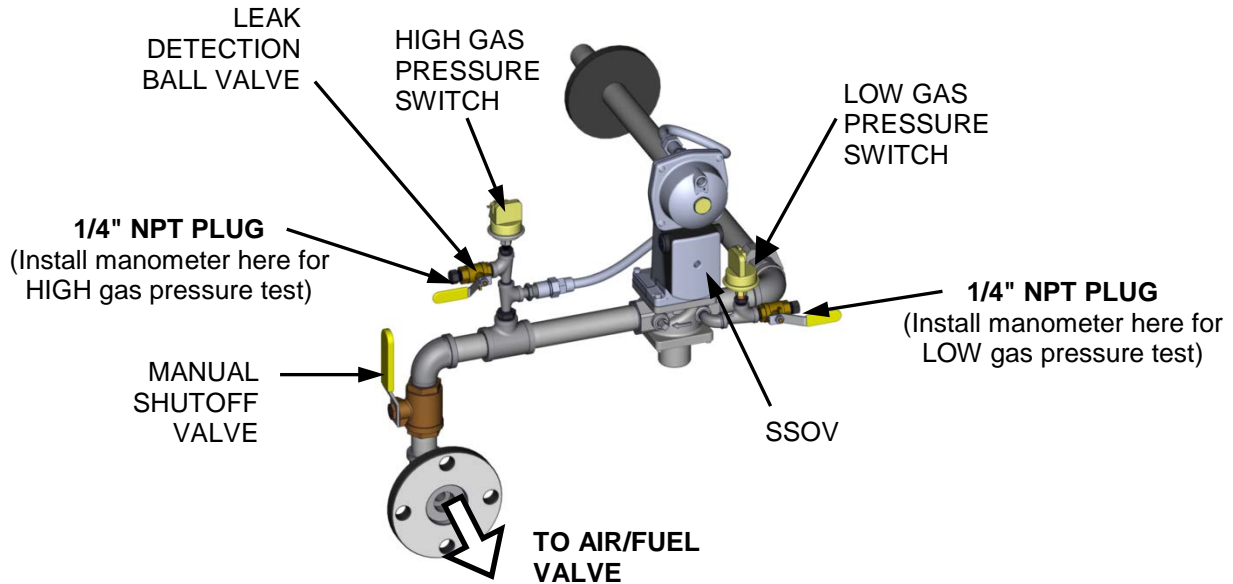


Figure 5-1. Low & High Gas Pressure Testing (INN1060 Gas Train)

5.3 HIGH GAS PRESSURE FAULT TEST

To simulate a high gas pressure fault, refer to Figure 5-1 and proceed as follows:

High Gas Pressure Fault

1. Remove the 1/8" plug from the leak detection ball valve shown in Figure 5-1.
2. Install a 0 – 16" W.C. manometer (or W.C. gauge) where the 1/8" plug was removed.
3. Slowly open the leak detection ball valve
4. Start the unit in Manual mode at a valve position (firing rate) of 25%.
5. Slowly increase the gas pressure using the adjustment screw on the SSOV.
6. The unit should shut down and display a HIGH GAS PRESSURE fault message when the gas pressure exceeds 4.0" W.C. The **FAULT** indicator should also start flashing.
7. Reduce the gas pressure back to 2.8" W.C.
8. Press the **CLEAR** button on the Control Box to clear the fault.
9. The fault message should clear and the **FAULT** indicator should go off. The unit should restart.
10. Upon test completion, close the ball valve and remove the manometer. Replace the 1/8" plug removed in step 1.

5.4 LOW WATER LEVEL FAULT TEST

To simulate a low water level fault:

Low Water Level Fault Test

1. Set the **ON/OFF** switch to the **OFF** position
2. Close the water shut-off valves in the supply and return piping to the unit.
3. Slowly open the drain valve on the rear of the unit. If necessary the unit's relief valve may be opened to aid in draining.
4. Continue draining the unit until a **LOW WATER LEVEL** fault message is displayed and the **FAULT** indicator flashes.
5. Place the unit in the Manual Mode and raise the valve position above 30%.
6. Set the **ON/OFF** switch to the **ON** position. The **READY** light should remain off and the unit should not start. If the unit does start, shut the unit off immediately and refer fault to qualified service personnel.
7. Close the drain and pressure relief valve used in draining the unit.
8. Open the water shut-off valve in the return piping to the unit.
9. Open the water supply shut-off valve to the unit to refill.
10. After the shell is full, press the **LOW WATER LEVEL RESET** button to reset the low water cutoff.
11. Press the **CLEAR** button to reset the **FAULT** LED and clear the displayed error message.
12. Set the **ON/OFF** switch to the **ON** position. The unit is now ready for operation.

5.5 WATER TEMPERATURE FAULT TEST

A high water temperature fault is simulated by adjusting the automatic over-temperature switch. This switch is accessible from the front of the unit as shown in Figure 5-2.

Water Temperature Fault Test

1. Start the unit in the normal operating mode. Allow the unit to stabilize at its setpoint.
2. Lower the adjustable over-temperature switch setting to match the displayed **OUTLET TEMPERATURE**.
3. Once the adjustable over-temperature switch setting is approximately at, or just below, the actual outlet water temperature, the unit should shut down. The **FAULT** indicator should start flashing and a **HIGH WATER TEMP SWITCH OPEN** fault message should be displayed. It should not be possible to restart the unit.
4. Reset the adjustable over-temperature switch to its original setting.
5. The unit should start once the adjustable temperature limit switch setting is above the actual outlet water temperature.

Water Temperature Fault Test – *Continued*

6. Once the adjustable over-temperature switch setting is approximately at, or just below, the actual outlet water temperature, the unit should shut down. The **FAULT** indicator should start flashing and a **HIGH WATER TEMP SWITCH OPEN** fault message should be displayed. It should not be possible to restart the unit.
7. Reset the adjustable over-temperature switch to its original setting. The unit should start once the adjustable temperature limit switch setting is above the actual outlet water temperature.

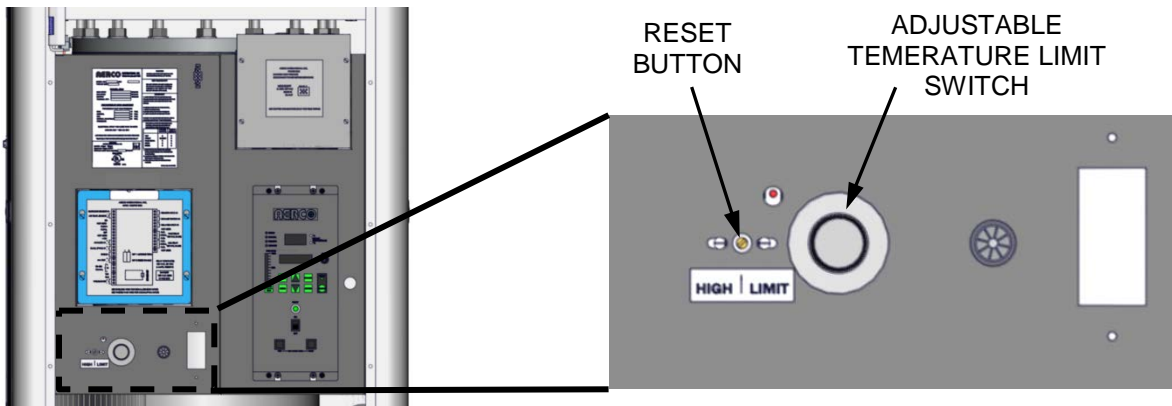


Figure 5-2. Temperature Limit Switch Setting

5.6 INTERLOCK TESTS

The unit is equipped with two interlock circuits called the Remote Interlock and Delayed Interlock. Terminal connections for these circuits are located in the I/O Box (Figure 2-12) and are labeled REMOTE INTL'K IN and DELAYED INTL'K IN. These circuits can shut down the unit in the event that an interlock is opened. These interlocks are shipped from the factory jumpered (closed). However, each of these interlocks may be utilized in the field as a remote stop and start, an emergency cut-off, or to prove that a device such as a pump, gas booster, or louver is operational.

5.6.1 Remote Interlock

Remote Interlock

1. Remove the cover from the I/O Box and locate the REMOTE INTL'K IN terminals (see Figure 2-12).
2. Start the unit in the Manual Mode and set the valve position between 25% and 30%.
3. If there is a jumper across the REMOTE INTL'K IN terminals, remove one side of the jumper. If the interlock is being controlled by an external device, either open the interlock via the external device or disconnect one of the wires leading to the external device.
4. The unit should shut down and display **INTERLOCK OPEN**.
5. Once the interlock connection is reconnected, the **INTERLOCK OPEN** message should automatically clear and the unit should restart.

5.6.2 Delayed Interlock

Delayed Interlock

1. Remove the cover from the I/O Box and locate the DELAYED INTL'K IN terminals (see Figure 2-12).
2. Start the unit in the Manual Mode at a valve position between 25% and 30%.
3. If there is a jumper across the DELAYED INTL'K IN terminals, remove one side of the jumper. If the interlock is connected to a proving switch of an external device, disconnect one of the wires leading to the proving switch.
4. The unit should shut down and display a **DELAYED INTERLOCK OPEN** fault message. The **FAULT** LED should be flashing.
5. Reconnect the wire or jumper removed in step 3 to restore the interlock.
6. Press the **CLEAR** button to reset the fault.
7. The unit should start.

5.7 FLAME FAULT TESTS

Flame faults can occur during ignition or while the unit is already running. To simulate each of these fault conditions, proceed as follows:

Flame Fault Tests

1. Set the **ON/OFF** switch to the **OFF** position.
2. Place the unit in the Manual Mode and set the valve position between 25% and 30%.
3. Close the manual gas shutoff valve located between the Safety Shut-Off Valve (SSOV) and the Air/Fuel Valve (see Figure 5-3).
4. Set the **ON/OFF** switch to the **ON** position to start the unit.
5. The unit should shut down after reaching the Ignition cycle and display **FLAME LOSS DURING IGN.**
6. Open the valve previously closed in step 3 and press the **CLEAR** button.
7. Restart the unit and allow it to prove flame.
8. Once flame is proven, close the 1" manual gas shut-off valve located between the SSOV (Figure 5-3) and the Air/Fuel Valve.
9. The unit should shut down and execute an IGNITION RETRY cycle by performing the following:
 - a) The unit will execute a shutdown purge cycle for a period of 15 seconds and display **WAIT FAULT PURGE.**
 - b) The unit will execute a 30 second re-ignition delay and display **WAIT RETRY PAUSE.**
 - c) The unit will then execute a standard ignition sequence and display **WAIT IGNITION RETRY.**

Flame Fault Tests – *Continued*

10. Since the manual gas shutoff valve is still closed, the unit will shut down and display **FLAME LOSS DURING IGNITION** following the IGNITION RETRY cycle.
11. Open the valve previously closed in step 8.
12. Press the **CLEAR** button. The unit should restart and fire.

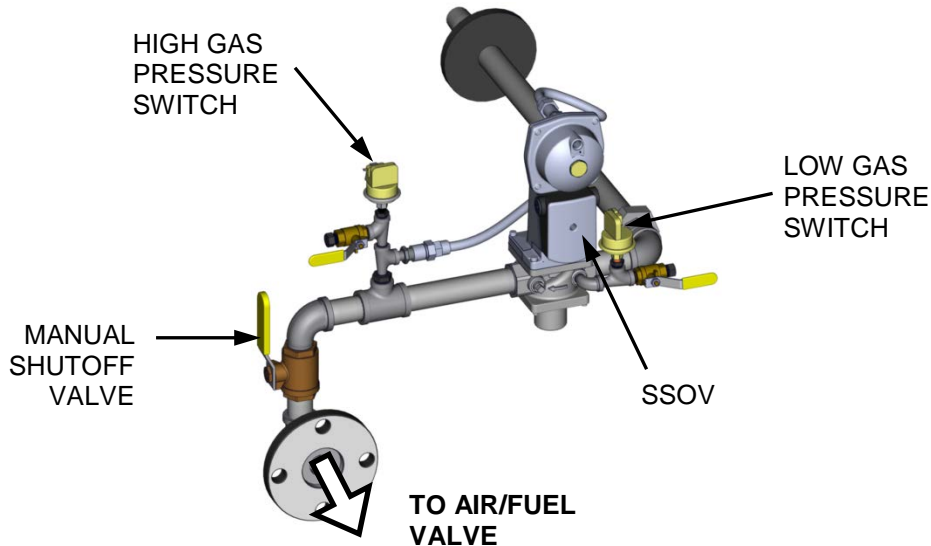


Figure 5-3. Manual Gas Shut-Off Valve Location (INN1060 Gas Train)

5.8 AIR FLOW FAULT TESTS

These tests check the operation of the Blower Proof Switch and Blocked Inlet Switch shown in Figure 5-4.

Air Flow Fault Tests

1. Disable the blower output drive voltage as follows:
 - (a) Press the **MENU** key until **CONFIGURATION MENU** is displayed.
 - (b) Press the **▲** arrow key until the **ANALOG OUTPUT** function is displayed, then press the **CHANGE** key.
 - (c) Press the **▼** arrow key until **OFF** is displayed, then press the **ENTER** key.
2. Start the unit in the Manual Mode at a valve position of 25%.
3. The unit should shut down and execute an IGNITION RETRY cycle by performing the following steps:
 - (a) The unit will execute a 30 second re-ignition delay and display **WAIT RETRY PAUSE**.
 - (b) The unit will then execute a standard ignition sequence and display **WAIT IGNITION RETRY**.

Air Flow Fault Tests – Continued

4. The unit should perform two IGNITION RETRY cycles and then shut down on the third successive ignition attempt. The unit will display **AIRFLOW FAULT DURING PURGE**.
5. Re-enable the blower output drive voltage by performing the following steps:
 - (a) Press the **MENU** key until **CONFIGURATION MENU** is displayed.
 - (b) Press the **▲** arrow key until the **ANALOG OUTPUT** function is displayed, then press the **CHANGE** key.
 - (c) Press the **▲** arrow key until **VALVE POSITION 0-10V** is displayed, then press the **ENTER** key.
6. Once the unit has proved flame, turn off the blower by going to the Configuration Menu, Analog Output menu item and select **OFF**.
7. The Blower Proof Switch will open and the blower should stop. The unit should shut down and display **AIRFLOW FAULT DURING RUN**.
8. Go to the Configuration Menu, Analog Output item and select **VALVE POSITION 0-10v**.
9. Press the **CLEAR** button. The unit should restart.
10. Next, check the operation of the Blocked Inlet Switch located on the inlet side of the Air/Fuel Valve (Figure 5-4).
11. Ensure that the sheet metal panels are securely installed on the water heater and the unit is running.
12. At the rear of the unit, partially block the air inlet (Figure 5-5) with a plywood sheet or metal plate.
13. The unit should shut down and again display **AIRFLOW FAULT DURING RUN**.
14. Unblock the air inlet and press the **CLEAR** button. The unit should restart.


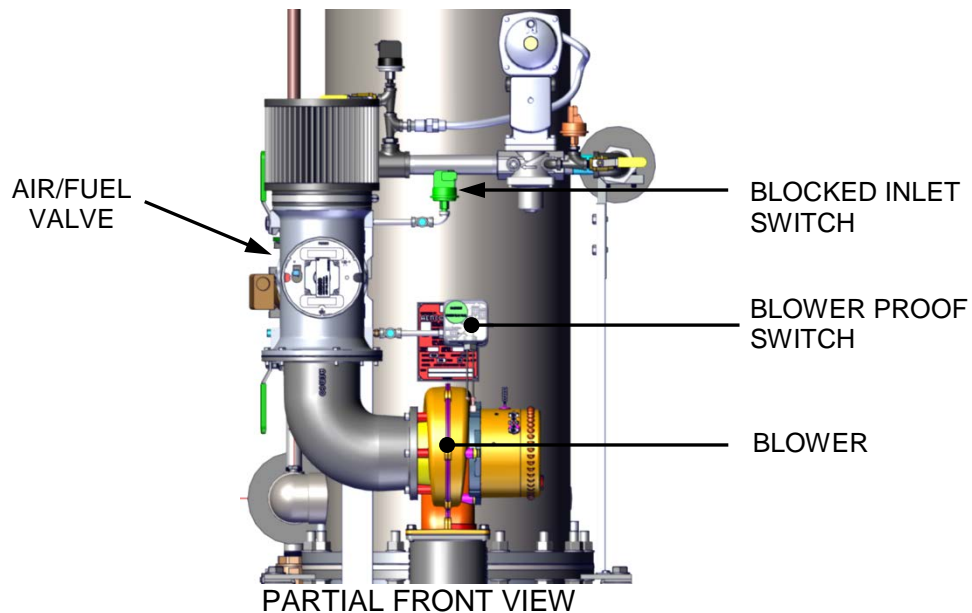


Figure 5-4. Blower Proof & Blocked Inlet Switch Locations

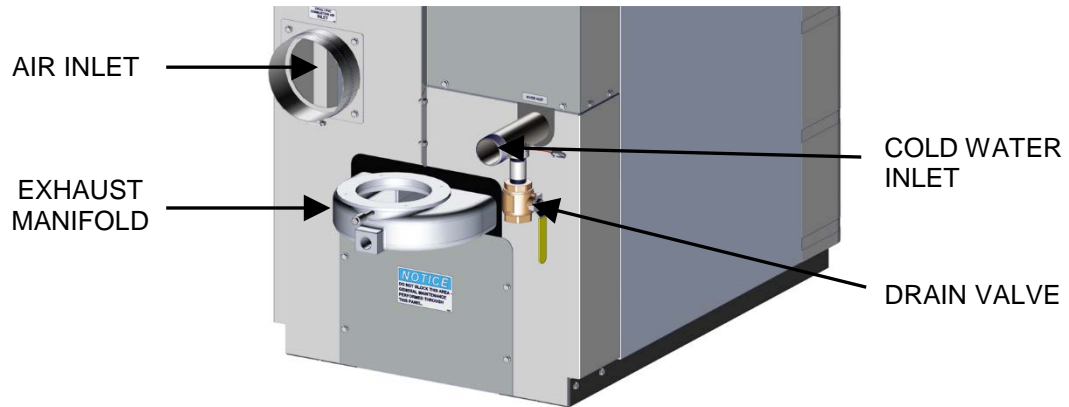

PARTIAL REAR VIEW

Figure 5-5. Water Heater Rear View Showing Air Inlet Location

5.9 SSOV PROOF OF CLOSURE SWITCH

The SSOV shown in Figure 5-1 contains the proof of closure switch. The proof of closure switch circuit is checked as follows:

SSOV Proof of Closure Switch

1. Set the unit's **ON/OFF** switch to the **OFF** position.
2. Place the unit in Manual Mode and set the valve position between 25% and 30%
3. Refer to Figure 5-1 and locate the SSOV.
4. Remove the cover from the SSOV by loosening the screw shown in Figure 5-6. Lift off the cover to access the terminal wiring connections.
5. Disconnect wire #148 from the SSOV to "open" the proof of closure switch circuit.
6. The unit should fault and display **SSOV SWITCH OPEN**.
7. Replace wire #148 and press the **CLEAR** button.
8. Set the **ON/OFF** switch to **ON** to start the unit.
9. Remove the wire again when the unit reaches the purge cycle and **PURGING** is displayed.
10. The unit should shut down and display **SSOV FAULT DURING PURGE**.
11. Replace the wire on the SSOV and press the **CLEAR** button. The unit should restart.

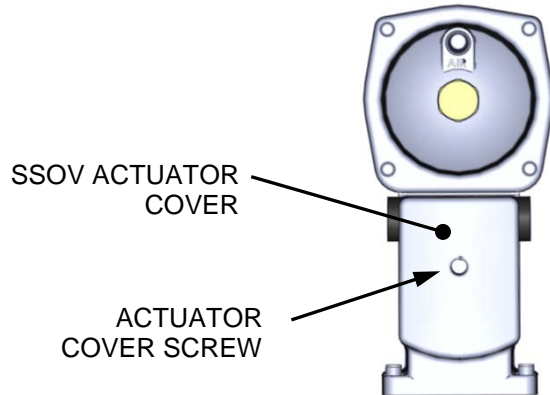


Figure 5-6. SSOV Actuator Cover Location

5.10 PURGE SWITCH OPEN DURING PURGE

The Purge Switch (and Ignition Switch) is located on the Air/Fuel Valve. To check the switch, proceed as follows:

Purge Switch Open During Purge

1. Set the unit's **ON/OFF** switch to the **OFF** position. Place the unit in manual mode and set the valve position between 25% and 30%.
2. Remove the Air/Fuel Valve cover by rotating the cover counterclockwise to unlock it (see Figure 5-7).
3. Remove one of the two wires (#171 or #172) from the Purge Switch (Figure 5-8).
4. Initiate a unit start sequence.
5. The unit should begin its start sequence, then shut down and display **PRG SWITCH OPEN DURING PURGE**.
6. Replace the wire on the Purge Switch and depress the **CLEAR** button. The unit should restart.

5.11 IGNITION SWITCH OPEN DURING IGNITION

The Ignition Switch (and the Purge Switch) is located on the Air/Fuel Valve. To check the switch, proceed as follows:

Ignition Switch Open During Ignition

1. Set the unit's **ON/OFF** switch to the **OFF** position.
2. Place the unit in Manual Mode and set the valve position between 25% and 30%.
3. Remove the Air/Fuel Valve cover (see Figure 5-7) by rotating the cover counterclockwise to unlock and lift up to remove.
4. Remove one of the two wires (#169 or #170) from the Ignition Switch (Figure 5-8).

Ignition Switch Open During Ignition – Continued

5. Initiate a unit start sequence.
6. The unit should begin its start sequence and then shut down and display **IGN SWITCH OPEN DURING IGNITION**.
7. Replace the wire on the Ignition Switch and press the **CLEAR** button. The unit should restart.

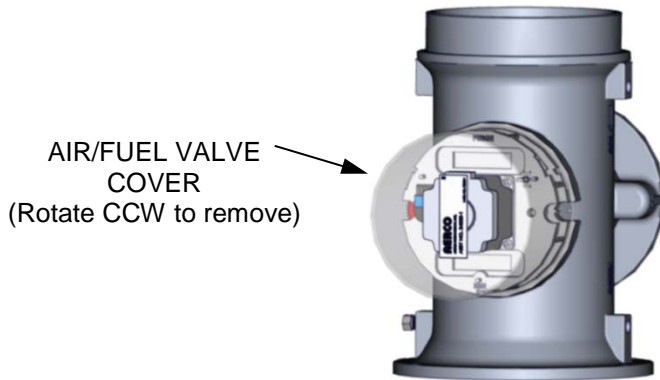


Figure 5-7. Typical Air/Fuel Valve Cover Location

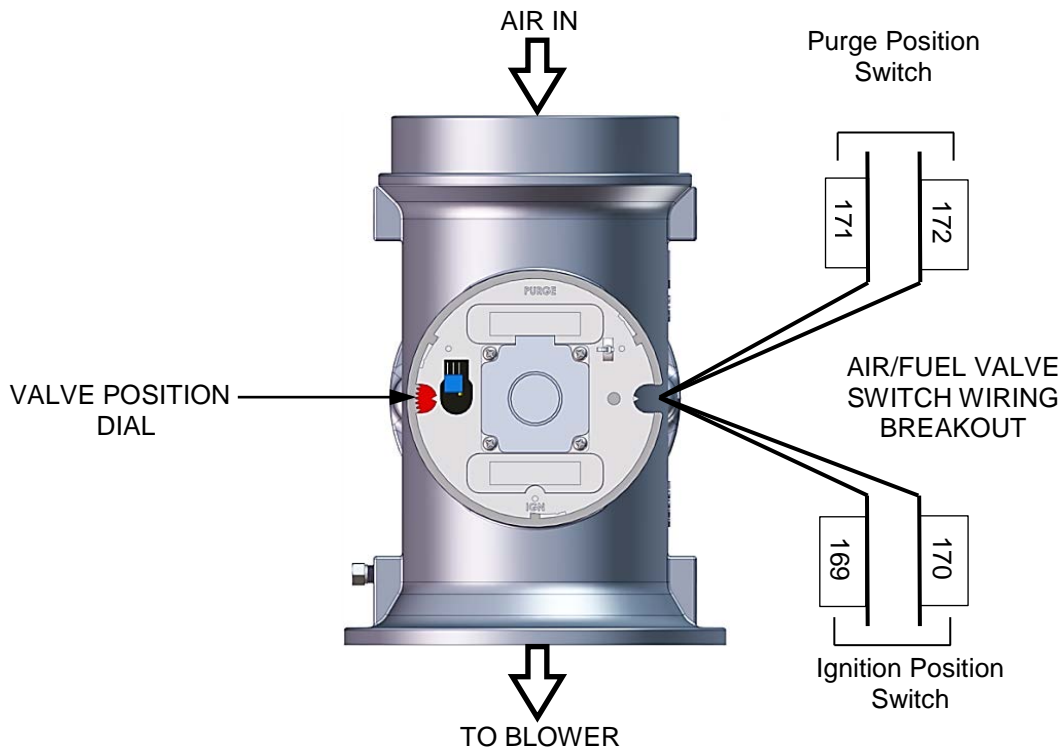


Figure 5-8. Air/Fuel Valve Purge and Ignition Switch Locations

5.12 SAFETY PRESSURE RELIEF VALVE TEST

Test the safety Pressure Relief Valve in accordance with ASME Pressure Vessel Code, Section VI.

CHAPTER 6. MAINTENANCE

6.1 MAINTENANCE SCHEDULE

The Innovation Water Heater requires regular routine maintenance to ensure continued reliable operation throughout the service life of the unit. For optimum operation, AERCO recommends that the following routine maintenance procedures be performed in the time periods specified in Table 6-1.

Appendix J contains a list of the recommended spare parts for maintenance of the Innovation Heater.



WARNING

TO AVOID PERSONAL INJURY, PRIOR TO SERVICING ENSURE THAT THE FOLLOWING GUIDELINES ARE STRICTLY OBSERVED:

- DISCONNECT THE AC SUPPLY BY TURNING OFF THE SERVICE SWITCH AND AC SUPPLY CIRCUIT BREAKER.
- SHUT OFF THE GAS SUPPLY AT THE MANUAL SHUT-OFF VALVE PROVIDED WITH THE UNIT
- ALLOW THE UNIT TO COOL TO A SAFE WATER TEMPERATURE TO PREVENT BURNING OR SCALDING

Table 6-1 - Maintenance Schedule

Section	Item	6 Mos.	12 Mos.	24 Mos.	Labor Time
6.2	Igniter (66023)	*Inspect	Inspect	Replace	15 mins.
6.3	Flame Detector (66018)	*Inspect	Inspect	Replace	15 mins.
6.4	Combustion Calibration	*Check	Check		1 hr.
6.5	Testing of Safety Devices		Test		20 mins.
6.6	Fireside Inspection			Inspect & Clean	2 hrs.
6.7	Waterside Inspection	*Inspect		Inspect	1 hr.
6.8	Heat Exchanger Cleaning		Inspect & Clean (as required)		2 hrs.
6.9	Condensate Drain Trap	*Inspect	Inspect & Clean		30 mins.
6.10	Air Filter (59138)		Clean or Replace		5 mins.

* Only performed after initial 6 month period after initial startup.

6.2 IGNITER

The igniter is located on the flange of the blower-side intake manifold located at the bottom of the unit's heat exchanger. The igniter part number (66023) is the same for Natural Gas and Propane units. Figure 6-1 shows the blower-side intake manifold removed from the heater and indicates the locations of the igniter, flame detector and other related components.

The igniter may be hot, therefore, care should be exercised to avoid burns. It is easier to remove the igniter from the unit after the unit has cooled to room temperature.

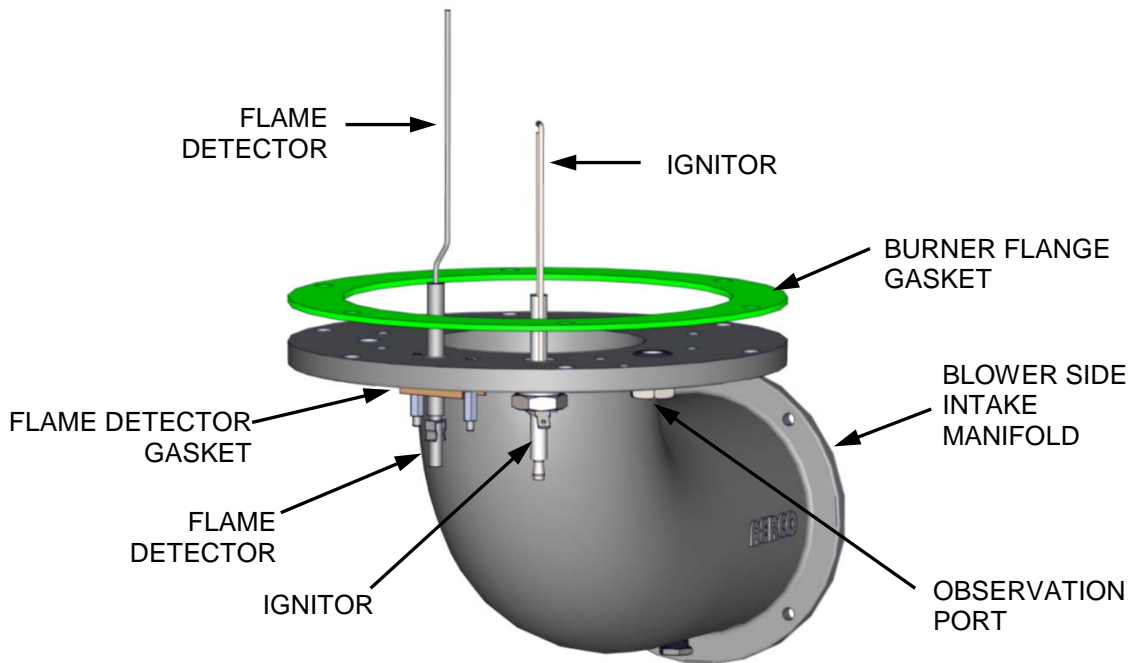


Figure 6-1. Blower-Side intake Manifold With Igniter & Flame Detector

To inspect/replace the Igniter:

Igniter Inspection/Replacement

1. Set the **ON/OFF** switch on the control panel, to the **OFF** position. Disconnect AC power from the unit.
2. Remove the side and rear panels from the unit.
3. Disconnect the ignition cable and ground wire from the Igniter.
4. Next, loosen and remove the igniter from the intake manifold flange using a 1" open-end wrench.
5. Check the igniter for evidence of erosion or carbon build-up. If there is evidence of substantial erosion or carbon build-up, the igniter should be replaced. If carbon build-up is present, clean the component using fine emery cloth. Repeated carbon build-up is an indication that the combustion settings of the unit should be checked. Refer to Chapter 4 for combustion calibration procedures.
6. Prior to reinstalling the igniter, a high temperature, conductive, anti-seize compound must be applied to the threads.

Igniter Inspection/Replacement – *Continued*

NOTE

If a replacement igniter is being installed, clocking (indexing) washers will be included with the replacement part. These washers may be needed to properly position the ground tab of the igniter to ensure that it is pointing outward toward the perimeter of the intake manifold flange.

7. Refer to Figure 6-2 and reinstall the igniter on the intake manifold flange. Install clocking washers as needed, to ensure that the igniter ground tab is pointing outward toward the perimeter of the intake manifold flange. Torque to 15 ft-lbs. Do not over tighten.

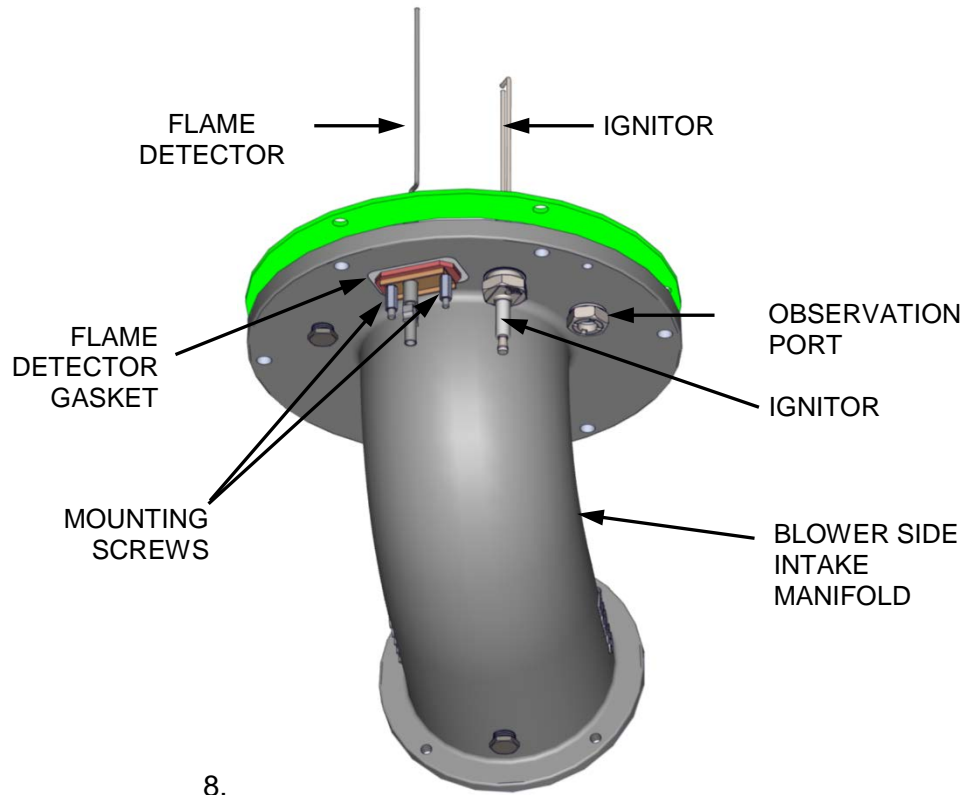


Figure 6-2. Igniter & Flame Detector Mounting Details

9. Reconnect the igniter cable and ground wire.
10. Reinstall the side and rear panels on the unit.

6.3 FLAME DETECTOR

Flame detector (part no. 66018) is used on ALL Innovation Water Heater Models. The flame detector is also located on the flange of the blower-side intake manifold as shown in Figures 6-1 and 6-2. The flame detector may be hot. Allow the unit to cool sufficiently before removing the flame detector.

To inspect or replace the flame detector:

Flame Detector Inspection/Replacement

1. Set the **ON/OFF** switch on the control panel, to the **OFF** position. Disconnect AC power from the unit.
2. Remove the side and rear panels from the unit.
3. Disconnect the flame detector lead wire.
4. Remove the two (2) hex standoffs securing the flame detector to the intake manifold (Figures 6-1 and 6-2). The flame detector is secured to the burner intake manifold with one (1) #10-32 and one (1) #8-32 hex standoff.
5. Remove the flame detector and gasket from the manifold flange.
6. Thoroughly inspect the flame detector. If eroded, the detector should be replaced. Otherwise, clean the detector with a fine emery cloth.
7. Reinstall the flame detector and flame detector gasket.
8. Reconnect the flame detector lead wire.
9. Reinstall the side and rear panels on the unit.

6.4 COMBUSTION CALIBRATION

Combustion settings must be checked at the intervals shown in Table 6-1 as part of the maintenance requirements. Refer to Chapter 4 for combustion calibration instructions.

6.5 SAFETY DEVICE TESTING

Systematic and thorough tests of the operating and safety devices should be performed to ensure that they are operating as designed. Also, certain code requirements specify that these tests be performed on a scheduled basis. Test schedules must conform to local jurisdictions. The results of the tests should be recorded in a log book. See Chapter 5 for Safety Device Test Procedures.

6.6 FIRESIDE INSPECTION

Fireside inspection of the Innovation Water Heater will include removal of the exhaust manifold, Blower-side intake manifold, and the burner assembly from the Innovation Water Heater.

The purpose of this inspection is to check for the formation of deposits on the inside of the heat exchanger tubes, exhaust manifold, and/or the burner assembly. These deposits can be caused by the presence of even trace amounts of chlorides and/or sulfur, in the combustion air and fuel sources. Such deposits can be influenced by the extent of the condensing operation and the chloride and sulfur levels that can vary significantly from application to application.

Innovation Water Heaters Installation, Operation & Maintenance Manual

CHAPTER 6 – MAINTENANCE

Since the fireside inspection will include removal of the exhaust manifold, burner assembly and blower-side intake manifold from the Innovation Water Heater, the following replacement gaskets will be necessary for reassembly upon completion of the inspection:


Part No.	Description
18899	Burner Flange Gasket
81150	Flame Detector Gasket
124749	Fiber Frax Gasket

The blower-side intake manifold may be hot. Therefore, allow the unit to cool sufficiently before starting the removal process described in the following steps.

Fireside Inspection

1. Set the **ON/OFF** switch on the control panel, to the **OFF** position. Disconnect AC power from the unit and turn off the gas supply.
2. Remove the side and rear panels from the unit. Also remove the bottom panel of the cabinet to expose the mechanical room floor beneath the burner. This is need to provide clearance for pulling the burner.
3. Refer to Figures 6-3 and 6-4 to locate the blower-side intake manifold (part no. 44106) at the bottom of the unit's heat exchanger.
4. Disconnect the lead wire from the flame detector installed on the intake manifold flange (Figure 6-2).
5. Remove the two (2) hex standoffs securing the flame detector to the intake manifold (Figures 6-1 and 6-2). The flame detector is secured to the burner intake manifold with one (1) #10-32 and one (1) #8-32 hex standoff.
6. Remove the flame detector and gasket from the blower side intake manifold flange.
7. Disconnect the cable from the igniter (66023), which is also installed on the blower-side intake manifold flange.
8. Next, loosen and remove the igniter from the intake manifold flange using a 1" open-end wrench.
9. Refer to Figure 6-3. Loosen and remove the four (4) 1/4-20 cap screws securing the blower side of the intake manifold (44106). **DO NOT REMOVE** the two 1/4-20 screws and nuts securing the manifold support bracket.

Fireside Inspection - Continued

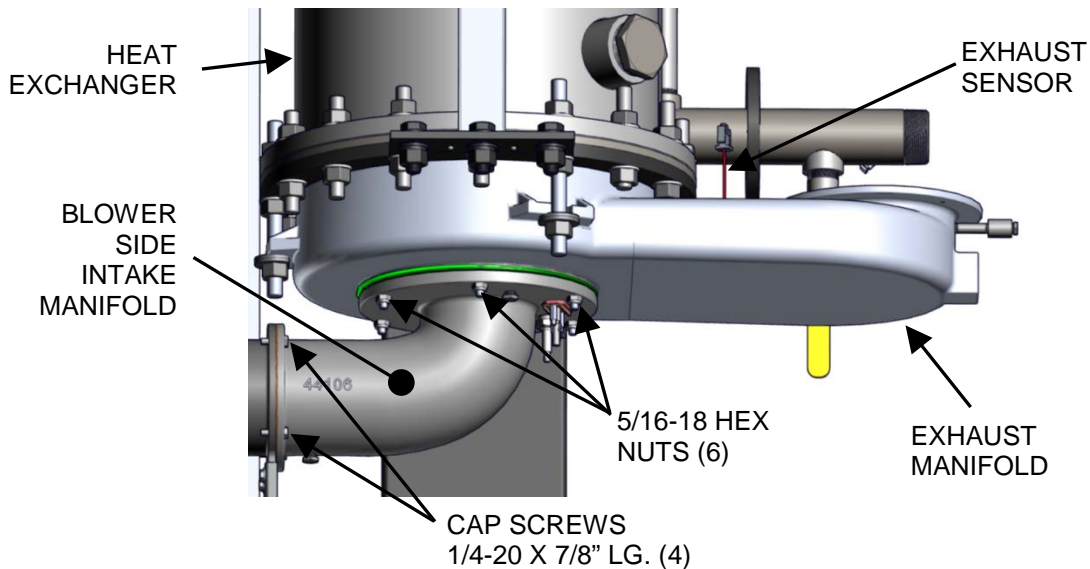

PARTIAL RIGHT-SIDE VIEW (SUPPORT BRACKET REMOVED)

Figure 6-3. Blower-Side Intake Manifold & Exhaust Manifold Locations

⚠ CAUTION ⚠

The intake manifold, burner and exhaust manifold assemblies weigh approximately 25 pounds. Use care when removing these assemblies in the following steps.

10. While supporting the blower-side intake manifold, loosen and remove the six (6) 5/16-18 hex nuts securing it to the studs protruding from the exhaust manifold.
11. Carefully lower and remove the blower side intake manifold (44106), burner assembly (46023), burner gasket (18899) and fiber frax gasket (124749) from the unit. See Figures 6-3 and 6-4.
12. Disconnect the exhaust temperature sensor (Figure 6-3) by unscrewing it from the exhaust manifold.
13. While supporting the exhaust manifold, remove the two (2) side nuts (Figure 6-5) securing the manifold to the heat exchanger. Loosen, but **do not remove** the third nut nearest to the front of the unit.
14. Remove the exhaust manifold (44085) from the unit.
15. Inspect the exhaust manifold and burner assemblies for debris. Clean out debris as necessary.
16. This completes the fireside inspection of the unit. Proceed to step 17 and reassemble the unit as indicated.

Fireside Inspection - Continued


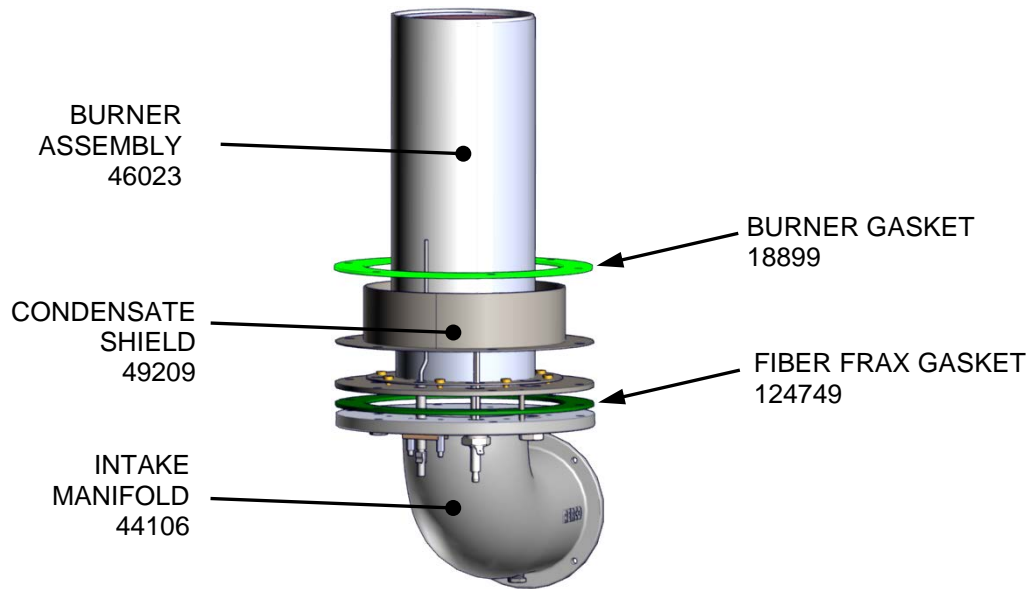


Figure 6-4. Innovation Heater – Partial Left-Side View

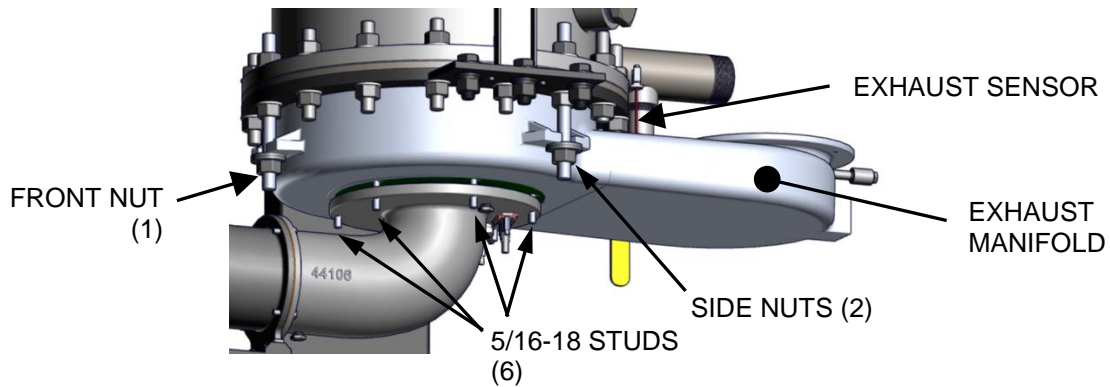


PARTIAL RIGHT-SIDE VIEW WITH SUPPORT REMOVED

Figure 6-5. Innovation Heater – Partial Cut-Away View

NOTE

If the unit contains a Combustion Chamber Liner (p/n 161151) it can be removed and discarded. This part has been eliminated from all Innovation Water heaters.

Fireside Inspection – Continued

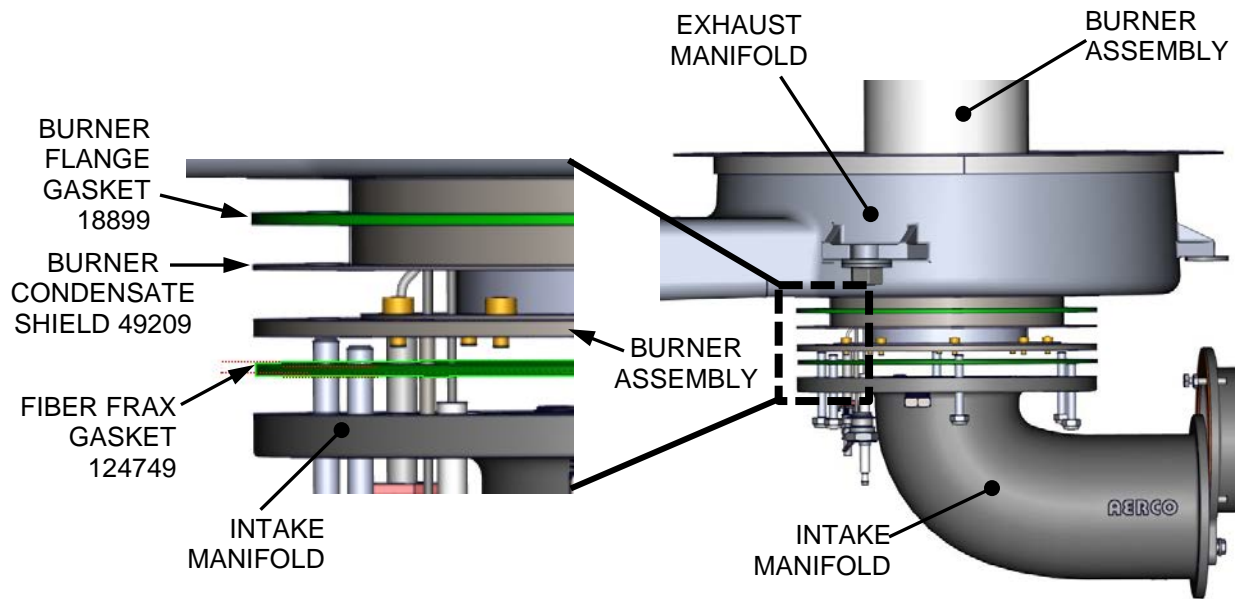

BURNER, BLOWER AND EXHAUST MANIFOLD

Figure 6-6. Combustion Chamber Gasket Locations

IMPORTANT

During reassembly, apply high-temperature, anti-seize lubricant to the threads of the igniter and grounding screw. Also, ensure that the igniter are properly positioned and are not contacting other components. Torque the igniter to 15 ft-lbs.

17. Beginning with the exhaust manifold assembly removed in step 14, reinstall all components in the reverse order in which they were removed.

6.7 WATERSIDE INSPECTION

The waterside of the heating surfaces may be inspected by removal of the top heater head (see Figure 6-7). Prior to performing the inspection, ensure that the following replacement gaskets are available:

- GP-18556 Release Gasket
- GP-18532 Shell Gasket

To inspect the waterside of the heat exchanger, proceed as follows:

Waterside Inspection

1. Disconnect the electrical power to the unit.
2. Close the water inlet, outlet, and recirculation shut-off valves to the unit.
3. Carefully open the drain valve while opening the relief valve on the rear of the unit to relieve pressure and allow air into the shell.
4. Remove the wing nut from the top center of the shell cap and remove the cap.
5. Remove the nuts and cap screws from the upper head. Remove the upper head and upper head-liner, (See Figure 6-7).
6. Inspect and clean the heat exchanger tubes of scale and all gasket surfaces thoroughly before reassembling the upper head. AERCO recommends that NEW gaskets be used when reassembling.
7. Place a shell head gasket on top of the shell ring first, then place the release gasket on top of the shell head gasket. Align the gasket holes with those in the shell ring.
8. Place the upper head liner on top of the gaskets.
9. Place the upper head on next aligning the holes.
10. Reassemble the cap screws and nuts through the upper head and shell ring. Cross tighten the nuts to approximately 75 ft.-lb. torque to obtain a uniform seating, then progressively tighten the nuts to 150 ft.-lb.
11. Replace the unit Cap. Close the drain valve and reopen the inlet, outlet, and recirculation valve.

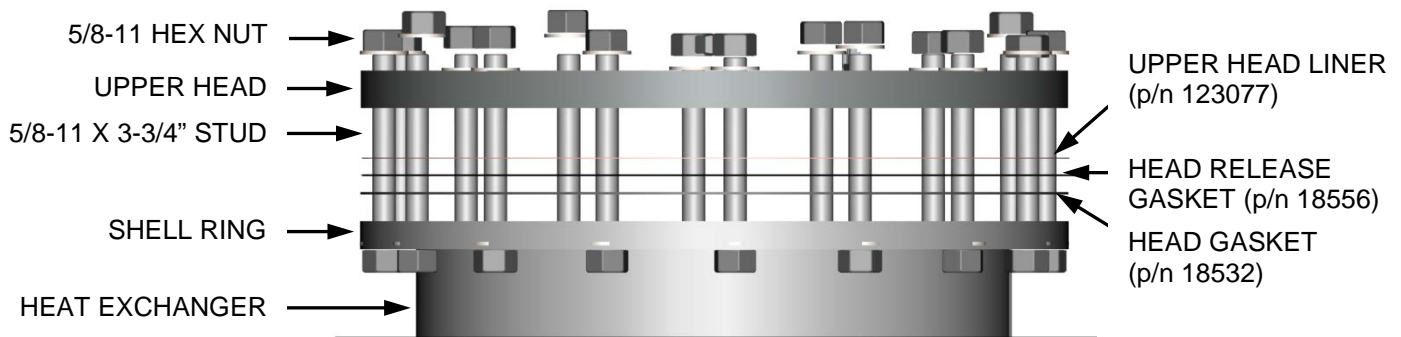


Figure 6-7. Flat Style Head Configuration

6.8 HEAT EXCHANGER CLEANING

For hard water installations, AERCO highly recommends use of its Scale Reducer system. The Scale Reducer, Model SR300, is strongly recommended for installations in areas with hard water (>3.5 grains/gal). It provides an economical, maintenance free treatment of hard water without the use of salt or any chemicals. The SR300 prevents new scale build-up and eliminates existing build-up in water heaters, boilers and storage tanks, hot water piping, valves, recirculation lines and pumps, mixing valves, showerheads and other plumbing fixtures. This eliminates the associated heat exchanger overheating and lets the water heater continue to perform at its peak efficiency (low-water heating cost). In addition to reduced inspection frequency, the periodic maintenance to remove and flush the water heater for scale deposits is no longer necessary.

Alternatively, AERCO recommends that the heat exchanger of the unit be cleaned annually to maintain maximum heat transfer efficiencies using a solution of HydroSkrub and water. HydroSkrub is distributed by AERCO International, Inc. and is designed to dissolve the toughest water scale, lime, mud and rust deposits from virtually any type of water-based equipment.

⚠ CAUTION ⚠

Please review MSDS, specifications, and our website (www.aerco.com) for additional information, or call technical service at (800) 526-0288.

⚠ CAUTION ⚠

Do not drain the unit without venting the shell! A vacuum in the unit may displace the head liner causing serious damage not covered by warranty.

6.8.1 Pumping System Set-Up Instructions

A sample pumping set-up diagram is shown in Figure 6-8 for an Innovation Water Heater. As this diagram shows, heat exchanger cleaning is accomplished by pumping the HydroSkrub solution from a large circulating bucket to the heat exchanger drain valve, through the heat exchanger and then out through the output connection of the heater. Set up the pumping system as follows:

Set-Up Instructions

1. Turn off the water heater and close the inlet and outlet isolation valves.
2. Open the drain valve at the rear of the heater and drain at least half of the heat exchanger water-side volume. When full Innovation models hold approximately the gallons of water listed below:
 - INN600: 24.5 gallons (drain at least 12.25 gallons)
 - INN800 24.5 gallons (drain at least 12,25 gallons)
 - INN1060: 23 gallons (drain at least 11.5 gallons)
 - INN1350 20.6 gallons (drain at least 10.3 gallons)

For the Innovation model being cleaned, drain at least the amount of eater shown in parentheses.
3. Prepare a 50% solution of HydroSkrub and clean water. The amount of the solution should be approximately equal to the full volume of water that the heat exchanger holds.
4. Mix 11 gallons of HydroSkrub with 11 gallons of water to provide a 50% solution.
5. Close the unit drain valve and connect a suitable size bucket and pump to the unit drain as shown in Figure 6-8.
6. Install a “T”, ball valve and hose connection in the outlet piping of the heater (Figure 6-8). Route the hose back to the top of the circulation bucket.

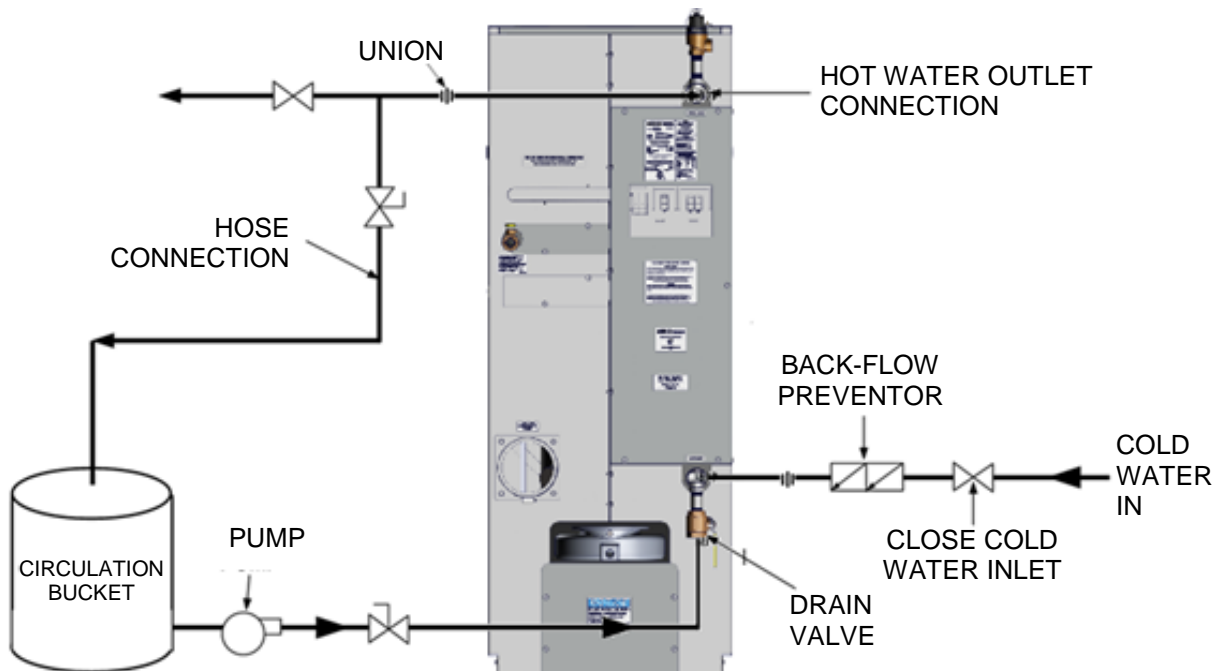


Figure 6-8. Sample Heat Exchanger Cleaning Set-Up

6.8.2 Cleaning Procedure

Cleaning Procedure

1. Slowly add the prescribe amount of the HydroSkrub solution to the circulating bucket.
2. Open the drain valve, outlet hose connection valve and turn on the pump. Periodically check for leaks and maintain the liquid level in the bucket. A lowering volume level is an indication that there is an open drain in the system.
3. Check the cleaning circuit to ensure that the HydroSkrub solution is flowing from the circulation bucket, through the pump and the heater and back to the top of the top of the bucket.
4. Return discharge foaming indicates an active HydroSkrub solution and the presence of mineral deposits in the equipment.
5. Additional HydroSkrub and/or water may be required to maintain circulation and to prevent the pump from cavitating.
6. Circulate the cleaning solution through the heat exchanger and piping for 1 to 3 hours. Estimate the circulation period based on the time in service and water hardness. When the foaming action stops, HydroSkrub strength is depleted (two pounds of deposits removed per gallon used) or the equipment is free from calcium and other water-formed mineral deposits.
7. Periodically test the solution for effectiveness to determine if more HydroSkrub is needed. Refer to “Testing HydroSkrub Effectiveness” in the next section for details. If the cleaning solution is expended before circulation time is up, additional HydroSkrub will be needed and circulation time may be extended to complete the cleaning.
8. Upon completion of the cleaning process, begin flushing the solution by adding clean water to the circulation bucket, then disconnect the return valve and hose connection from the top of the circulating bucket and thoroughly flush. Continue water flushing the equipment for a minimum of 10 minutes or until discharge runs clear.
9. HydroSkrub is biodegradable, and in most instances may be purged down sewers. Check with local authorities before disposing of any complex compositions
10. Turn off water, shut off the pump and immediately close discharge valves to prevent backflow.
11. Completely drain pump bucket. Disconnect the hoses from equipment and thoroughly rinse the bucket, pump, and associated hoses used.

6.8.3 Testing HydroSkrub Effectiveness

There are two methods of testing the effectiveness of HydroSkrub during cleaning: the calcium carbonate spot test of the circulating solution and the charting of a trend in the pH of the cleaning solution.

Calcium Carbonate Spot Test

A calcium carbonate spot test is performed by exposing a form of calcium carbonate to the HydroSkrub solution. Samples of the deposit, a Tums or Roloids tablet, or bare concrete can be used. Observe the reaction of the HydroSkrub solution on the calcium carbonate. Foaming and bubbling indicates the solution is still active. Little or no reaction indicates that the solution is expended. This test should be performed near the end of the circulating time. If the solution has been expended, more HydroSkrub will be required to complete the job. If the solution is still active at the end of the time, all the scale has been dissolved.

pH Trend Charting

The initial pH of the cleaning solution will measure between 1-3 (See pH sheet on HydroSkrub packaging). To test the effectiveness of the circulating solution as a function of pH, take readings at regular intervals and chart as a trend. Note that the deposits can cause a premature jump in the pH. After circulating for approximately 75% of the cycle time, begin testing the pH at 10-15 minute intervals. Once the solution's pH reads 6.0-7.0 on three or more consecutive readings, the solution is expended. If the pH reads below 6.0 after the circulating time, the application is clean.

6.9 CONDENSATE DRAIN TRAP

The Innovation Water Heater contains a condensate trap as shown in Chapter 2, Figure 2-7. The trap is located external to the unit and attached to the drain connection from the exhaust manifold. This trap should be inspected and, if necessary, cleaned to ensure proper operation.

Currently, two styles of the condensate traps are in use. Both styles perform the same functions and contain identical internal floats. However, the older style has a separate inlet adapter and the newer style contains a built-in adapter. Refer to Figure 6-9. Maintenance tasks for both styles are almost identical, however the newer style does not require an orifice gasket.

To inspect and clean the trap, proceed as follows:

Condensate Trap Inspection and Cleaning

1. Disconnect the external condensate trap by loosening the union pipe connection between the trap and the exhaust manifold drain.
2. Remove the connections on the inlet and outlet sides of the condensate trap shown in Figure 6-9.
3. Loosen the four (4) thumbscrews securing the cover on the condensate trap. Remove the cover.
4. Remove the float from the condensate trap.
5. For older style condensate traps, remove the orifice gasket shown in Figure 6-9.
6. Thoroughly clean the trap, float and orifice gasket (if so equipped). Also inspect the drain piping for blockage. If the trap cannot be thoroughly cleaned, replace the trap.
7. After the above items have been thoroughly cleaned and inspected, replace the orifice gasket (older style only) and the float in the condensate trap and replace the trap cover.
8. Reassemble all piping and hose connections to the condensate trap inlet and outlet. Reconnect the trap to exhaust manifold drain.

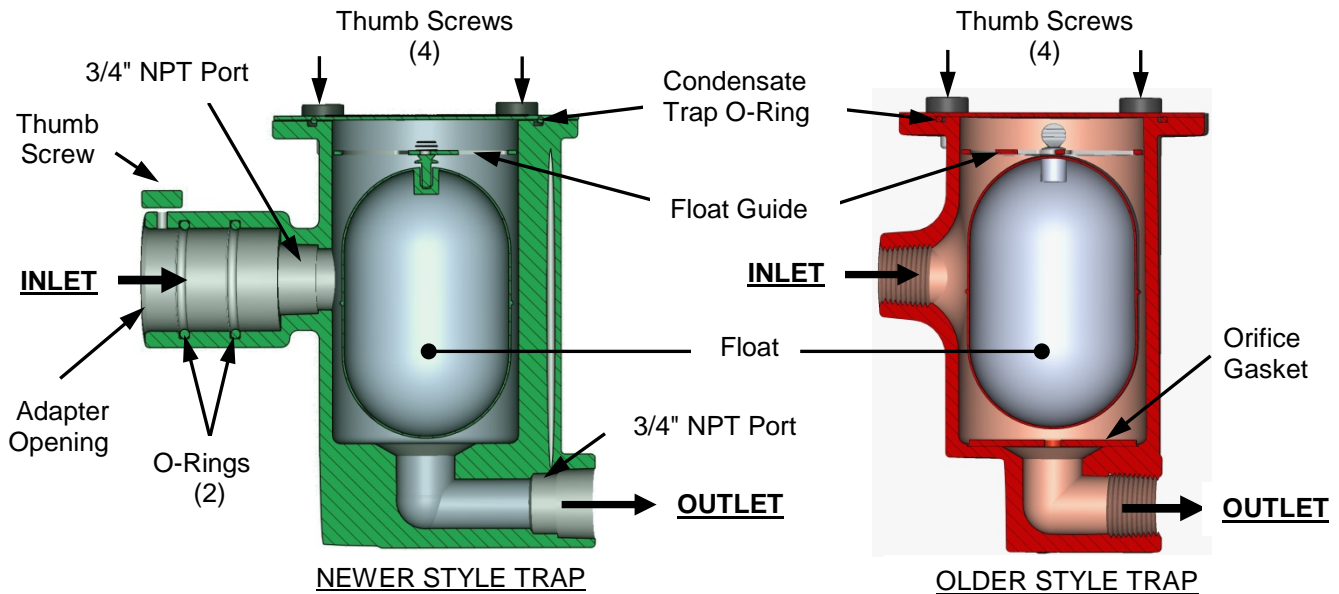


Figure 6-9. External Condensate Trap– Cross-Sections


6.10 AIR FILTER REPLACEMENT

The Innovation heater is equipped with an air filter (part no. 59138) which should be cleaned or replaced every 12 months. The air filter is located at the inlet of the air fuel valve as shown in Figure 6-10.

To inspect/replace the air filter, proceed as follows:

Air Filter Replacement

1. Set the **ON/OFF** switch on the control panel, to the **OFF** position. Disconnect AC power from the unit
2. Remove the side panels from the unit.
3. Refer to Figure 6-10 and locate the air filter attached to the air/fuel valve inlet.
4. Using a flat-tip screwdriver or 5/16" nut driver, loosen the clamp securing the filter to the inlet flange of the air/fuel valve. Remove the filter and clamp.
5. Each replacement air filter is equipped with its own clamp. Therefore, simply install the replacement air filter on inlet flange of the air fuel valve and tighten the clamp with a flat-tip screwdriver or 5/16" nut driver.
6. Replace the side panels on the unit and return heater to service use.

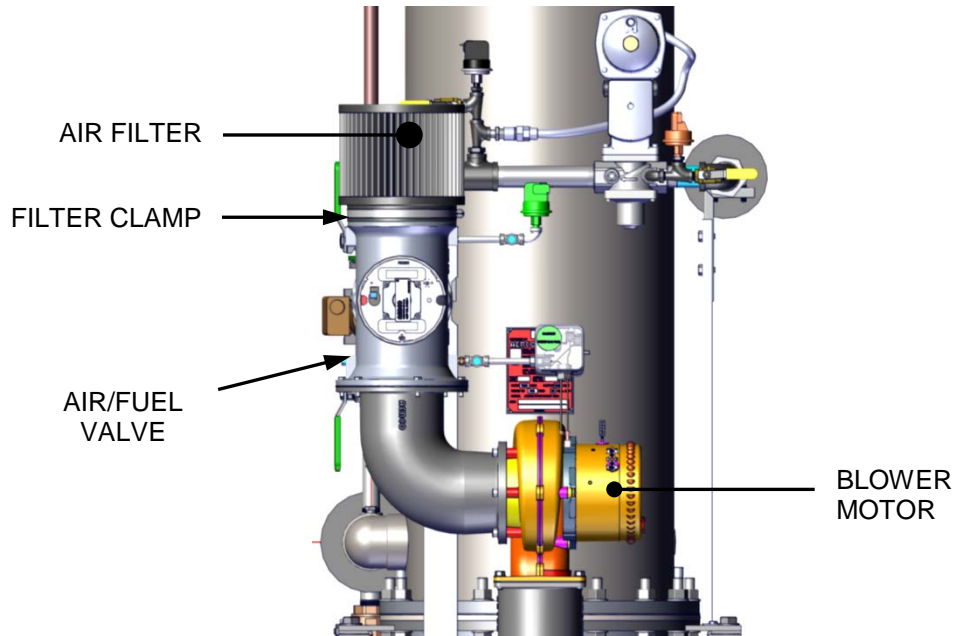

BARE HEATER – PARTIAL FRONT VIEW

Figure 6-10. Air Filter Mounting Location

6.11 SHUTTING THE WATER HEATER DOWN FOR AN EXTENDED PERIOD OF TIME

If the heater is to be taken out of service for an extended period of time (one year or more), complete the following instructions.

Extended Period Shut-Down

1. Set **ON/OFF** switch on the front panel to the **OFF** position to shut down the heater's operating controls.
2. Disconnect AC power from the unit.
3. Close the water inlet and outlet valves to isolate unit.
4. Close external gas supply valve.
5. Open relief valve to vent water pressure.

6.12 PLACING THE HEATER BACK IN SERVICE AFTER A PROLONGED SHUTDOWN

After a prolonged shutdown (one year or more), the following procedures must be followed:

Placing Heater Back In Service After Prolonged Shutdown

1. Review installation requirements included in Chapter 2.
2. Inspect all piping and connections to the unit.
3. Inspect exhaust vent, air duct (if applicable).
4. Perform initial startup per Chapter 4.
5. Perform safety device testing and scheduled maintenance procedures per Chapters 5 and 6 of this manual.

CHAPTER 7. TROUBLESHOOTING GUIDE

7.1 INTRODUCTION

This troubleshooting guide is intended to aid service/maintenance personnel in isolating the cause of a fault in a Innovation Water Heater. The troubleshooting procedures contained herein are presented in tabular form on the following pages. These tables are comprised of three columns labeled: Fault Indication, Probable Cause and Corrective Action. The numbered items in the Probable Cause and Corrective Action columns correspond to each other. For example, Probable Cause No. 1 corresponds to Corrective Action No. 1, etc.

NOTE

The front panel of the C-More Control Box contains an RS232 port which can be interfaced to a laptop computer or other suitable device. This RS232 communication feature permits service personnel to view menu items and data logs which can be useful in isolating faults. Refer to Chapter 7 of this manual for detailed RS232 communication set-up and procedures.

When a fault occurs in the unit, proceed as follows to isolate and correct the fault:

General Troubleshooting Instructions

1. Observe the fault messages displayed in the Control Box display.
2. Refer to the Fault Indication column in Troubleshooting Table 7-1 which follows and locate the Fault that best describes the existing conditions.
3. Proceed to the Probable Cause column and start with the first item (1) listed for the Fault Indication.
4. Perform the checks and procedures listed in the Corrective Action column for the first Probable Cause candidate.
5. Continue checking each additional Probable Cause for the existing fault until the fault is corrected.
6. Section 7.2 and Table 7-2 contain additional troubleshooting information which may apply when no fault message is displayed.

If the fault cannot be corrected using the information provided in the Troubleshooting Tables, contact your local AERCO Representative.

(This Page Is Intentionally Blank)

Innovation Water Heaters Installation, Operation & Maintenance Manual

CHAPTER 7 – TROUBLESHOOTING GUIDE

TABLE 7-1. WATER HEATER TROUBLESHOOTING

FAULT INDICATION	PROBABLE CAUSES	CORRECTIVE ACTION
AIRFLOW FAULT DURING IGNITION	<ol style="list-style-type: none"> 1. Blower stopped running due to thermal or current overload 2. Blocked Blower inlet or inlet ductwork 3. Blocked Blower proof switch 4. Blocked blocked-air inlet switch 5. Defective Blower proof switch 6. Defective blocked-air inlet switch 7. Loose temperature to AUX connection in I/O Box 8. Defective temperature sensor 9. Loose wire connection between the 0-10V signal from I/O box to the Blower Motor input 10. Defective I/O box 11. Wrong 0-10V output selection on the control box 12. Defective Air-Fuel Valve potentiometer 	<ol style="list-style-type: none"> 1. Check combustion blower for signs of excessive heat or high current drain that may trip thermal or current overload devices. 2. Inspect the inlet to the combustion blower including any ductwork leading up to the combustion blower for signs of blockage. 3. Remove the Blower proof switch and inspect for signs of blockage, clean or replace as necessary. 4. Remove the blocked-air inlet switch and inspect for signs of blockage, clean or replace as necessary. 5. Measure the Blower proof switch for continuity with the combustion blower running. If there is an erratic resistance reading or the resistance reading is greater than zero ohms, replace the switch. 6. Measure the blocked-air inlet switch for continuity with the combustion blower running. If there is an erratic resistance reading or the resistance reading is greater than zero ohms, replace the switch. 7. Check the actual inlet air temperature and measure voltage at AUX input in the I/O Box. Verify that the voltage conforms to the values shown in the tabular listing provided in Appendix C. 8. Refer to CORRECTIVE ACTION 7 and verify that the voltage conforms to the values shown in Appendix C. 9. Check wire connection from I/O Box 0-10V signal to the Blower Motor. 10. Measure voltage at the I/O box 0-10V output. A voltage of 8.2V equates to a 100% open valve position. 11. Check the <i>Analog Out</i> option on the C-More Configuration Menu. <i>Valve Position 0-10V</i> should be selected. 12. Check Air/Fuel Valve position at 0%, 50% and 100% open positions. The positions on the VALVE POSITION bargraph should match the dial readings on the Air/Fuel Valve dial.

Innovation Water Heaters Installation, Operation & Maintenance Manual

CHAPTER 7 – TROUBLESHOOTING GUIDE

TABLE 7-1. WATER HEATER TROUBLESHOOTING – Continued

FAULT INDICATION	PROBABLE CAUSES	CORRECTIVE ACTION
<p>AIRFLOW FAULT DURING PURGE</p>	<ol style="list-style-type: none"> 1. Blower not running or running too slow 2. Defective Air Flow Switch 3. Blocked Air flow Switch 4. Blocked Blower inlet or inlet ductwork. 5. No voltage to switch from control box. 6. PROBABLE CAUSES from 3 to 12 for AIRFLOW FAULT DURING IGNITION applies for this fault 	<ol style="list-style-type: none"> 1. Start the unit. If the blower does not run check the blower solid state relay for input and output voltage. If the relay is okay, check the blower. 2. Start the unit. If the blower runs, check the airflow switch for continuity. Replace the switch if there is no continuity. 3. Remove the air flow switch and inspect for signs of blockage, clean or replace as necessary. 4. Inspect the inlet to the combustion blower including any ductwork leading up to the combustion blower for signs of blockage. 5. Measure for 24 VAC during start sequence from each side of the switch to ground. If 24VAC is not present refer to qualified service personnel. 6. See CORRECTIVE ACTIONS from 3 to 12 for AIRFLOW FAULT DURING IGNITION.
<p>AIRFLOW FAULT DURING RUN</p>	<ol style="list-style-type: none"> 1. Blower stopped running due to thermal or current overload 2. Blocked Blower inlet or inlet ductwork 3. Blocked airflow switch 4. Defective airflow switch 5. Combustion oscillations 6. PROBABLE CAUSES from 3 to 16 for AIRFLOW FAULT DURING IGNITION applies for this fault 	<ol style="list-style-type: none"> 1. Check combustion blower for signs of excessive heat or high current draw that may trip thermal or current overload devices. 2. Inspect the inlet to the combustion blower including any ductwork leading up to the combustion blower for signs of blockage. 3. Remove the airflow switch and inspect for signs of blockage, clean or replace as necessary. 4. Measure the airflow switch for continuity with the combustion blower running. If there is an erratic resistance reading or the resistance reading is greater than zero ohms, replace the switch. 5. Run unit to full fire. If the unit rumbles or runs rough, perform combustion calibration. 6. See CORRECTIVE ACTIONS from 3 to 16 for AIRFLOW FAULT DURING IGNITION.

Innovation Water Heaters Installation, Operation & Maintenance Manual

CHAPTER 7 – TROUBLESHOOTING GUIDE

TABLE 7-1. WATER HEATER TROUBLESHOOTING – Continued

FAULT INDICATION	PROBABLE CAUSES	CORRECTIVE ACTION
DELAYED INTERLOCK OPEN	<ol style="list-style-type: none"> 1. Delayed Interlock Jumper not installed or removed. 2. Device proving switch hooked to interlocks is not closed 	<ol style="list-style-type: none"> 1. Check for a jumper properly installed across the delayed interlock terminals in the I/O box. 2. If there are 2 external wires on these terminals, check to see if an end switch for a device such as a pump, louver, etc. is tied these interlocks. Ensure that the device and or its end switch are functional. (jumper may be temporarily installed to test interlock)
FLAME LOSS DURING IGN	<ol style="list-style-type: none"> 1. Burner Ground Screw not installed or loose. 2. Worn flame detector 3. No spark from Spark Plug 4. Defective Ignition Transformer 5. Defective Ignition/Stepper (IGST) Board 6. Defective SSOV 7. Carbon or other debris on Burner. 	<ol style="list-style-type: none"> 1. Inspect and install/retighten Burner Ground Screw. 2. Remove and inspect the flame detector for signs of wear. Replace if necessary. 3. Close the internal gas valve in the unit. Install and arc a spark ignitor outside the unit. 4. If there is no spark, check for 120VAC at the primary side to the ignition transformer during the ignition cycle. 5. If 120VAC is not present, the IGST Board in the Control Box may be defective. Refer fault to qualified service personnel. 6. While externally arcing the spark ignitor, observe the open/close indicator in the Safety Shut-Off Valve to ensure it is opening. If the valve does not open, check for 120VAC at the valves input terminals. If 120VAC is not present, the IGST board in the Control Box may be defective. Refer fault to qualified service personnel. 7. Remove the burner and inspect for any carbon or debris. Clean and reinstall.

Innovation Water Heaters Installation, Operation & Maintenance Manual

CHAPTER 7 – TROUBLESHOOTING GUIDE

TABLE 7-1. WATER HEATER TROUBLESHOOTING – Continued

FAULT INDICATION	PROBABLE CAUSES	CORRECTIVE ACTION
FLAME LOSS DURING RUN	<ol style="list-style-type: none"> 1. Worn Flame Detector or cracked ceramic. 2. Defective Regulator. 3. Poor combustion calibration. 4. Debris on burner. 5. Blocked condensate drain. 	<ol style="list-style-type: none"> 1. Remove and inspect the Flame Detector for signs of wear or cracked ceramic. Replace if necessary. 2. Check gas pressure readings using a gauge or manometer into and out of the Air/Fuel Valve to ensure that the gas pressure into and out of the valve is correct. 3. Check combustion calibration. Adjust as necessary. 4. Remove the burner and inspect for any carbon or debris. Clean and reinstall. 5. Remove blockage in condensate drain.
HEAT DEMAND FAILURE	<ol style="list-style-type: none"> 1. The Heat Demand Relays on the Ignition/Stepper board failed to activate when commanded. 2. Relay is activated when not in Demand 	<ol style="list-style-type: none"> 1. Press CLEAR button and restart the unit. If the fault persists, replace Ignition/Stepper (IGST) Board. 2. Defective relay. Replace IGST Board.
HIGH EXHAUST TEMPERATURE	<ol style="list-style-type: none"> 1. Poor combustion calibration 2. Heat exchanger has scale. 	<ol style="list-style-type: none"> 1. Check combustion calibration using procedures in Chapter 4. 2. Clean heat exchanger using procedures in Chapter 6.
HIGH GAS PRESSURE	<ol style="list-style-type: none"> 1. Incorrect supply gas pressure. 2. Defective SSOV Actuator. 3. Defective High Gas Pressure Switch 	<ol style="list-style-type: none"> 1. Check to ensure gas pressure at inlet of SSOV is 2 psig maximum. 2. If gas supply pressure downstream of SSOV Actuator cannot be lowered to below 3.0" W.C. using the gas pressure adjustment screw (see section 4.3, step 10), the SSOV Actuator may be defective. 3. Remove the leads from the high gas pressure switch and measure continuity across the common and normally closed terminals with the unit not firing. Replace the switch if it does not show continuity.

Innovation Water Heaters Installation, Operation & Maintenance Manual

CHAPTER 7 – TROUBLESHOOTING GUIDE

TABLE 7-1. WATER HEATER TROUBLESHOOTING – Continued

FAULT INDICATION	PROBABLE CAUSES	CORRECTIVE ACTION
HIGH WATER TEMP SWITCH OPEN	<ol style="list-style-type: none"> 1. Faulty Water temperature switch. 2. Incorrect PID settings. 3. Faulty shell temperature sensor. 4. Unit in Manual mode 5. Unit setpoint is greater than Over Temperature Switch setpoint. 6. System flow rate changes are occurring faster than units can respond. 	<ol style="list-style-type: none"> 1. Test the temperature switch to insure it trips at its actual water temperature setting. 2. Check PID settings against Menu Default settings in the Appendix. If the settings have been changed, record the current readings then reset them to the default values. 3. Using the resistance charts in the Appendix C, Measure the resistance of Shell sensor and BTU sensor at a known water temperature. 4. If unit is in Manual Mode switch to Auto Mode. 5. Check setpoint of unit and setpoint of Temperature Switch; Ensure that the temperature switch is set higher than the unit's setpoint. 6. If the system is a variable flow system, monitor system flow changes to ensure that the rate of flow change is not faster than what the units can respond to.
HIGH WATER TEMPERATURE	<ol style="list-style-type: none"> 1. See HIGH WATER TEMPERATURE SWITCH OPEN. 2. Temp HI Limit setting is too low. 	<ol style="list-style-type: none"> 1. See HIGH WATER TEMPERATURE SWITCH OPEN. 2. Check Temp HI Limit setting.
IGN BOARD COMM FAULT	<ol style="list-style-type: none"> 1. Communication fault has occurred between the PMC board and Ignition/Stepper (IGST) board 	<ol style="list-style-type: none"> 1. Press CLEAR button and restart unit. If fault persists, contact qualified Service Personnel.
IGN SWTCH CLOSED DURING PURGE	<ol style="list-style-type: none"> 1. Air/Fuel Valve not rotating 2. Defective or shorted switch 	<ol style="list-style-type: none"> 1. Start the unit. The Air/Fuel Valve should rotate to the purge (open) position. If the valve does not rotate at all or does not rotate fully open, check the Air/Fuel Valve calibration. If calibration is okay, the problem may be in the Air-Fuel Valve or the Control Box. Refer to qualified service personnel 2. If the Air/Fuel Valve does rotate to purge, check the ignition switch for continuity between the N.O. and COM terminals. If the switch shows continuity when not in contact with the cam replace the switch.

Innovation Water Heaters Installation, Operation & Maintenance Manual

CHAPTER 7 – TROUBLESHOOTING GUIDE

TABLE 7-1. WATER HEATER TROUBLESHOOTING – Continued

FAULT INDICATION	PROBABLE CAUSES	CORRECTIVE ACTION
(continued)	3. Switch wired incorrectly 4. Defective Power Supply Board or fuse 5. Defective IGST Board	3. Check to ensure that the switch is wired correctly (correct wire numbers on the normally open terminals). If the switch is wired correctly, replace the switch 4. Check DS1 & DS2 LEDs on Power Supply Board. If they are not steady ON, replace Power Supply Board. 5. Check “Heartbeat” LED DS1 and verify it is blinking ON & OFF every second. If not, replace IGST Board
IGN SWTCH OPEN DURING IGNITION	1. Air/Fuel Valve not rotating to ignition position. 2. Defective ignition switch 3. Defective Power Supply Board or fuse 4. Defective IGST Board	1. Start the unit. The Air/Fuel Valve should rotate to the purge (open) position, then back to ignition position (towards closed) during the ignition cycle. If the valve does not rotate back to the ignition position, check the Air/Fuel Valve calibration. If calibration is okay, the problem may be in the Air/Fuel Valve or the Control Box. Refer fault to qualified service personnel. 2. If the Air/Fuel Valve does rotate to the ignition position, check the ignition position switch for continuity between the N.O. and COM terminals when in contact with the cam. 3. Check DS1 & DS2 LEDs on Power Supply Board. If they are not steady ON, replace Power Supply Board. 4. Check “Heartbeat” LED DS1 and verify it is blinking ON & OFF every second. If not, replace IGST Board.
INTERLOCK OPEN	1. Interlock jumper not installed or removed 2. Energy Management System does not have unit enabled. 3. Device proving switch hooked to interlocks is not closed.	1. Check for a jumper properly installed across the interlock terminals in the I/O box. 2. If there are two external wires on these terminals check any Energy Management system to see if they have the units disabled (a jumper may be temporarily installed to see if the interlock circuit is functioning). 3. Check that proving switch for any device hooked to the interlock circuit is closing and that the device is operational.

Innovation Water Heaters Installation, Operation & Maintenance Manual

CHAPTER 7 – TROUBLESHOOTING GUIDE

TABLE 7-1. WATER HEATER TROUBLESHOOTING – Continued

FAULT INDICATION	PROBABLE CAUSES	CORRECTIVE ACTION
LINE VOLTAGE OUT OF PHASE	<ol style="list-style-type: none"> 1. Line and Neutral switched in AC Power Box. 2. Incorrect power supply transformer wiring. 	<ol style="list-style-type: none"> 1. Check hot and neutral in AC Power Box to ensure they are not reversed. 2. Check transformer wiring, in AC Power Box, against the power box transformer wiring diagram to ensure it is wired correctly.
LOW GAS PRESSURE	<ol style="list-style-type: none"> 1. Incorrect supply gas pressure. 2. Defective Low Pressure Gas Switch. 	<ol style="list-style-type: none"> 1. Measure gas pressure upstream of the SSOV Actuator(s) with the unit firing. For both FM and DBB gas trains, ensure it is between 4.0" W.C. and 14" W.C. (see section 2.10.1). 2. Measure gas pressure at the low gas pressure switch. If it is greater than 2.6" W.C., measure continuity across the switch and replace if necessary.
LOW WATER LEVEL	<ol style="list-style-type: none"> 1. Insufficient water level in system. 2. Defective water level circuitry. 3. Defective water level probe. 	<ol style="list-style-type: none"> 1. Check system for sufficient water level. 2. Test water level circuitry using the Control Box front panel LOW WATER TEST and RESET buttons. Replace water level circuitry if it does not respond. 3. Check continuity of probe end to the shell, change probe if there is no continuity.
MODBUS COMM FAULT	Unit not seeing information from Modbus network	Check network connections. If fault persists, contact qualified Service Personnel.
PRG SWTCH CLOSED DURING IGNITION	<ol style="list-style-type: none"> 1. A/F Valve rotated open to purge and did not rotate to ignition position. 2. Defective or shorted switch. 	<ol style="list-style-type: none"> 1. Start the unit. The Air/Fuel Valve should rotate to the purge (open) position, then back to ignition position (towards closed) during the ignition cycle. If the valve does not rotate back to the ignition position, check the Air/Fuel Valve calibration. If calibration is okay, the problem may be in the Air/Fuel Valve or the Control Box. Refer fault to qualified service personnel. 2. If the Air/Fuel Valve does rotate to the ignition position, check the purge switch for continuity between the N.O. and COM terminals. If the switch shows continuity when not in contact with the cam, check to ensure that the switch is wired correctly (correct wire numbers on the normally open terminals).

Innovation Water Heaters Installation, Operation & Maintenance Manual

CHAPTER 7 – TROUBLESHOOTING GUIDE

TABLE 7-1. WATER HEATER TROUBLESHOOTING – Continued

FAULT INDICATION	PROBABLE CAUSES	CORRECTIVE ACTION
(continued)	3. Switch wired incorrectly. 4. Defective Power Supply Board or fuse 5. Defective IGST Board	3. If the switch is wired correctly, replace the switch. 4. Check DS1 & DS2 LEDs on Power Supply Board. If they are not steady ON, replace Power Supply Board. 5. Check “Heartbeat” LED DS1 and verify it is blinking ON & OFF every second. If not, replace IGST Board.
PRG SWTCH OPEN DURING PURGE	1. Defective purge switch. 2. No voltage present at switch. 3. Switch wired incorrectly. 4. Defective Power Supply Board or fuse 5. Defective IGST Board	1. If the air-fuel valve does rotate, check purge switch for continuity when closing. Replace switch if continuity does not exist. 2. Measure for 24 VAC from each side of the switch to ground. If 24VAC is not present, refer fault to qualified service personnel. 3. Check to ensure that the switch is wired correctly (correct wire numbers on the normally open terminals). 4. Check DS1 & DS2 LEDs on Power Supply Board. If they are not steady ON, replace Power Supply Board. 5. Check “Heartbeat” LED DS1 and verify it is blinking ON & OFF every second. If not, replace IGST Board.
OUTDOOR TEMP SENSOR FAULT	1. Loose or broken wiring. 2. Defective Sensor. 3. Incorrect Sensor.	1. Inspect Outdoor Temperature sensor for loose or broken wiring. 2. Check resistance of sensor to ensure it is within specification. 3. Ensure that the correct sensor is installed.
RECIRC PUMP FAILURE	1. Internal recirculation pump failed.	7. Replace recirculation pump.
REMOTE SETPT SIGNAL FAULT	1. Remote setpoint signal not present: Not yet installed. Wrong polarity. Signal defective at source. Broken or loose wiring. 2. Signal is not isolated (floating) if 4 to 20 mA. 3. Control Box signal type selection switches not set for correct signal type (voltage or current).	1. Check I/O Box to ensure signal is hooked up. Hook up if not installed. If installed, check polarity. Measure signal level. Check continuity of wiring between source and unit. 2. Check signal at source to ensure it is isolated. 3. Check DIP switch on PMC board to ensure it is set correctly for the type of signal being sent. Check control signal type set in Configuration Menu.

Innovation Water Heaters Installation, Operation & Maintenance Manual

CHAPTER 7 – TROUBLESHOOTING GUIDE

TABLE 7-1. WATER HEATER TROUBLESHOOTING – Continued

FAULT INDICATION	PROBABLE CAUSES	CORRECTIVE ACTION
RESIDUAL FLAME	<ol style="list-style-type: none"> 1. SSOV not fully closed. 2. Defective Flame Detector 	<ol style="list-style-type: none"> 1. Check open/close indicator window of Safety Shut-Off Valve (SSOV) and ensure that the SSOV is fully closed. If not fully closed, replace the valve and or actuator. Close the 1" Gas Shut-Off Valve downstream of SSOV (Figure 7-1). Install a manometer or gauge at the leak detection port between the SSOV and Gas Shut Off Valve. If a gas pressure reading is observed replace the SSOV Valve and/or Actuator. 2. Replace Flame Detector.
SSOV FAULT DURING PURGE	See SSOV SWITCH OPEN	
SSOV FAULT DURING RUN	SSOV switch closed for 15 seconds during run.	Replace or adjust microswitch in SSOV actuator. If fault persists, replace actuator.
SSOV RELAY FAILURE	<ol style="list-style-type: none"> 1. SSOV relay failed on IGST board. 2. Floating Neutral. 3. Hot and Neutral reversed at SSOV. 	<ol style="list-style-type: none"> 1. Press CLEAR button and restart unit. If fault persists, replace Ignition/Stepper (IGST) Board. 2. The Neutral and Earth Ground are not connected at the source and therefore there is a voltage measured between the two. This measurement should be near zero or no more than a few millivolts. 3. Check SSOV power wiring.
SSOV SWITCH OPEN	<ol style="list-style-type: none"> 1. Actuator not allowing for full closure of gas valve 2. SSOV powered when it should not be 3. Defective Switch or Actuator 4. Incorrectly wired switch. 	<ol style="list-style-type: none"> 1. Observe operation of the Safety Shut-Off Valve (SSOV) through indicator on the Valve actuator and ensure that the valve is fully and not partially closing. 2. If the SSOV never closes, it may be powered continuously. Close the gas supply and remove power from the unit. Refer fault to qualified service personnel. 3. Remove the electrical cover from the SSOV and check switch continuity. If the switch does not show continuity with the gas valve closed, either adjust or replace the switch or actuator. 4. Ensure that the SSOV Proof of Closure switch is correctly wired.

Innovation Water Heaters Installation, Operation & Maintenance Manual

CHAPTER 7 – TROUBLESHOOTING GUIDE

TABLE 7-1. WATER HEATER TROUBLESHOOTING – Continued

<p>STEPPER MOTOR FAILURE</p>	<ol style="list-style-type: none"> 1. Air/Fuel Valve out of calibration. 2. Air/Fuel Valve unplugged. 3. Loose wiring connection to the stepper motor. 4. Defective Air/Fuel Valve stepper motor. 5. Defective Power Supply Board or fuse 6. Defective IGST Board 	<ol style="list-style-type: none"> 1. Perform Stepper Test per GF-112 (para. 6.3.5) to ensure stepper motor rotates properly from 0% (fully closed) to 100% (fully open) positions. Verify VALVE POSITION bargraph and dial on the Air/Fuel Valve track each other to indicate proper operation. If operation is not correct, perform the Stepper Feedback Calibration (GF-112, section 6.2.1). 2. Check that the Air/Fuel Valve is connected to the Control Box. 3. .Inspect for loose connections between the Air/Fuel Valve motor and the wiring harness. 4. Replace stepper motor. 5. Check DS1 & DS2 LEDs on Power Supply Board. If they are not steady ON, replace Power Supply Board. 6. Check “Heartbeat” LED DS1 and verify it is blinking ON & OFF every second. If not, replace IGST Board.
<p>WARNING EXHAUST TEMP HIGH (Flashing WARNING)</p>	<ol style="list-style-type: none"> 1. Poor combustion calibration 2. Heat exchanger has scale. 	<ol style="list-style-type: none"> 1. Check combustion calibration using procedures in Chapter 4. 2. Clean heat exchanger using procedures in Chapter 6.

Innovation Water Heaters Installation, Operation & Maintenance Manual

CHAPTER 7 – TROUBLESHOOTING GUIDE

7.2 ADDITIONAL FAULTS WITHOUT SPECIFIC FAULT MESSAGES

Refer to Table 7-2 to troubleshoot faults which may occur without a specific fault message being displayed.

TABLE 7-2. WATER HEATER TROUBLESHOOTING WITH NO FAULT MESSAGE DISPLAYED

OBSERVED INCIDENT	PROBABLE CAUSES	CORRECTIVE ACTION
Fluctuating Gas Pressure	<ol style="list-style-type: none">1. Gas pressure going into unit is fluctuating.2. Damping Orifice not installed.	<ol style="list-style-type: none">1. Stabilize gas pressure going into unit. If necessary, troubleshoot Building Supply Regulator.2. Check to ensure that the Damping Orifice is installed in the SSOV Actuator shown in Figure 7-3. (For DBB Gas Trains, the Damping Orifice is installed in the downstream SSOV Actuator).
Air/Fuel Valve “hunting” at the 80% Valve Position	<ol style="list-style-type: none">1. IGST and Power Supply Boards in Control Box are outdated.	<ol style="list-style-type: none">1. Check to ensure that the IGST and Power Supply Boards are Rev. E or higher.

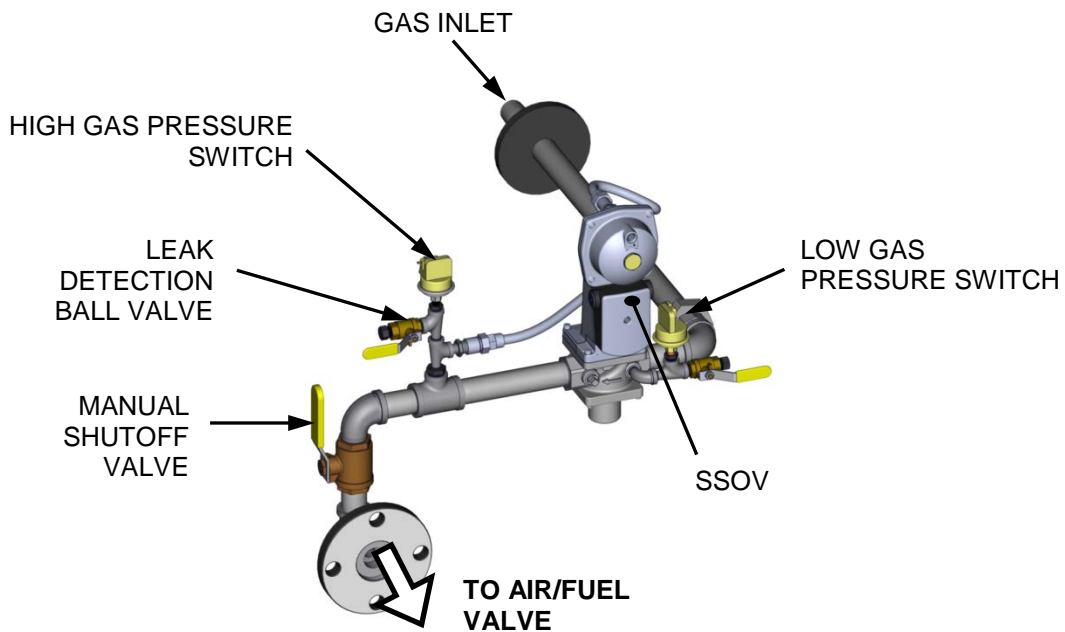


Figure 7-1. Gas Train Component Locations

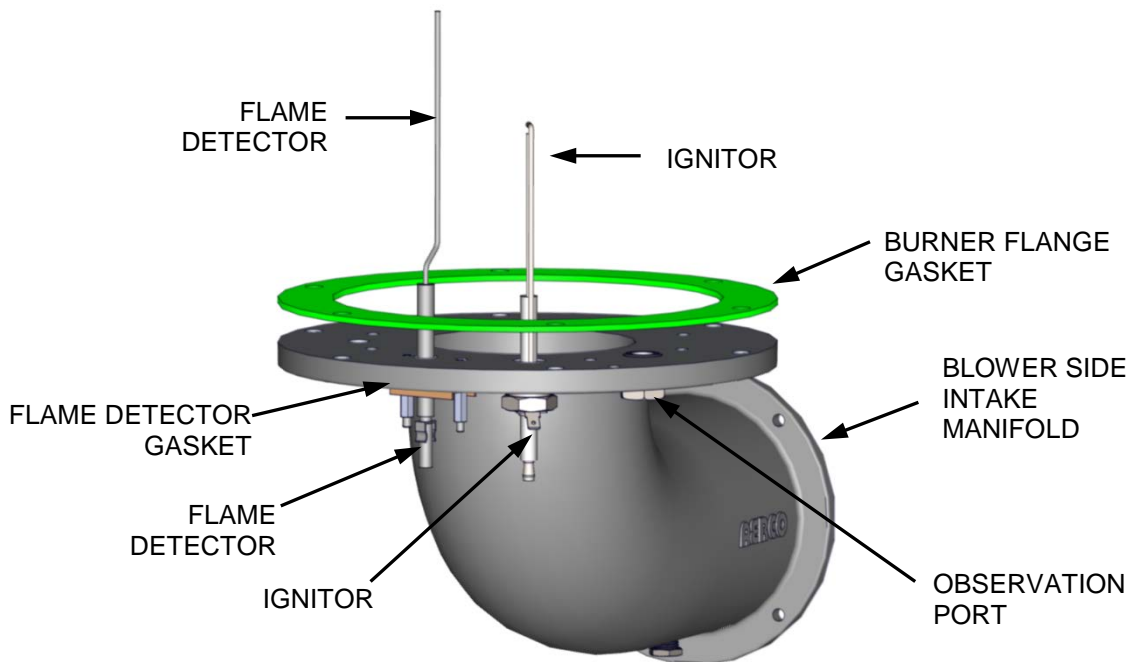


Figure 7-2. Blower-Side Intake Manifold (Shown removed from Heater)

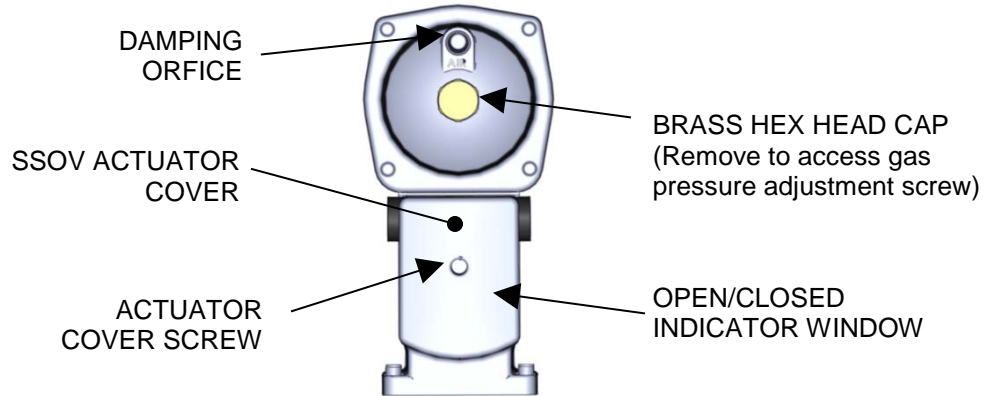


Figure 7-3. SSOV Actuator With Gas Pressure Adjustment & Damping Orifice

(This page left intentionally blank)

CHAPTER 8. RS232 COMMUNICATION

8.1 INTRODUCTION

The RS232 communication feature permits viewing or changing of Control Panel menu options and also provides access to data logs showing Event Time Line, Fault and Sensor log displays.

The RS232 port on the front panel of the C-More Control Box (Figure 3-1 **Error! Reference source not found.**) can be interfaced to a laptop computer or other suitable terminal using a RS232 adapter cable. RS232 communication can be accomplished using any “Dumb Terminal” emulation, such as “PuTTY” which is not included with Microsoft Windows, but can be downloaded for free on the internet. Source and instructions for using Putty are provided below.

8.1.1 Acquiring the PuTTY Application

Download the **putty.exe** program to your desktop from:

www.chiark.greenend.org.uk/~sgtatham/putty/download.html

You can use PuTTY to logon to remote computers as well as run a single command on a remote server. PuTTY does not need to be installed, so just clicking the downloaded executable will start it.

8.1.2 Logging on to a Remote Machine Using PuTTY

To use PuTTY to logon to a remote machine, bring up the PuTTY application by double-clicking its icon. You will see the main window as shown in left image of Figure 8-1.

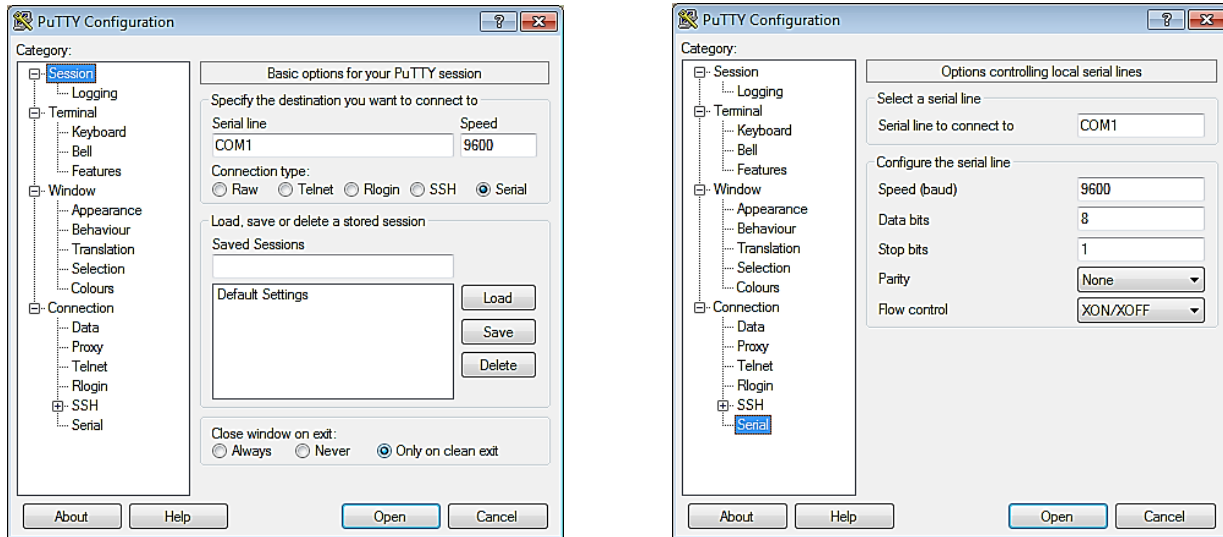


Figure 8-1: PuTTY GUI: Basic Serial Session (L) and Serial Options (R)

In Serial mode, text typed into the PuTTY window will be sent straight out of your computer's serial port, and data received through that port will be displayed in the PuTTY window.

To create a Serial connection, click the radio button labeled **Serial**. The **Serial line** and **Speed** fields will then be automatically filled in as shown in **left** image of Figure 8-1, but will allow you to specify the serial line to use (if your computer has more than one) and what speed (baud rate) to use when transferring data. For further configuration options (data bits, stop bits, parity, flow

control), you can use the **Serial Configuration** panel (*right* image in Figure 8-1) by selecting “Serial” in the left navigation pane.

Now, to connect to the remote server, simply click the **Open** button at the bottom of the dialog box. A new terminal window will pop up and ask you to log in.

So that you don't have to enter this information every time you wish to connect to your server, you can save this configuration by typing an appropriate *name* in the **Saved Sessions** text box in the PuTTY “Basic Options” window (left image of Figure 8-1) and then clicking the **Save** button. In the future, you can select the *name* you chose in the list box and click the **Load** button to initialize this particular configuration.

8.1.3 Running a Command on a Remote Machine Using PuTTY

PuTTY may also be used to run some command residing on the remote server. After specifying the command line you want to run, you will be asked for your account name and password, and then the command you specified will execute. When it completes, your session will terminate, and your window will either close or remain open depending on how you configure the session. Here are the steps:

1. Bring up the PuTTY application and select the server you wish to connect to.
2. At the bottom of the Basic Options dialog box (left image of Figure 8-1) in the section titled: Close window on exit, select the Never radio button. This will keep the window open after the command has finished executing so that you can see any results in the terminal window.
3. In the menu bar along the left side of the dialog box, click the **SSH** menu near the bottom. The following screen will be presented:

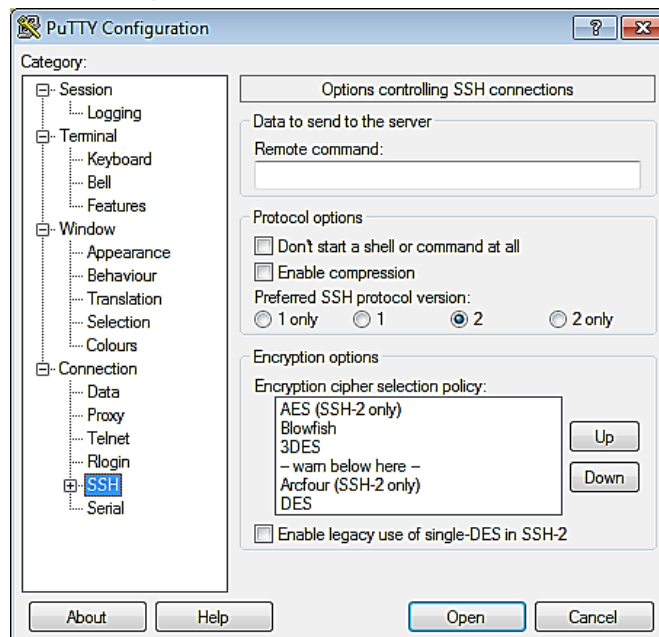


Figure 8-2: PuTTY GUI: Basic SSH Options for Running Remote Commands

4. Into the textbox titled, **Remote command** type the full command line you wish to have executed on the remote machine.

5. You are now ready to execute this command on the remote machine, simply click the **Open** button at the bottom of the dialog.
6. You will have to provide an account name and password in the terminal window to complete the process.

8.2 RS232 COMMUNICATION SETUP

Regardless of the terminal emulation utilized, the following guidelines must be adhered to when setting up the RS232 communication link:

1. Baud Rate – The baud rates which can be used with the C-More Control Panel are:
 - 2400
 - 4800
 - 9600 (Default)
 - 19.2K
2. Data Format – The program must be set for: 8 data bits, 1 stop bit, no parity and either Xon/Xoff or No flow control.

8.3 MENU PROCESSING UTILIZING RS232 COMMUNICATION

Viewing data logs and viewing or changing Control Panel menu options using RS232 communication is accomplished as follows:

RS232 Menu Processing

1. Start the emulator software program and ensure that the specified baud rate and data formats have been entered.
2. Press the Enter key on the laptop. An asterisk (*) prompt should appear.
3. At the prompt, enter the valid RS232 password (jaguar) in lower case letters and press Enter.
4. “Welcome to Aerco” will appear in the laptop or “dumb terminal” display with a listing of the following available entry choices:

M = Display next Menu
D = Display menu items
N = Display next menu items
Cxx = Change item xx
F = Fault log display
S = Sensor log display
T = Time line display
L = Log off

NOTE

The Level 1 password (159) must be entered to change options in the Setup, Configuration and Tuning Menus. The Level 2 password (6817) must be entered to view or change options in the Calibration and Diagnostics Menus. With the exception of the password entry, all other keyboard entries can be made using either upper or lower case.

RS232 Menu Processing - *Continued*

5. To view the available menus in the top-down sequence shown in Figure 3-2, enter *M* <*Rtn*>. The Menu title and first 10 options will be displayed.
6. When viewing menus containing more than 10 options, enter *N* <*Rtn*> to display the remaining options.
7. Shortcut keys are also available to go directly to a specific menu. These shortcut keys are:

m0	Default (Operating) Menu
m1	Setup Menu
m2	Configuration Menu
m3	Tuning Menu
m4	Calibration Menu
m5	Diagnostic Menu
8. To change a value or setting for a displayed menu option, proceed as follows:
 - a. Enter *C*, followed by the number to the right of the displayed option to be changed, and then press <*Rtn*>.
 - b. Enter the desired value or setting for the option and press <*Rtn*>. Refer to Chapter 3, Tables 3-2 through 3-5 for allowable entry ranges and settings for the Operating, Setup, Configuration and Tuning Menus. (The Calibration and Diagnostic Menus should only be used by Factory-Trained service personnel).
 - c. Menu changes will be stored in non-volatile memory.
9. To redisplay the menu and view the option which was just changed in step 5, enter *D* and press <*Rtn*>.
10. To display the Fault (*F*) Log, Sensor (*S*) Log or Time (*T*) Line Log, press *F*, *S* or *T* followed by <*Rtn*>. Refer to section 8.4 for descriptions and samples of these data logs.
11. To log off and terminate the RS232 communication link, press *L* followed by <*Rtn*>.

8.4 DATA LOGGING

During operation, the C-More Control Panel continuously monitors and logs data associated with operational events, faults and sensor readings associated with the water heater system. Descriptions of these data logs are provided in the following sections. The procedure for accessing specific data logs is described in section 8.3, step 10.

8.4.1 Fault Log

The C-More Control Panel logs the last 20 faults (0 – 19) starting with the most recent (#0). They can be viewed in the front panel display or via the RS232 port. The Fault Log cannot be cleared. If the Fault Log already contains 10 faults, the earliest fault is overwritten when a new fault occurs. A sample Fault Log display is shown in Table 8-1.

NOTE

The Operation Time (*T*) Log can store thousands of records. Therefore, to view the most recently logged record, enter “*T*” followed by 0 (zero) and press Enter (i.e. *T0* <Enter>). To view earlier records in reverse chronological order, enter *T* and press Enter. To go back 200 or 1000 records, enter *T200* or *T1000*, etc. and press Enter.

Table 8-1. Sample Fault Log Display

No.	Fault Message	Cycle	Date	Time
0	Direct Drive Signal Fault	609	1/10/02	8:42am
1	Low Gas Pressure	366	7/04/01	5:29pm
2	Loss of Power	0	1/01/01	11:50am

8.4.2 Operation Time Log

The Operation Time Log consists of a string of ASCII records stored in non-volatile memory within the C-More Control Panel. Events such as power-up, ignition and turn-off are time stamped. Data logged while the unit is running are run-length encoded. Data is logged or the run-length incremented every 30 seconds. For a new run record to be logged, the fire rate or flame strength must change by more than 5%, or the run mode must change. At steady-state, the run-length is allowed to reach a maximum of 30 minutes before the record is logged. This means that no more than 30 minutes of data can be lost if the unit loses power. Table 8-2 shows a sample Operation Time Log for a unit:

Table 8-2. Sample Operation Time Log Display

Status	Fire Rate	Flame	Run Length	Date	Time
Off, Direct Drive	0	0	8	1/15/02	2:35pm
Run, Direct Drive	38	100	34	1/15/02	2:27pm
Run, Direct Drive	31	100	30	1/15/02	1:53am
Run, Direct Drive	35	100	2	1/15/02	1:23pm
Run, Direct Drive	29	100	0	1/15/02	1:21pm
Ignition	0	0	0	1/15/02	1:20pm
Off, Switch	0	0	35	1/15/02	12:30pm
Run, Manual	40	100	0	1/15/02	11:55am
Ignition	0	0	0	1/15/02	11:55am
Power-up	0	0	0	1/15/02	11:50am

The Operation Time Log can only be accessed through the RS232 interface using a laptop or other terminal device. Ten operation time records are displayed for each T command entry. The operation time log can be cleared ONLY by factory authorized personnel using the Clear Log option in the Factory menu.

NOTE

The Sensor (S) Log can store up to 1200 records. Therefore, to view the most recently logged record, enter "S" followed by 0 (zero) and then press Enter (i.e. S0 <Enter>). To view earlier records in reverse chronological order, enter S and press Enter. To go back 200 or 700 records, enter S200 or S700, etc. and press Enter.

8.4.3 Sensor Log

The sensor values can be logged at a different rate if needed by setting the Sensor Log Interval in the Diagnostics Menu. The log interval can vary from once every minute to once every day.

Innovation Water Heaters Installation, Operation & Maintenance Manual

CHAPTER 8 – RS232 COMMUNICATION

Table 8-3 shows a sample Sensor Log every 5 minutes for a heater running in Constant Setpoint mode.

Table 8-3. Sample Sensor Log Display

Setpt	Outlet	Outdr	FFWD	Aux	Inlet	Exhst	CO	O2	Flow	Date	Time
130	181	OPEN	OPEN	OPEN	OPEN	OPEN	0	.0	0	1/15/02	5:51pm
130	180	OPEN	OPEN	OPEN	OPEN	OPEN	0	.0	0	1/15/02	5:46pm
130	180	OPEN	OPEN	OPEN	OPEN	OPEN	0	.0	0	1/15/02	5:41pm
130	179	OPEN	OPEN	OPEN	OPEN	OPEN	0	.0	0	1/15/02	5:36pm
130	180	OPEN	OPEN	OPEN	OPEN	OPEN	0	.0	0	1/15/02	5:31pm
130	180	OPEN	OPEN	OPEN	OPEN	OPEN	0	.0	0	1/15/02	5:26pm
130	180	OPEN	OPEN	OPEN	OPEN	OPEN	0	.0	0	1/15/02	5:21pm
130	180	OPEN	OPEN	OPEN	OPEN	OPEN	0	.0	0	1/15/02	5:16pm
130	179	OPEN	OPEN	OPEN	OPEN	OPEN	0	.0	0	1/15/02	5:11pm
130	180	OPEN	OPEN	OPEN	OPEN	OPEN	0	.0	0	1/15/02	5:06pm

CHAPTER 9. WATER HEATER MANAGEMENT

NOTE

Some of the descriptions and procedures provided in this Chapter may duplicate information provided in previous Chapters of this manual. This is being done to minimize referencing back to these descriptions and procedures and organize all WHM related information into a single Chapter. It is assumed that the user is familiar with the basic C-More Menu processing procedures used throughout this manual.

9.1 INTRODUCTION

On Board Water Heater management system II (WHM II) is an integrated C-MORE feature designed to stage and coordinate multiple AERCO water heaters while maximizing operational efficiency. The software code required to operate the WHM resides in each of the C-Mores that are part of the system. The WHM can control up to eight (8) water heaters in parallel. Each water heater controlled by the WHM must be equipped with an Actuator-Controlled Sequencing Valve, Part No. 92093. These valves are installed on the cold water inlet of each water heater being controlled by the WHM.

9.2 GENERAL DESCRIPTION

The C-More Water Heater Management System (WHM) is designed to ensure that all water heaters in the system operate at maximum efficiency. This is accomplished by monitoring the Air/Fuel Valve position (VP) of all water heaters that have their sequencing valves open. Units with open sequencing valves are called enabled units. Units with closed sequencing valves are called disabled units. Units which are unable to function, due to a fault or user intervention, are called offline units. When there is minimal or no demand for hot water, the sequencing valve for one unit will be open. As system load increases, the WHM will open the sequencing valves on additional heaters. A simplified block diagram of multiple water heaters connected to a WHM is shown in Figure 9-1.

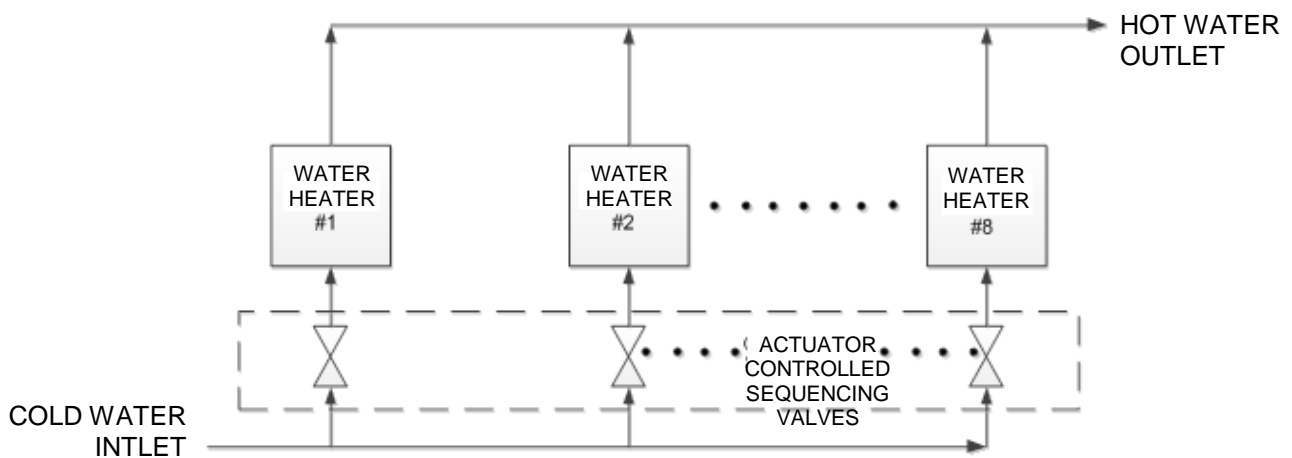


Figure 9-1. Simplified Block Diagram - Water Heater Management (WHM)

9.3 WHM PRINCIPLES OF OPERATION

The WHM system communicates with the plant water heaters via a RS485 network utilizing Modbus RTU protocol (8 bit, 9600 baud, no parity). All Modbus networks are implemented using a Master/Slave scenario where only one device, the Master, can initiate a communication sequence. All other C-More equipped units on the network are called Slaves. However, since the WHM software code resides in each C-More that is part of the system, any one of the C-Mores can be selected to control the system.

The controlling Master monitors the Air/Fuel Valve position (VP) of all enabled units. When this valve position (% open) exceeds a user-selectable limit (WHM Nxt On VP), the WHM will open the sequencing valve of another water heater in the system. Conversely, when the valve positions of all enabled units have dropped below a different user-selectable limit (WHM Nxt Off VP) threshold, the WHM will close the sequencing valve on a unit. The philosophy behind this approach is to maintain the fire rates (Air/Fuel Valve % open) at a level that maximizes heater efficiency.

In addition to collecting Air/Fuel Valve position data, the controlling Master also monitors the total accumulated operating time for each unit on the system and attempts to balance the system so that all units operate for approximately the same number of hours.

9.4 NEW AERCO WHM FEATURES

9.4.1 Valve Feedback

The Valve Feedback feature is designed to confirm that the Neptronic Valve has successfully executed either a Valve-Open or Valve-Close command from the C-More.

The Valve Feedback signal from the Neptronic Valve is connected to the C-More via the I/O box. When the C-More issues either a Valve-Open or Valve-Close command to the valve, the Valve Feedback signal is monitored to confirm that the Neptronic Valve has successfully opened or closed. If there is a mismatch between the Valve Feedback signal and the Valve-Open or Valve-Close command for a period of time exceeding the value entered in “Valve Fdbk timer” a fault is invoked.

This feature can be enabled or disabled in the “Valve Feedback” menu item.

9.4.2 Valve Supervisor

This feature periodically monitors the Neptronic valve status (On or Off) and compares it to the Valve command. If there is a mismatch, a fault is displayed and the unit will react as follows:

1. If the Valve is Stuck Open, Display the “Valve Stuck Open” fault message but continue with the unit operation (do not shut the unit down).
2. If the Valve is Stuck Closed, Shut down the unit and display the “Valve Stuck Closed” fault message.

9.4.3 Valve Control

The Valve Control logic has been redesigned to assure proper valve operation.

Critical valve positioning (On or Off) is assured by the development of two independent valve control functions with one function monitoring the results of the first

9.4.4 Modbus Header Sensor and Outdoor Sensor

This optional feature allows user to monitor the combined system Outlet Temperature or the system Tank temperature via Modbus. This feature requires a Modbus Temperature sensor Module to read and transmit the temperature to the master unit. This feature also allows a user to view the temperature in either °F or °C.

Each unit has 2 Modbus points available: Modbus Header Temp and Modbus Outdoor Temp.

1. **Modbus Header Temp:**

- MB Head Temp En: This menu will allow enable/disable the Modbus Header Temp.
- Header Temp Addr: A user must enter Modbus module address. Default is 240.
- Header Tmp Point: A user must enter Modbus register point. Default is 14.
- WHM Header Temp: This menu item displays the Temperature.

2. **Modbus Outdoor Temp:**

- MB Outdr Sens En: This menu will allow enable/disable the Modbus Outdoor Temp.
- Outdoor Tmp Addr: A user must enter Modbus module address. Default is 240.
- Outdoor Tmp Pnt: A user must enter Modbus register point. Default is 15.
- WHM Outdr Temp: This menu item displays the Temperature.

9.4.5 Automatic Temperature Sensor Calibration

This feature allows the user to automatically calibrate the temperature sensors to achieve optimal system performance and efficiency. This feature requires an AERCO Temperature Calibration dongle (fixed resistor set) and a password level to access the calibration menu.

Following are the steps required to Auto-calibrate the temperature sensors.

1. Disable the unit.
2. Remove the P1 harness from the back of the CMORE box and insert the dongle in it's place.
3. In the "Cal Temp Sensor" item of the calibration menu, change the menu entry to "Start" and hit the "enter" Key.
4. This feature will only calibrate Inlet water Temp, FFWD Water Temp, Exhaust Air temp and Outlet Water Temp.
5. In this version, this feature will not calibrate the Inlet Air temp and Outdoor Air temp sensors. Once the calibration has been completed, remove the dongle and inset the harness P1 back into the C-More.

9.4.6 Manual Mode Password Required

In order to prevent unauthorized or inadvertent setting the MANUAL mode of operation, entering a valid password is required to set the C-More in Manual Mode. Any level password will enable the Manual Mode button. Manual mode is a temporary run state and, switches back to Automatic Mode once the password expires following 1 hour of menu inactivity.

9.4.7 Quick Re-Flash Feature – As of 3.08.05

As of Firmare version 3.08.05 all system settings can be saved prior to Re-Flashing a unit. The settings can then be recalled following the RE-Flashing to avoid manual entry of all system settings. The system settings are saved on the C-More PMC board. To save settings, enable "Save CMore Setup" in the Diagnostic Menu. To restore all system settings following a system re-flash, select "Restore Setup" Diagnostic menu. This feature was added to make it easier to update the firmware on a unit and is available on versions 3.08.05 or greater.

9.4.8 WHM Auto Mstr

Password Level 2 (6817) or greater must be entered in order to access the WHM Auto Mstr menu option. This item is used to enable (yes) or disable (no) an Automatic Master switch-over function. When enabled (yes), the WHM will automatically select a new Master if the current Master fails or loses power. This option is used with the WHM Auto Timer option described in the following section. The default for this option is No (disabled).

9.4.9 Run Hours and Run Cycles

Run hours and run cycles are monitored to select the lead unit and lag unit (next on unit) in WHM. In the event a C-More or PMC board is exchanged in the field, this feature will allow the user to increase but not decrease the run hours or run cycles. Once a user hits enter, the changes made will be permanent and this feature will not allow changing to the previous value.

Only AERCO personnel are permitted to change this menu item. To increase the Run Hours/Cycles, go the “Run Cycles” or “Run Hours” items in the Diagnostic menu.

9.4.10 High Temperature Governor

The High Temperature Governor is a feature that aggressively prevents the Outlet Temperature from exceeding the “High Temp Limit”. The High Temperature Governor is independent of the system PID and Feed-forward control methodology and independently modulates the Valve Position (Fire Rate) if the Outlet Temperature dangerously approaches the “High Temp Limit” setting.

This feature has 5 separate temperature bands for more precise control.

The 5 control band setting can be accessed in the tuning menu as follows:

- GOV Limit-4: If the Outlet Temp is greater than or equal to “High Temp Limit” minus 4, the Fire Rate will be lowered by the value entered in “GOV Limit-4” (default=30).
- GOV Limit-5: If the Outlet Temp is greater than or equal to “High Temp Limit” minus 5, the Fire Rate will be lowered by the value entered in “GOV Limit-5” (default=25).
- GOV Limit-6: If the Outlet Temp is greater than or equal to “High Temp Limit” minus 6, the Fire Rate will be lowered by the value entered in “GOV Limit-6” (default=20).
- GOV Limit-7: If the Outlet Temp is greater than or equal to “High Temp Limit” minus 7, the Fire Rate will be lowered by the value entered in “GOV Limit-7” (default=15).
- GOV Limit-8: If the Outlet Temp is greater than or equal to “High Temp Limit” minus 8, the Fire Rate will be lowered by the value entered in “GOV Limit-8” (default=10).

This feature can be enabled or disabled by the “Temp Gov” item in the Tuning Menu.

WHMS2 Status Displays

The following WHMS status information will be displayed on two line VFD Display on the front of the C-More to inform the user of critical WHMS real-time operating conditions:

Innovation Water Heaters Installation, Operation & Maintenance Manual

CHAPTER 9 – WATER HEATER MANAGEMENT

WHMS Master Identification:

Whenever a WHMS Heater is defined as the MASTER, The large, 3 digit display of the front for the C-More will continuously blink and display the OUTLET TEMPERATURE.

Master Display

The Heater defined as the MASTER will display the flowing status information on the two line VFD display:

- MASTER-DISABLED - The Master has been disabled and is not available
- MASTER-STANDBY - The Master is "Cycled Off" and is available to be lit off
- MASTER-IGNITED - The Master is ignited


Slave Displays

The Heaters defined as the SLAVE units will display the flowing status information on the two line VFD display:

- SLAVE-DISABLED - The Slave has been disabled and is not available
- SLAVE-STANDBY - The Slave is "Cycled Off" and is available to be lit off
- SLAVE-IGNITED - The Slave is Ignited

Examples:

If a Master is enabled and in Standby mode, the C-More display will show as follows:




BST Alternating Status Displays

Master/Slave Status Displays

On both WHMS Master and Slave heaters, the following status information will alternate, and be displayed on the two line VFD display on the front of the C-More.

- FAILSAFE ACTIVE - The Slave Failsafe Mode has been activated
- All Heaters On - All available heaters are ignited
- All Heaters Off - All available heaters are off
- Enabling First - The first heater is allowed to ignite and it's valve is opened
- Enabling Next - The next heater is allowed to ignite and it's valve is opened
- Wtr Htr Inactive - This Slave unit is inactive, It's valve is closed and can't ignite
- Wtr Heatr Active - This Slave unit is active, It's valve is opened and it can ignite
- REMOTE SIG FAULT - Remote signal fault
- WHMS FAILSAFE - WHMS is in Failsafe Mode

Example: If all available heaters are turned off, the C-More display will alternate the display above (MASTER-STANDBY) with the All Heaters Off status message as follows:



Innovation Water Heaters Installation, Operation & Maintenance Manual

CHAPTER 9 – WATER HEATER MANAGEMENT

9.5 WHM MENU

The WHM Menu in each C-More can only be viewed when the *Unit Type* option in the Configuration Menu is set to *Innovation WH*. The WHM Menu contains only ten (10) user-selectable menu options. In addition, these menu options are listed in Table 9-1. Descriptions for each menu item are included in Appendix A.

NOTE

In addition to the WHM Menu items listed in Table 9-1, the Setup Menu contains a *Comm Address* option which must be entered for each unit to enable WHM control of the system.

Table 9-1. WHM Menu

SN	Menu Item Display	Available Choices or Limits		Default
		Minimum	Maximum	
1.	WHM Mode	Off, WHM Slave, WHM Master		Off
2.	WHM Setpoint	40°F	200°F	130°F
3.	WHM Nxt On VP	16%	100%	60%
4.	WHM Nxt Off VP	16%	100%	35%
5.	Lead/Lag Hours	25	225	72
6.	WHM Upld Timer	0	9999	0
7.	Setpoint Setback	Enable, Disable		Disable
8.	Setback Setpoint	40°F	220°F	130°F
9.	Setback Start	12:00am	11:59pm	12:00am
10.	Setback End	12:00am	11:59pm	12:00am
11.	WHM Auto Mstr	Yes or No		No
12.	WHM Auto Timer	10 sec.	120 sec.	30 sec.
13.	WHM min addr	1	8	4
14.	WHM max addr	1	8	8
15.	SSD address	0	250	0
16.	SSD Temp Format	Degrees or Points		Degrees
17.	1 Valve Status 8	0	0	0
18.	1 Comm Errors 8	0	0	0
19.	WHM On Delay	30 sec	300 sec	60 sec
20.	WHM Off Delay	30 sec	300 sec	60 sec
21.	Over WHM Under	0	0	0
22.	WHM Min Units	1	8	1
23.	WHM Warmup Time	0	300 sec	30 sec

SN	Menu Item Display	Available Choices or Limits		Default
		Minimum	Maximum	
24.	WHM On Timeout	15 Sec	300 Sec	30 Sec
25.	WHM Valve State	0	1	0
26.	Valve Override	Auto, Open or Closed		Auto
27.	Valve Feedback	Enable or Disable		Disable
28.	Valve Fdbk timer	30 sec	240 sec	60 sec
29.	ValveFdbk Status	Close	Open	Fdbk state
30.	MB Head Temp En	Enable or Disable		Disable
31.	WHM Header Temp	0	0	Header Temp
32.	Mdbus Temp Units	°F or °C		°F
33.	Header Temp Addr	0	255	240
34.	Header Tmp Point	0	255	14
35.	MB Outdr Sens En	Enable or Disable		Disable
36.	WHM Outdr Temp	0	0	Outdr Temp
37.	Outdoor Tmp Addr	0	255	240
38.	Outdoor Tmp Pnt	0	255	15
39.	1 WHM Units 8	0	0	0
40.	SSD Poll Control	0	1000	0
41.	Err Threshold	1	9	5
42.	Comm Address	0	127	0

9.6 WHM HARDWARE INSTALLATION & SET-UP INSTRUCTIONS

The following sections provide the basic installation and set-up instructions for implementing a Water Heater Management System (WHM) to control up to eight (8) AERCO Innovation Water Heaters. Some of the descriptions and procedures included in Chapter 2 may be repeated here to avoid unnecessary referencing.

9.6.1 Hardware Installation

All Innovation Water Heaters which will be controlled by a WHM master must be equipped with an actuator-controlled sequencing valve (part no. 92093). If this valve is not already installed on the cold water inlet, proceed as follows:

WHM Hardware Installation

1. Remove the sequencing valve from its stowed location.
2. Refer to Figure 9-2 and attach the valve to the cold water inlet of the unit using the pipe union and nipple provided.

WHM Hardware Installation – *Continued*

3. Ensure that the valve is positioned with the actuator enclosure position as shown in Figure 9-2.
4. AERCO recommends that another pipe nipple and union be attached to the valve inlet prior to connecting the cold water supply piping.
5. Tighten all pipe connections after the sequencing valve is properly positioned.
6. Connect the 3-pin Molex connector on the sequencing valve to the mating connector on the Innovation harness at the rear of the unit.
7. This completes the sequencing valve installation.


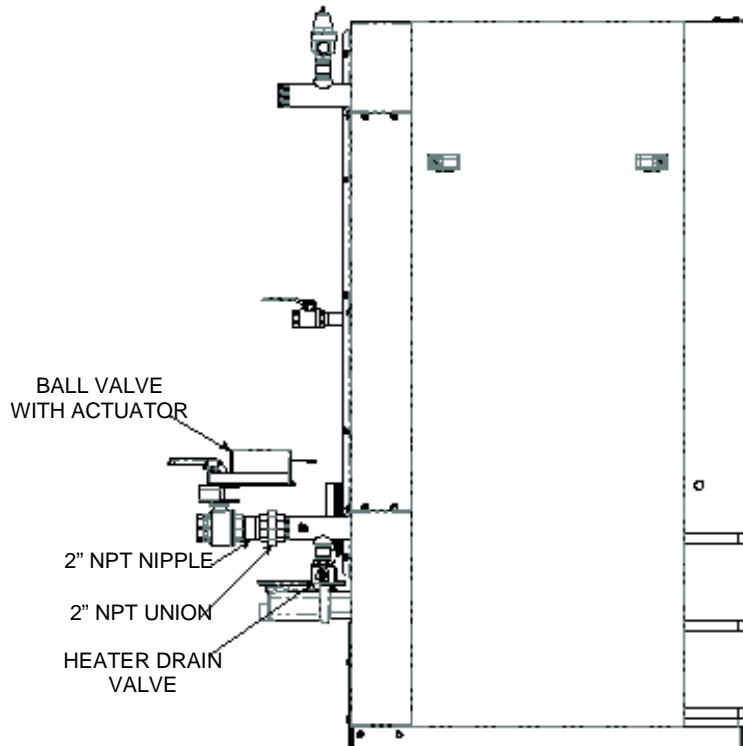


Figure 9-2. Innovation Water Heater Equipped With Sequencing Valve

9.6.2 WHM Modbus Network Wiring

As previously mentioned, all units being controlled by the WHM will be connected to a RS485 Modbus Network. All Modbus networks are wired in a daisy-chain configuration using a Master/Slave scenario as shown in Figure 9-3.

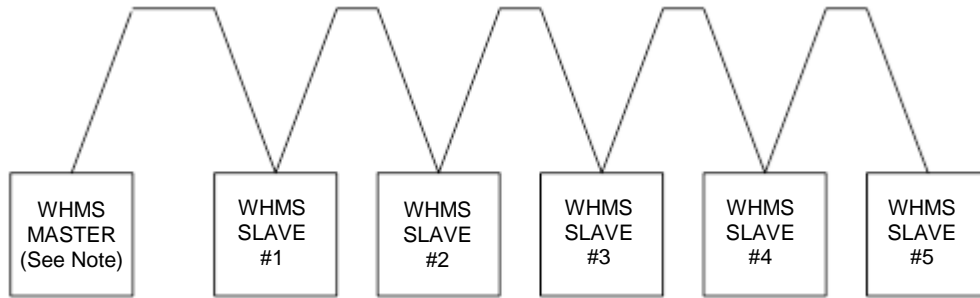

NOTE: The WHMS Master does not necessarily have to be on either end of the Daisy-Chain loop

Figure 9-3. Typical Daisy-Chain Modbus/RS485 Network

Any one of the C-More WHM units included in the Modbus network can be the Master. However, it is recommended that you decide which unit will be the Master and which will be the last unit on the daisy-chain prior to performing the wiring connections. This will simplify wiring connections and Modbus address assignments,

Modbus network wiring connections must be made using shielded twisted-pair wiring, (18 – 24 AWG) such as Belden #9841, #3105A, #8760, or equivalent. The Modbus wiring connections are made at the RS485 COMM terminals on the I/O board included with each C-more Control System.


Connect the Modbus wiring as follows:

Modbus Network Wiring

1. Starting at the first unit, connect the twisted, shielded pair cable to the RS485 Comm plus (+) and minus (-) terminals on the left side I/O board as shown in Figure 9-4.
2. At the Modbus Master I/O board, activate the DIP switch labeled “MODBUS TERM” by placing it in the up position. This will connect a termination resistor across the terminals at the source end.
3. Refer to Figure 9-4 and run the shielded cable to the next unit in the daisy-chain and connect the + and – wire leads (+ to +, - to -). DO NOT terminate the shield of the RS485 Comm leads to the SHIELD terminal at the Slave. Instead, connect the shields of the incoming and outgoing RS485 leads together.
4. Continue connecting the + and - wire leads and shields for the remaining units as described in step 3 for the remaining Slave units in the chain.
5. At the end unit in the chain, activate the DIP switch labeled “MODBUS TERM” by placing it in the up position. This will ensure that the termination resistors are activated at both ends of the loop.

9.6.3 Control and Power Wiring

Control and power wiring connections to the sequencing valves associated with each C-More WHM unit is accomplished by simply ensuring that the 3-pin Molex connectors on the units are connected to the corresponding connectors on the valves.

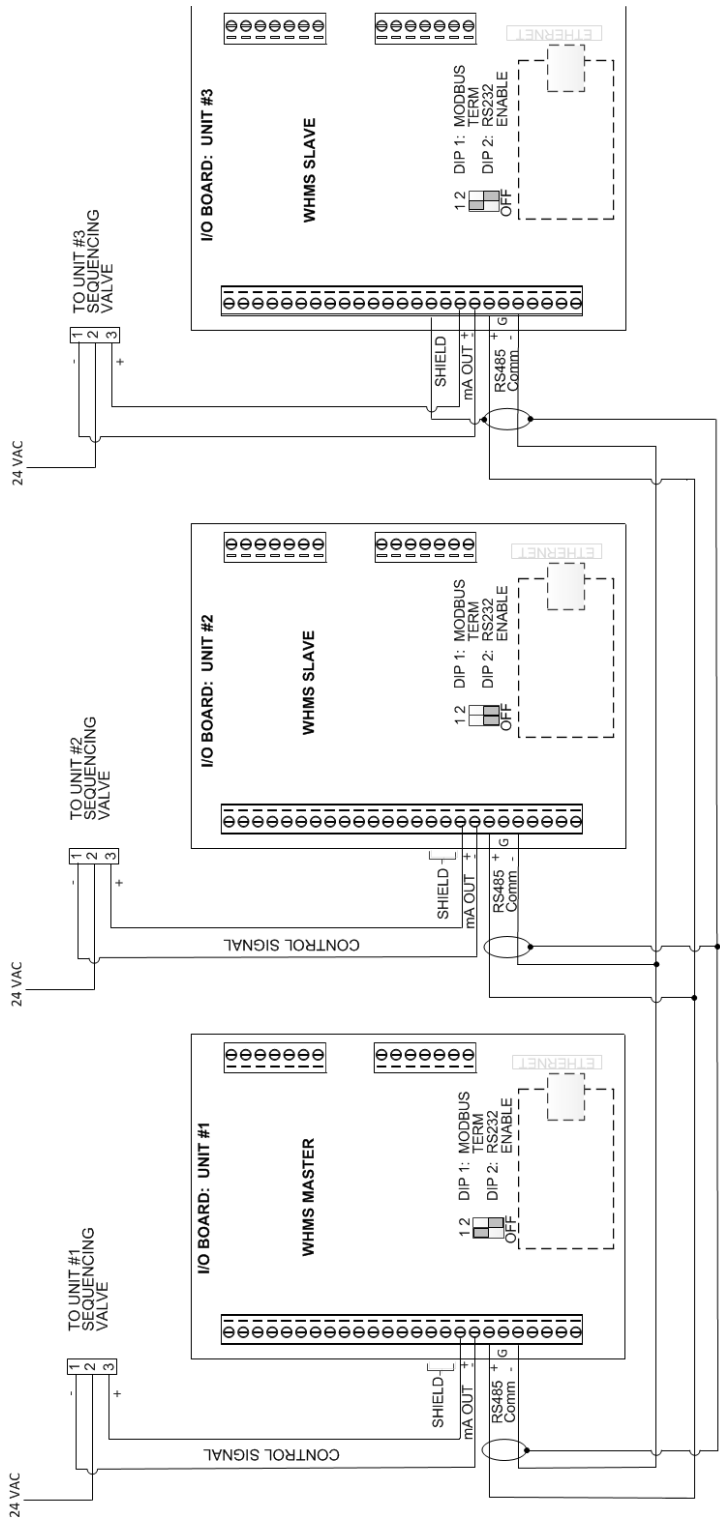

- NOTES:**
1. Wiring to be shielded twisted-pair cable (Belden 9841 or equivalent).
 2. Activate DIP 1 (Modbus TERM) on the first and last units in the daisy chain.
 3. Tie incoming/outgoing shields together and terminate at the shield terminal of the LAST WHMS slave in the chain.
 4. On the CPU board inside the C-More Control Panel of the FIRST unit on the chain, turn the DIP switch labeled TERM to the "ON" position.
 5. On the CPU board inside the C-More Control Panel of the LAST unit on the chain, turn the DIP switches labeled BIAS1, TERM and BIAS2 to the "ON" position.

Figure 9-4 WHMS Network Wiring Diagram

9.7 WHM MENU SETTINGS

The required settings for WHM Menu items will vary depending on the number of units connected to the Modbus network and required setpoint and operating conditions to be

maintained on the network. Set the menu options in accordance with the descriptions provided in the sections 9.6.1 through 9.6.10 which follow.

NOTE

It is recommended that the WHM Menu settings described in the following sections be performed first at the WHM Master. This will simplify the number of required entries since most of the settings will be “pushed” to the appropriate Slaves.

9.7.1 WHM Mode

Set the WHM Mode option to *WHM Master* for the controlling Master. Set the WHM Mode option to WHM Slave for all other units on the Modbus network.

9.7.2 Comm Address (Located in Setup Menu)

This option, located in the Setup Menu, is the Modbus address for the water heater on the network. To simplify addressing, assign consecutive address numbers 1 through 8.

9.7.3 WHM Setpoint

The default setpoint for the WHM is 130°F. If a different setting is desired, the setpoint can be varied from 40°F to 240°F.

9.7.4 WHM Nxt On VP

This is the Next On Air/Fuel Valve Position (VP), % open) for the system. The default value for this option is 75%. When all enabled water heaters have a valve position (VP) greater than this value, the WHM Master will enable another water heater, if one is available. If a different value is desired for the system, this menu option can be varied from 16% to 100%. The selected value must always be greater than the Next Off Valve Position, and there should be a reasonable spread between the two values.

9.7.5 WHM Nxt Off VP

This is the Next Off Air/Fuel Valve Position (VP), % open) for the system. The default value for this option is 35%. When all enabled water heaters have a valve position (VP) less than this value the WHM will disable one of the enabled water heaters. The exception to this rule is if there is only one water heater currently enabled.

9.7.6 Lead/Lag Hours

The Lead/Lag Hours menu option is basically designed to spread the total number of run hours accumulated on all units in the system so that each of the units have approximately the same number of run hours. The default value for this option is 72 hours.

9.7.7 Setback Setpoint

This menu item specifies the setpoint temperature that the WHM system will maintain during time periods of low DHW demand.

9.7.8 Setback Start & Setback End

These two menu items specify the start and end times that the Setback Setpoint will be in effect. The start and end times can be set from 12:00am (mid-night) to 11:59pm. To disable the setback feature, leave the start and end times set to 12:00am (midnight).

9.7.9 WHM Auto Mstr

Password Level 2 (6817) must be entered in order to access the WHM Auto Mstr menu option. This item is used to enable (yes) or disable (no) an Automatic Master switch-over function. When enabled (yes), the WHM will automatically select a new Master if the current Master fails or loses power. This option is used with the WHM Auto Timer option described in the following section. The default for this option is No (disabled).

9.7.10 WHM Auto Timer

Password Level 2 (6817) must be entered in order to access the WHM Auto Timer menu option. When the WHM Auto Mstr option is set to Yes (enabled), the WHM Auto Timer option allows the user to select the elapsed time interval between failure of the WHM Master and switch-over to a new WHM Master. The default for this option is 30 seconds.

9.8 WHM PROGRAMMING & START-UP

Prior to programming the required WHM Menu options into the WHM Master and Slaves, all required hardware installation and network wiring must be completed. In addition, the required menu entries to be entered must be determined based on the descriptions in the previous sections.

AERCO recommends that the WHM Master be set up first. By doing so, the Master will “push” most of the required menu entries to each WHM Slave as each unit is brought on-line. The following steps assume that the WHM Master and Slaves will be consecutively numbered, starting at 1 (WHM Master). Proceed as follows starting at the unit which has previously been determined to be the WHM Master:

WHM Programming & Start-Up Procedure

1. Access the Setup menu and scroll to the *Comm Address* option. Press the CHANGE key.
2. Enter 1 for the Comm Address of the Master. Press the ENTER key to store the entry.
3. Access the WHM menu and scroll to the *WHM Mode* option (default = Off).
4. Press the CHANGE key.
5. Select *WHM Master*. Press the ENTER key to store the entry. Note that the Outlet Temperature display on the WHM Master will begin flashing every two seconds.
6. Select the *WHM Setpoint* option. The default value is 130°F. If this is not the desired setpoint for the WHM, press the CHANGE key.
7. Enter the desired WHM setpoint temperature. Press ENTER to store the selection.
8. Scroll to the *WHM Nxt On* option (default = 75%). If the desired setting for this option is not displayed, press the CHANGE key.
9. Enter the desired value for the Nxt On option. Press ENTER to store the selection.
10. Scroll to the *WHM Nxt Off* option (default = 35%). If the desired setting for this option is not displayed, press the CHANGE key.

WHM Programming & Start-Up Procedure - *Continued*

11. Enter the desired value for the *Nxt Off* option. Press ENTER to store the selection.
12. Scroll to the *Lead/Lag Hours* option (default = 72). If the desired setting for this option is not displayed, press the CHANGE key.
13. Enter the desired value for the *Lead/Lag Hours* option. Press ENTER to store the selection.
14. The WHM menu contains *Setback* options which are used to adjust the setpoint temperature, start time and end time during periods of low DHW demand. These options are selected as specified in steps 15 through 18 which follow.
15. To specify the setback temperature, scroll to the *Setback Setpoint* option (default = 130°F). If this is not the desired setting, press the CHANGE key.
16. Enter the desired *Setback Setpoint* temperature. Press ENTER to store the selection.
17. Next, the *Setback Start* and *Setback End* time options must be specified (defaults = 12:00am for both options). To change each option scroll to *Setback Start* or *Setback End* and press the CHANGE key.
18. Separately enter the desired Start and End time (12:00am to 11:59pm). Press ENTER to store each entry.
19. This completes the required entries for the WHM Master. All but two of the required menu setting will be automatically be “pushed” to the WHM Slaves as they are brought on-line. The options which are not “pushed” to each WHM Slave are:
 - Comm Address (in Setup menu)
 - WHM Mode
20. Enter the desired Comm Address and WHM Mode (WHM Slave) at the C-More Control Panel for each of the WHM Slaves on the network.
21. After the required entries are made at each WHM Slave, check to ensure the REMOTE LED on the C-More Control Panel for each unit in the WHM network is illuminated. When illuminated, it indicates that the RS485 communications are operating properly.
22. The WHM menu contains two additional menu options which can be set at the WHM Master. These options are *WHM Auto Mstr* and *WHM Auto Timer*. In order to view or change these two options, the Level 2 Password (6817) must be entered as follows:
 - a. Press the MENU key on the front panel of the C-More and access the *Setup* Menu.
 - b. Scroll to the *Password* menu option and press the CHANGE key.
 - c. Enter 6817 and then press the ENTER key to store the password.
 - d. Press the MENU key on the C-More and scroll back to the *WHM* Menu.
23. Scroll to the *WHM Auto Mstr* option. The default value for this option is Off (disabled). If you wish to enable this option, select Yes and then press the ENTER key to store the setting.
24. If the *WHM Auto Mstr* option was set to Yes (enabled) in step 23, proceed to step 25. If this option remains set to No (disabled), skip step 25 and go to step 27.

WHM Programming & Start-Up Procedure - Continued

25. Scroll to the *WHM Auto Timer* option will appear. This option is used to select the elapsed time interval between failure of the WHM Master and switch-over to a new WHM Master (default = 30 seconds). If desired, this time interval can be changed to any value within the allowable range of 10 to 120 seconds. To alter this setting, press the CHANGE key and enter the desired time interval. Press the ENTER key to store the new setting.
26. The WHM Auto Mstr and WHM Auto Timer options will be automatically “pushed” to the WHM Slaves on the network.
27. This completes all programming for the WHM.

9.9 TROUBLESHOOTING

Faults which may occur during WHM operation include the items listed in Table 9-2.

Table 9-2. WHM Troubleshooting

FAULT INDICATION	PROBABLE CAUSE	CORRECTIVE ACTION
OUTLET TEMPERATURE display is flashing on 2 C- More Control Panels	1. Two C-Mores have their WHM Mode menu option set to WHM Master	1. Check the WHM Mode entries in the units which have their displays flashing. Change one of the WHM Mode settings to WHM Slave.
REMOTE LED on one or more WHM units is Off.	1. Improperly connected or faulty RS485 Modbus wiring. 2. Improper Comm address. 3. Unit Comm address is not unique.	1. Check the polarity of the RS485 Comm connections on the I/O board of the affected unit. Also, ensure that all Modbus wiring connections to the unit are secure. 2. Verify that the address of the affected unit is within the allowable range (1 thru 8). 3. Check to ensure that none of the units have the same Comm address.
Actuator-controlled sequencing valve does not open	1. Control cable not connected to valve actuator. 2. 24 VAC power not being supplied to valve actuator. 3. Defective valve actuator.	1. Ensure that the control cable from the unit's I/O Box is connected to the valve actuator. 2. Remove the enclosure cover from the valve actuator and verify that 24 VAC is present at Terminal 2 of the actuator. 3. Replace valve actuator. Following replacement, the actuator stroke will have to be calibrated to ensure it fully opening and closing.

9.10 SEQUENCING VALVE DESCRIPTION & OPERATION

Brief descriptions of Actuator-Controlled Sequencing Valve, part no. 92093 and its operating characteristics are provided in sections 9.9.1 and 9.9.2, respectively

9.10.1 Sequencing Valve Description

The Actuator-Controlled Sequencing Valve shown in Figure 9-5 is comprised of the following main components:

- 2" Brass Ball Valve
- Actuator Linkage
- Actuator Housing
- Valve Shaft Handle


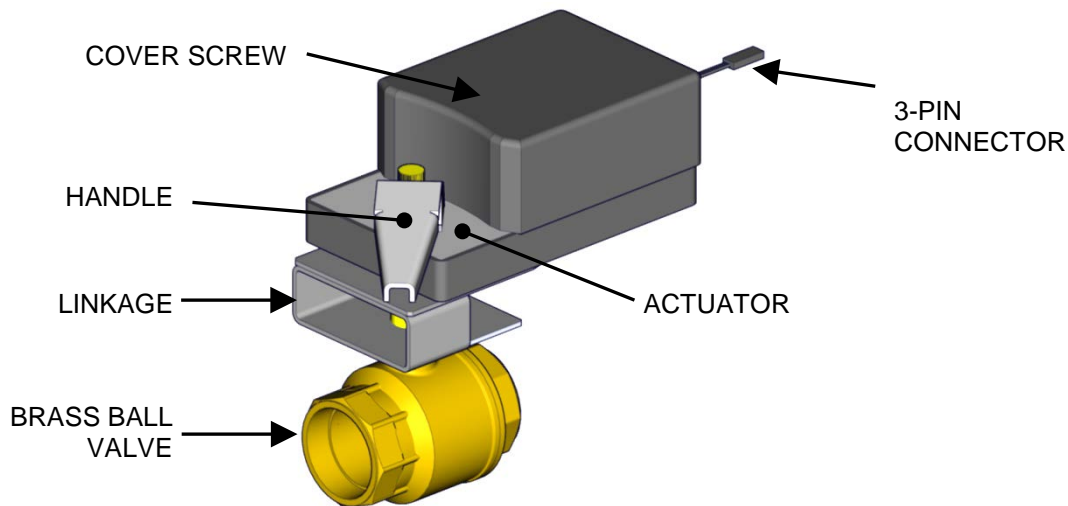


Figure 9-5. Actuator-Controlled Sequencing Valve (92093)

The Actuator Housing contains a cover which is removed by simply loosening a single captive screw. Removing the cover provides access to a PC Board containing wiring connections and control circuitry components as shown in Figure 9-6.

The components on the PC board include DIP switches which are preset at the factory and should not be changed unless instructed to do so.

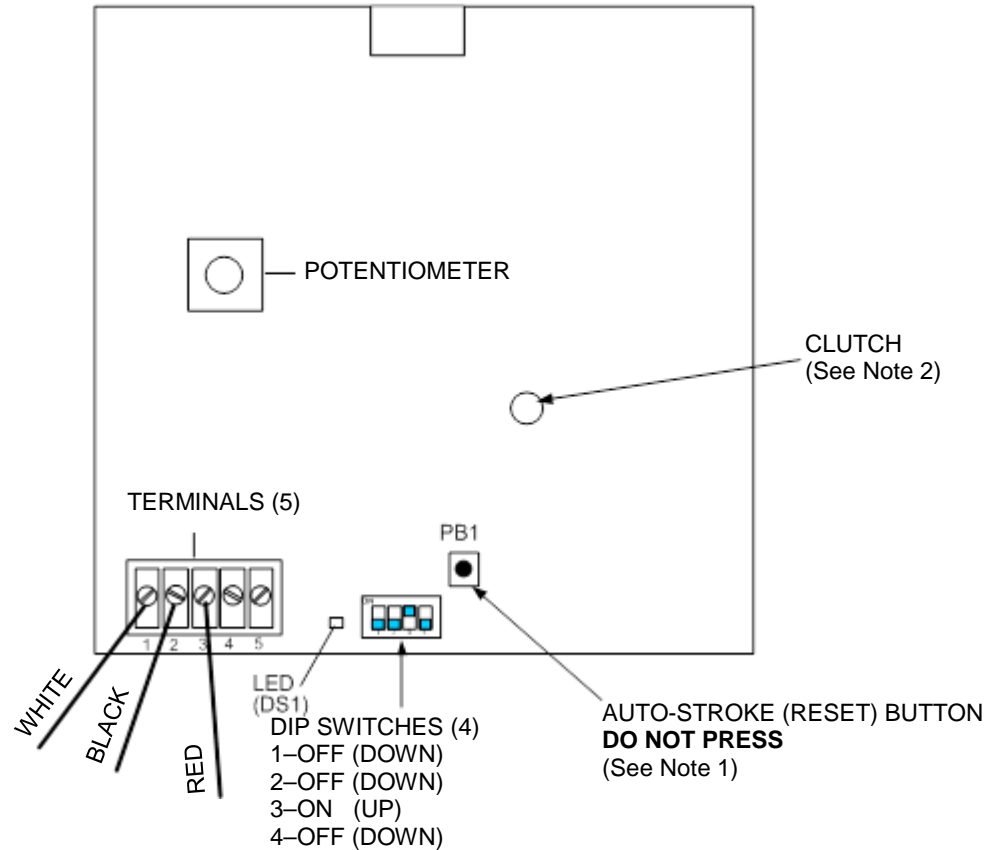

NOTES:

1. **DO NOT PRESS AUTO-STROKE (RESET) BUTTON.** DOING SO MAY ALTER ACTUATOR CALIBRATION
2. DEPRESS AND HOLD BRASS CLUTCH BUTTON TO MANUALLY ROTATE VALVE

Figure 9-6. Actuator PC Board Components

⚠ CAUTION ⚠

Power must be removed from the Actuator prior to attempting to disengage the clutch. Failure to observe this precaution may damage the Actuator.

The PC board also contains a brass button which is used to disengage the clutch and permit the ball valve to be manually rotated. To disengage the clutch, proceed as follows:

Actuator Clutch Disengagement

1. Disconnect the 4-pin connector on the Actuator to ensure that 24 VAC power is not being supplied
2. Press and hold the brass **CLUTCH** button shown in Figure 9-6.
3. With the **CLUTCH** button depressed, the ball valve can be manually rotated from the fully open (90°) to the fully closed (0°) position.

9.10.2 Sequencing Valve Operating Characteristics

The Sequencing Valve is powered by 24 VAC which is supplied from a step-down transformer located in the Power Box of the Innovation Water Heater. The 24 VAC power output and a 2 to 10Vdc control signal from the I/O Box of the Water Heater are routed to the Sequencing Valve via a 4-pin Molex connector.

During normal Water Heater Management (WHM), a control signal of less than (<) - 2Vdc will rotate the valve to the fully open (90°) position. Conversely, a control signal above 8Vdc will rotate the valve to the fully closed (0°) position. The sequencing valve will send a status of the Valve (open/close) as a feedback signal (2 – 10Vdc) to the C-More. The valve position can be observed on the scale provided on the Actuator Linkage.

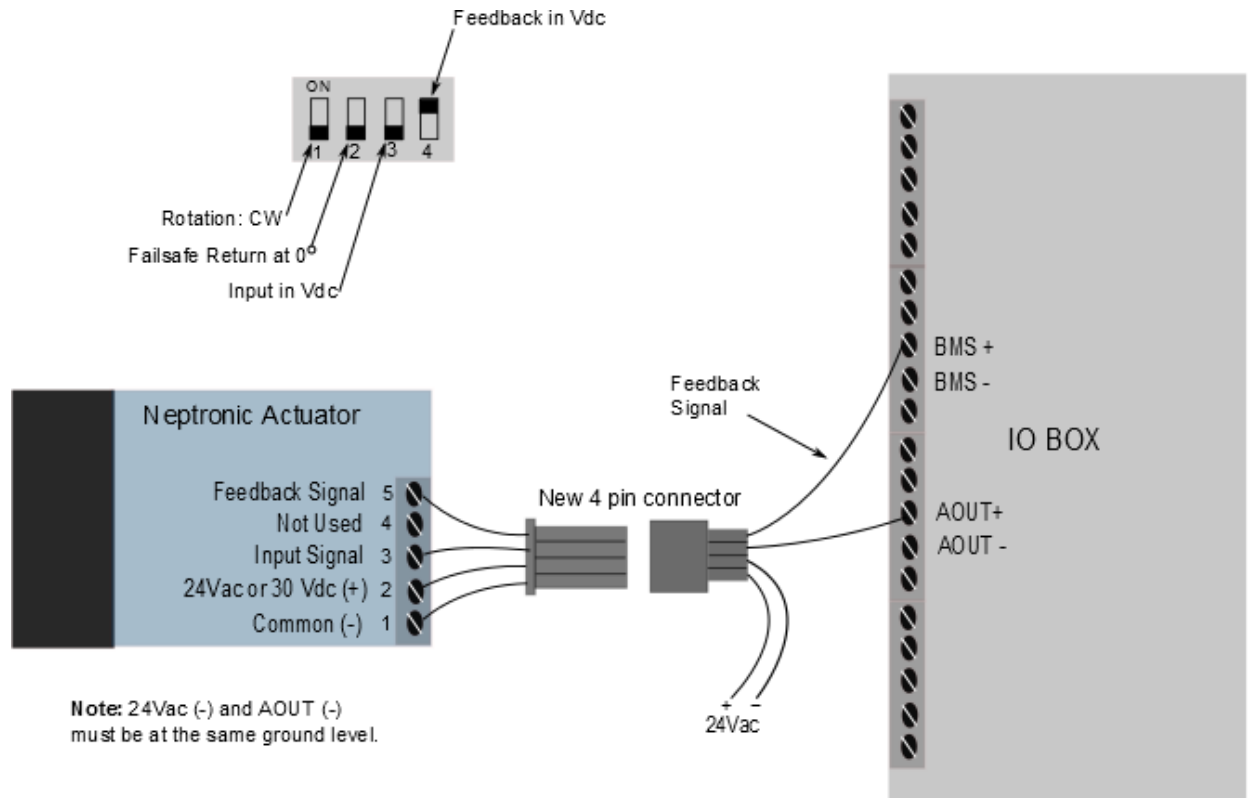


Figure 9-7. Sequencing Valve Wiring

This Page Is Intentionally Blank

APPENDIX A – INNOVATION MENU ITEM DESCRIPTIONS

MENU LEVEL & OPTION	DESCRIPTION
OPERATING MENU	
Active Setpoint	This is the setpoint temperature to which the control is set when operating in the Constant Setpoint or Remote Setpoint Mode. When in the Constant Setpoint Mode, this value is equal to the Internal Setpoint setting in the Configuration Menu. When in the Remote Setpoint Mode, this value is the setpoint equivalent to the remote analog signal supplied to the unit
Air Temp	For monitoring purposes only
Outdoor Temp	Displayed only if outdoor sensor is installed and enabled.
Valve Position In	Desired input valve position. This would normally be the same as the valve position shown on the bargraph when the heater is operating.
Flame Strength	Displays flame strength from 0% to 100%.
Run Cycles	Displays the total number of run cycles from 0 to 999,999.
Run Hours	Displays total run time of unit in hours from 0 to 9,999,999.
Fault Log	Displays information on the last 20 faults (0 – 19).
SETUP MENU	
Password	Allows password to be entered. Once the valid password (159) is entered, options in the Setup, Configuration and Tuning Menus can be modified.
Language	English only
Time	Displays time from 12:00 am to 11:59 pm.
Date	Displays dates from 01/01/00 to 12/31/99
Unit of Temp	Permits selection of temperature displays in degrees Fahrenheit (°F) or degrees Celsius (°C). (Default = °F)
Comm Address	For RS-485 communications (0 to 127). Default address is 0. RS-232 should have its own (programmable) password.
Baud Rate	Allows communications Baud Rate to be set (2400 to 19.2K). (Default = 9600)
Software Version	Identifies the current software version of the control box (Ver 0.0 to Ver 9.9).

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX A – INNOVATION MENU ITEM DESCRIPTIONS

Innovation Menu Item Descriptions – *Continued*

MENU LEVEL & OPTION	DESCRIPTION
CONFIGURATION MENU	
Internal Setpoint	Allows internal setpoint to be set . (Default = 130°F)
Unit Type	Allows selection of KC Boiler, KC Boiler LN, BMK Boiler, BMK Boiler LN, BMK Boiler Dual, KC Water Heater, KC Water Heater LN, Water Heater 2010, RECON Water Heater
Unit Size	Sets unit size from 0.5 to 6.0 MBTUs. (Default = 1.0 MBTU)
Fuel Type	Allows selection of Natural Gas or Propane. (Default = Natural Gas)
Heater Mode	It allows selection of: Constant Setpoint, or Remote Setpoint. (Default = Constant Setpoint Mode)
Remote Signal	Used to set the type of external signal which will be used when operating in the Remote Setpoint Mode. (Default = 4-20 mA/1-5V)
Outdoor Sensor	Allows outdoor sensor function to be enabled or disabled. (Default = disabled.)
Setpoint Lo Limit	Used to set the minimum allowable setpoint (40°F to Setpoint Hi Limit). (Default = 60°F)
Setpoint Hi Limit	Used to set the maximum allowable setpoint (Setpoint Lo Limit to 240°F). (Default = 200°F)
Temp Hi Limit	This is the maximum allowable outlet temperature (40 to 240°F). Any temperature above this setting will turn off the unit. The temperature must then drop 5°F below this setting to allow the unit to run. (Default = 160°F)
Max Valve Position	Sets the maximum allowable valve position for the unit (40% to 100%). (Default = 100%)
Pump Delay Timer	Specifies the amount of time (0 to 30 min.) to keep the pump running after the unit turns off. (Default = zero)
Aux Start On Dly	Specifies the amount of time to wait (0 to 120 sec.) between activating the Aux Relay (due to a demand) and checking the pre-purge string to start the heater. (Default = 0 sec)
Failsafe Mode	Allows the Failsafe mode to be set to either Constant Setpoint or Shutdown. (Default = Shutdown)
Analog Output	Must be set to Valve Pos 0-10V.
Lo Fire Timer	Specifies how long (2 to 600 sec.) to remain in the low fire position after ignition, before going to the desired output. (Default = 2 sec)
Network Timeout	Specifies the timeout value (seconds) before a Modbus fault is declared. Available settings range from 5 to 999 seconds. (Default = 30 seconds)

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX A – INNOVATION MENU ITEM DESCRIPTIONS

Innovation Menu Item Descriptions – *Continued*

MENU LEVEL & OPTION	DESCRIPTION
CONFIGURATION MENU – <i>Continued</i>	
Shutoff Delay Temp	<p>This entry will reduce excessive ON/OFF cycling in AUTO mode. When the PID temperature Control tries to lower the valve position below the Stop Level, the unit will stay at the Stop Level (will not cycle OFF) until the Outlet Temperature rises above Setpoint Plus the Shutoff Delay Temp entry.</p> <p>NOTE: This feature is only active in Constant Setpoint and Remote Setpoint modes. Setting range is from 0 to 25, (Default = 10).</p>
Demand Offset	<p>This entry will reduce excessive ON/OFF cycling in AUTO mode. When this entry is a non-zero value, the unit will not turn on again until <i>Valve Position In</i> reaches the Start Level value AND the Outlet Temperature goes below the <i>Active Setpoint – Demand Offset</i>. In addition, the heater will fire at the 29% Valve Position level or below for a period of one minute.</p> <p>When this entry is set to zero, the unit will turn on again as soon as the <i>Valve Position in</i> reaches the <i>Start Level</i> value. There will not be a one minute delay when firing at the 29% Valve Position level.</p> <p>Setting range is 0 to 25. (Default = 0)</p>
Deadband High Deadband Low	<p>Deadband High and Deadband Low settings create an “Outlet Temperature” Zone. In which no Valve Position corrections will be attempted.</p> <p>The Deadband ZONE is defined as operating with an Outlet Temperature between Active Setpoint + Deadband High and Active Setpoint – Deadband Low.</p> <p>When the Outlet Temperature reaches Active Setpoint and remains there for a period of 15 seconds, the unit will go into a DEADBAND MODE at which point no Valve Position corrections will be attempted while the Outlet Temperature remains anywhere within the Deadband ZONE. When the unit is in the DEADBAND MODE, the °F or °C LED will flash on and off. When the Outlet Temperature drifts out of the Deadband ZONE, the DEADBAND MODE will be terminated and the PID LOOP will again attempt Valve Position corrections.</p> <p>Setting range is 0 to 25. (Default = 0 for both Deadband High and Deadband Low)</p>

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX A – INNOVATION MENU ITEM DESCRIPTIONS

Innovation Menu Item Descriptions - *Continued*

MENU LEVEL & OPTION	DESCRIPTION
WHM MENU	
WHM Mode	This option is used to enable/disable the WHM Mode and set the unit to function as a WHM Slave, or WHM Master. (Default = Off)
WHM Setpoint	This is the temperature (°F) that each unit in the WHM system is trying to control to. (Default = 130°F)
WHM Nxt On VP (See NOTE at end of page)	This is the Next On A/F Valve position (%) for the system. When all enabled water heaters have a fire rate greater than this value, it is time to enable another water heater, if one is available. This value should always be greater than the Next Off A/F Valve, and there should be a reasonable spread between the 2 values. (Default = + 65%)
WHM Nxt Off VP (See NOTE at end of page)	This is the Next Off A/F Valve position (%) for the system. When all enabled water heaters have a A/F Valve position less than this value, it is time to shut down another water heater, if one is available. This value should always be less than the Next On A/F Valve position, and there should be a reasonable spread between the 2 values. (Default = + 35%)
Lead/Lag Hours	The Lead/Lag Hours menu option is basically designed to spread the total number of run hours accumulated on all units in the system so that each of the units have approximately the same number of run hours. The default value for this option is 72 hours.
Setback Setpoint	This is the setpoint temperature (°F) that each unit in the WHM system is trying to control to during periods of low (or no) DHW demand. The setback setpoint temperature can be set from 40°F to 220°F. (Default = 130°F)
Setback Start: Setback End:	Specifies the start and end times that the Setback Setpoint will be in effect. (12:00am – 11:59pm)
WHM Auto Mstr	Enables (Yes) or disables (No) an Automatic WHM Master Switch-Over function. When enabled (Yes) the WHM will automatically select a new Master if the current Mater fails or loses power. (Default = No (Disabled))
WHM Auto Timer	When the WHM Auto Mstr option is set to Yes (Enabled), the WHM Auto Timer option allows the user to select the elapsed time interval between failure of the WHM Master and switch-over to a new WHM Master. The default for this option is 30 seconds. The allowable entry range is 10 seconds to 120 seconds.
WHM Min Addr	Set the minimum address of the heaters to be controlled by the master. The WHM Min Addr and WHM Max Addr must differ by no more than 7. (Default = 1)

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX A – INNOVATION MENU ITEM DESCRIPTIONS

Innovation Menu Item Descriptions - *Continued*

MENU LEVEL & OPTION	DESCRIPTION
WHM MENU – <i>Continued</i>	
WHM Max Addr	Set the maximum address of the heaters to be controlled by the master. The WHM Min Addr and WHM Max Addr must differ by no more than 7. (Default = 8)
SSD Address	The Modbus Address of the SSD Device (protonode). Set this address to 247 if the WHM system is being monitored by a Protonode with Slave –Slave (SSD) programming. Set to zero (0) if no Protonode is installed. (Default = 0)
SSD Temp Format	SSD temp values can be accessed in Degrees or Points
1 Valve Status 8	Displays the valve status of all the units. 0= valve closed 1= valve open 2= valve stuck closed 3= valve stuck open
1 Comm Errors 8	Display Comm Errors of all the units.
WHM On Delay WHM off Delay	Specifies the WHM On and Off time delays associated with the Next ON VP and Next OFF VP menu options. Therefore, if the Next ON VP or Next OFF VP is at its preset Valve Position (%) for the specified Delay period, another heater will be turned ON or OFF. This is done to prevent cycling units on and off during short changes in load. Range = 30 to 300 seconds (Default = 60 sec.)
Over WHM Under	
WHM Min Units	Specifies the Minimum number of units required to be “on” or “active”. Range is 1 through 8. Default = 1.
WHM Warmup Time	Specifies the time a valve will remain closed when truning on a unit in order to assure that we do not release cold water into the building. When turning on a unit, the valve will open when either the Warmup Timer times out or the FeedForward Temperature reaches Setpoint. This value can be set from 0 to 300 seconds. (Default = 30)
WHM On Timeout	Specifies the time the WHM Master waits for a slave unit to turn On.
WHM Valve State	Displays the status of the WHM Sequencing Valve. (1 = ON, 0 = OFF)

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX A – INNOVATION MENU ITEM DESCRIPTIONS

Innovation Menu Item Descriptions - *Continued*

MENU LEVEL & OPTION	DESCRIPTION
WHM MENU – <i>Continued</i>	
Valve Override	Valve Override allows the user to manually control an Isolation Valve as follows: <ul style="list-style-type: none"> • Off– Valve Override is disabled and BST will automatically control the Isolation Valve. • Open – Valve Override is enabled and the Isolation Valve is Opened. Note! The valve will remain opened as long as the Valve Override feature is set to Open. Care must be taken to insure that this mode is turned Off during normal BST operation. <ul style="list-style-type: none"> • Closed – Valve
Valve Feedback	Enable or disable the Valve feedback feature
Valve Fdbk timer	The time allotted the Valve to Open or Close once a command has been issued before invoking a fault.
ValveFdbk Status	Displays a Valve status of the unit. 0= valve closed 1= valve open 2= valve stuck closed 3= valve stuck open
MB Head Temp En	Enable or disable the Modbus Header Temp sensor
WHM Header Temp	Display the Header Sensor
Mdbus Temp Units	Modbus temp unit format (°F or °C)
Header Temp Addr	Modbus header Temp address (default : 240)
Header Tmp Point	Modbus point to read the header temp register point (default : 14)
MB Outdr Sens En	Enable or disable the Modbus Outdoor Temp sensor
WHM Outdr Temp	Display Outdoor temp value
Outdoor Tmp Addr	Modbus Outdoor Temp address (default : 240)
Outdoor Tmp Pnt	Modbus point to read the Outdoor Temp register point (default : 15)
1 WHM Units 8	This menuitem shows the current status for each of the units being controlled by the WHM (8 max.). The characters in the display are defined as follows: - = Off Line, * = Not available (fault, etc.), 0 = Off, 1 = On, A = Lead On, a = Lead Off, B = Lag On, b = Lag Off The following example shows the status of 4 units (1 thru 4) being controlled by the WHM: 1 WHM Units 8 _ 1 _ 0 _ 1 _ * _ A _ b _ _____ Where: Unit 1 & 3 = On, Unit 2 = Off, Unit 4 = Not available, Unit 5 = Lead On, Unit 6 = Lag Off
SSD Poll Control	
Err Threshold	Max allowable comm errors before a comm. fault is invoked.
Comm Address	Set the Comm Address for the unit (This option also available in setup menu)

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX A – INNOVATION MENU ITEM DESCRIPTIONS

NOTE

The WHM Nxt On VP and WHM Nxt Off VP will determine how tight a range the temperature is controlled over and how quickly the system responds to a change in load. A narrow difference between Nxt On VP and WHM Nxt Off VP will make the system more responsive to load changes.

Innovation Menu Item Descriptions - Continued

MENU LEVEL & OPTION	DESCRIPTION
TUNING MENU	
Prop Band	Generates a valve position based on the error that exists between the setpoint temperature and the actual outlet temperature. If the actual error is less than the proportional band setting (1 to 120°F), the valve position will be less than 100%. If the error is equal to or greater than the proportional band setting, the valve position will be 8%.
Integral Gain	This sets the fraction of the output, due to setpoint error, to add or subtract from the output each minute to move towards the setpoint. Gain is adjustable from 0.00 to 1.00 (Default = 1.6).
Derivative Time	This value (0.0 to 20.0 min.) responds to the rate of change of the setpoint error. This is the time that this action advances the output.
Min Load Adj	Setting is adjustable from -50°F to +50°F. It adjusts the output by adding an offset to the breakpoint chart at minimum flow. This is used to fine tune Feed-Forward (FFWD) output at low flow levels. (Default = zero)
Max Load Adj	Setting is adjustable from -50°F to +50°F. It adjusts the output by changing the scaling of the breakpoint chart at maximum flow. (Default = zero).
FFWD Temp	Displays the Feed-Forward temperature.
Outlet Feedback	Used to Enable or Disable feedback. Disable this function for Feed-Forward control only.
Feedback Gain*	Adjustable from 0.01 to 1.00 (Default = 0.05).
Breakpoint at 100% Thru Breakpoint at 0%	Allows breakpoint temperature settings (30°F to 240°F) to be entered for 100% to 0% in 10% increments. See Appendix D for default values.
Warmup Prop Band	Prop Band during Warmup
Warmup Int Gain	Int Gain during Warmup
Warmup PID timer	PID timer during Warmup
FDback Start Pos	Start of Feedback Position
Fdback End Pos	End of Feedback Position
Max Feedback	Max Feedback

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX A – INNOVATION MENU ITEM DESCRIPTIONS

Innovation Menu Item Descriptions – *Continued*

MENU LEVEL & OPTION	DESCRIPTION
TUNING MENU – <i>Continued</i>	
Fdback Value	Monitor Feedback Value
Temp Gov Enable	Temperature Governor Enable
GOV Limit-4	High Temp Lim - 4 Valve position adjust value
GOV Limit-5	High Temp Lim - 5 Valve position adjust value
GOV Limit-6	High Temp Lim - 6 Valve position adjust value
GOV Limit-7	High Temp Lim - 7 Valve position adjust value
GOV Limit-8	High Temp Lim - 8 Valve position adjust value
PID Output	Calculated PID Output
P Output	Proportional Band Output
I Output	Integral Output
D Output	Derivative Output
Reset Defaults?	Allows Tuning Menu options to be reset to their Factory Default values.

* Only displayed when Heater Tuning Display is enabled by factory authorized personnel.

APPENDIX B – STARTUP, STATUS AND FAULT MESSAGES

Table B-1. Startup and Status Messages

MESSAGE	DESCRIPTION
DEMAND DELAY XX sec	Displayed if Demand Delay is active.
DISABLED HH:MM pm, pm MM/DD/YY	Displayed if ON/OFF switch is set to OFF. The display also shows the time (am or pm) and date that the unit was disabled.
FLAME PROVEN	Displayed after flame has been detected for a period of 2 seconds. Initially, the flame strength is shown in %. After 5 seconds has elapsed, the time and date are shown in place of flame strength.
IGNITION TRIAL XX sec	Displayed during ignition trial of startup sequence. The duration of cycle counts up in seconds.
PURGING XX sec	Displayed during the purge cycle during startup. The duration of the purge cycle counts up in seconds.
STANDBY	Displayed when ON/OFF switch is in the ON position, but there is no demand for heat. The time and date are also displayed.
WAIT	Prompts the operator to wait.
WARMUP XX sec	Displayed for 2 minutes during the initial warm-up only.

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX B – STARTUP, STATUS AND FAULT MESSAGES

Table B-2. Fault Messages

FAULT MESSAGE	FAULT DESCRIPTION
AIRFLOW FAULT DURING PURGE	The Blower Proof Switch opened during purge, or air inlet is blocked.
AIRFLOW FAULT DURING IGN	The Blower Proof Switch opened during ignition.
AIRFLOW FAULT DURING RUN	The Blower Proof Switch opened during run.
DELAYED INTERLOCK OPEN	The Delayed Interlock is open.
DIRECT DRIVE SIGNAL FAULT	The direct drive signal is not present or is out of range.
FFWD TEMP SENSOR FAULT	The temperature measured by the Feed Forward (FFWD) Sensor is out of range.
FLAME LOSS DURING IGN	The Flame signal was not seen during ignition or lost within 5 seconds after ignition.
FLAME LOSS DURING RUN	The Flame signal was lost during run.
HEAT DEMAND FAILURE	The Heat Demand Relays on the Ignition board failed to activate when commanded.
HIGH EXHAUST TEMPERATURE	The High Exhaust Temperature Limit Switch is closed.
GAS PRESSURE FAULT	The High Gas Pressure Limit Switch OR Low Gas Pressure Limit Switch is open.
HIGH WATER TEMPERATURE	The temperature measured by the Outlet Sensor exceeded the Temp Hi Limit setting.
HIGH WATER TEMP SWITCH OPEN	The High Water Temperature Limit Switch is open.
IGN BOARD COMM FAULT	A communication fault has occurred between the PMC board and Ignition board.
IGN SWTCH CLOSED DURING PURGE	The Ignition Position Limit switch on the Air/Fuel Valve closed during purge.
IGN SWTCH OPEN DURING IGNITION	The Ignition Position Limit switch on the Air/Fuel Valve opened during ignition.
INTERLOCK OPEN	The Remote Interlock is open.
LINE VOLTAGE OUT OF PHASE	The Line (Hot) and Neutral wires are reversed.
LOW WATER LEVEL	The Low Water Cutoff board is indicating low water level.
NETWORK COMM FAULT	The RS-485 network information is not present or is corrupted.

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX B – STARTUP, STATUS AND FAULT MESSAGES

Table B-2. Fault Messages – Continued

FAULT MESSAGE	FAULT DESCRIPTION
OUTDOOR TEMP SENSOR FAULT	The temperature measured by the Outdoor Air Sensor is out of range.
OUTLET TEMP SENSOR FAULT	The temperature measured by the Outlet Sensor is out of range: OUTLET TEMPERATURE display = SHt Indicates sensor is shorted OUTLET TEMPERATURE display = OPn indicates sensor is open-circuited
PRG SWTCH CLOSED DURING IGNITION	The Purge Position Limit Switch on the Air/Fuel Valve closed during ignition.
PRG SWTCH OPEN DURING PURGE	The Purge Position Limit Switch on the Air/Fuel Valve opened during purge.
RECIRC PUMP FAILURE	Internal Recirculation Pump has failed.
REMOTE SETPT SIGNAL FAULT	The Remote Setpoint signal is not present or is out of range.
RESIDUAL FLAME	The Flame signal was seen for more than 60 seconds during standby.
SSOV SWITCH OPEN	The SSOV switch opened during standby.
SSOV FAULT DURING PURGE	The SSOV switch opened during purge.
SSOV FAULT DURING IGN	The SSOV switch closed or failed to open during ignition.
SSOV FAULT DURING RUN	The SSOV Switch closed for more than 15 seconds during Run.
SSOV RELAY FAILURE	A failure has been detected in one of the relays that control the SSOV.
STEPPER MOTOR FAILURE	The Stepper Motor failed to move the Air/Fuel Valve to the desired position.
WARNING EXHAUST TEMP HIGH (Flashing)	The exhaust gas sensor is measuring high temperature. Level #1: 180°F, Flash WARNING Level #2: 190°F, Govern fire rate/flash WARNING Level #3. 200°F, Shut down unit (requires manual reset)

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX B – STARTUP, STATUS AND FAULT MESSAGES

This Page Is Intentionally Blank

APPENDIX C – TEMPERATURE SENSOR RESISTANCE/VOLTAGE CHART

**TEMPERATURE SENSOR RESISTANCE/VOLTAGE CHART
(BALCO)**

TEMP (°F)	RES (OHMS)	VOLTS*
-40	779.0	1.93
-30	797.5	1.96
-20	816.3	1.99
-10	835.4	2.02
0	854.8	2.05
10	874.6	2.07
20	894.7	2.10
30	915.1	2.12
40	935.9	2.15
50	956.9	2.17
60	978.3	2.20
70	1000.0	2.23
80	1022.0	2.25
90	1044.4	2.27
100	1067.0	2.30
110	1090.0	2.32
120	1113.3	2.34
130	1137.0	2.36
140	1160.9	2.39
150	1185.2	2.41
160	1209.5	2.43
170	1234.7	2.45
180	1260.0	2.47
190	1285.6	2.50
200	1311.4	2.52
210	1337.7	2.54
220	1364.2	2.56
230	1391.0	2.58
240	1418.2	
250	1445.7	

*Voltage at AUX & Common terminals in the I/O Box

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX C – TEMPERATURE SENSOR RESISTANCE/VOLTAGE CHART

This Page Is Intentionally Blank

APPENDIX D – INNOVATION DEFAULT SETTINGS

MENU & OPTION	FACTORY DEFAULT
SETUP MENU	
Password	0
Language	English
Unit of Temp	Fahrenheit
Comm Address	0
Baud Rate	9600
CONFIGURATION MENU	
Internal Setpt	130°F
Unit Type	Innovation WH
Unit Size	600 MBH, 800 MBH, 1060 MBH, 1350 MBH
Fuel Type	Natural Gas
Heater Mode	Constant Setpoint
Remote Signal (If Heater Mode = Remote Setpoint)	4 – 20 mA ,/ 1-5V
Outdoor Sensor	Disabled
Setpt Lo Limit	60°F
Setpt Hi Limit	200°F
Temp Hi Limit	160°F
Max Valve Position	100%
Aux Start On Dly	0 sec
Failsafe Mode	Shutdown
mA Output	Off
Lo Fire Timer	2 sec.
Setpt Limiting	Disabled
Setpt Limit Band	0°F
Network Timeout	30 seconds
HI DB Setpt En	30
Demand Offset	0
Deadband High	0
Deadband Low	0


Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX D – INNOVATION DEFAULT SETTINGS

INNOVATION DEFAULT SETTINGS - *Continued*

MENU & OPTION	FACTORY DEFAULT
TUNING MENU	
Prop Band	8°F
Integral Gain	1.60
Derivative Time	0.10 min
Min Load Adj	0°F
Max Load Adj	0°F
FFWD Temp	N/A
Outlet Feedback	On
Feedback Gain	0.05
Breakpoint At 100%	85°F
Breakpoint At 90%	86°F
Breakpoint At 80%	87°F
Breakpoint At 70%	88°F
Breakpoint At 60%	89°F
Breakpoint At 50%	90°F
Breakpoint At 40%	94°F
Breakpoint At 30%	103°F
Breakpoint At 20%	118°F
Breakpoint At 10%	134°F
Breakpoint At 0%	136°F
Reset Defaults?	No

APPENDIX E – DIMENSIONAL DRAWINGS

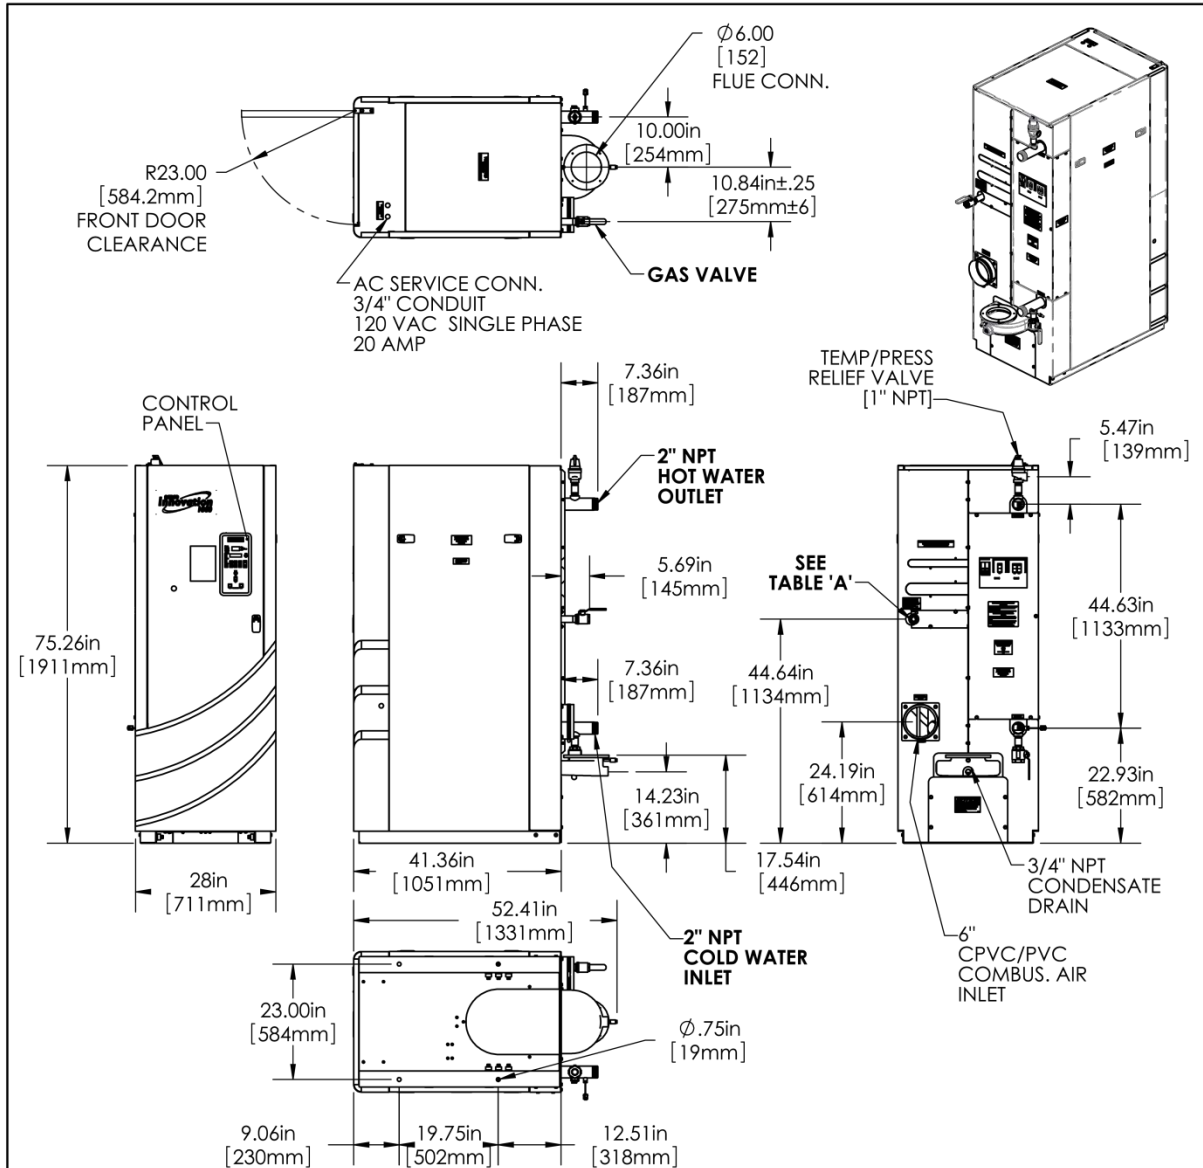

HEAT EXCHANGER DESIGN STANDARDS			
	MAX. WORKING PRESS. (PSIG)	MAXIMUM TEMP. (°F)	TEST PRESS. (PSIG)
SHELL SIDE	160	210	240
ASME B & PV CODE SECTION IV STAMP HLW			

MATERIALS OF CONSTRUCTION	
PRESSURE VESSEL	SHELL: 3/16" THK, STAINLESS 304L, SA-312 [ELECTROLESS NICKEL PLATED]
COMBUSTION CHAMBER	316L STAINLESS HELICAL TUBES, SA-249 DOMED HEAD: 316 STAINLESS, SA-240 TUBESHEET: STAINLESS 316, SA-240 1/4" WALL WELDED TUBE SA-312 TP316 [ALL ELECTROLESS NICKEL PLATED]

TABLE 'A'		
MODEL	NAT GAS INLET CONNECTION	PROPANE INLET CONNECTION
INN600	1" NPT	1/2" NPT
INN800		1/2" NPT
INN1060		3/4" NPT
INN1350		3/4" NPT

ALL DIMENSIONS ARE IN INCHES [mm]

AERCO INTERNATIONAL INC.
Blauvelt, NY 10913


**AERCO Innovation 600/800/1060/1350
GAS FIRED WATER HEATER
DIMENSIONAL OUTLINE**

DWN BY: CEW	DATE: 9-14-10	DWG. NO.:	REV
SCALE: NTS	SIDE: A	AP-A-888	H
APPD BY:	REV DATE: 8-14-13		

Drawing Number: AP-A-888 rev H

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX E – DIMENSIONAL DRAWINGS

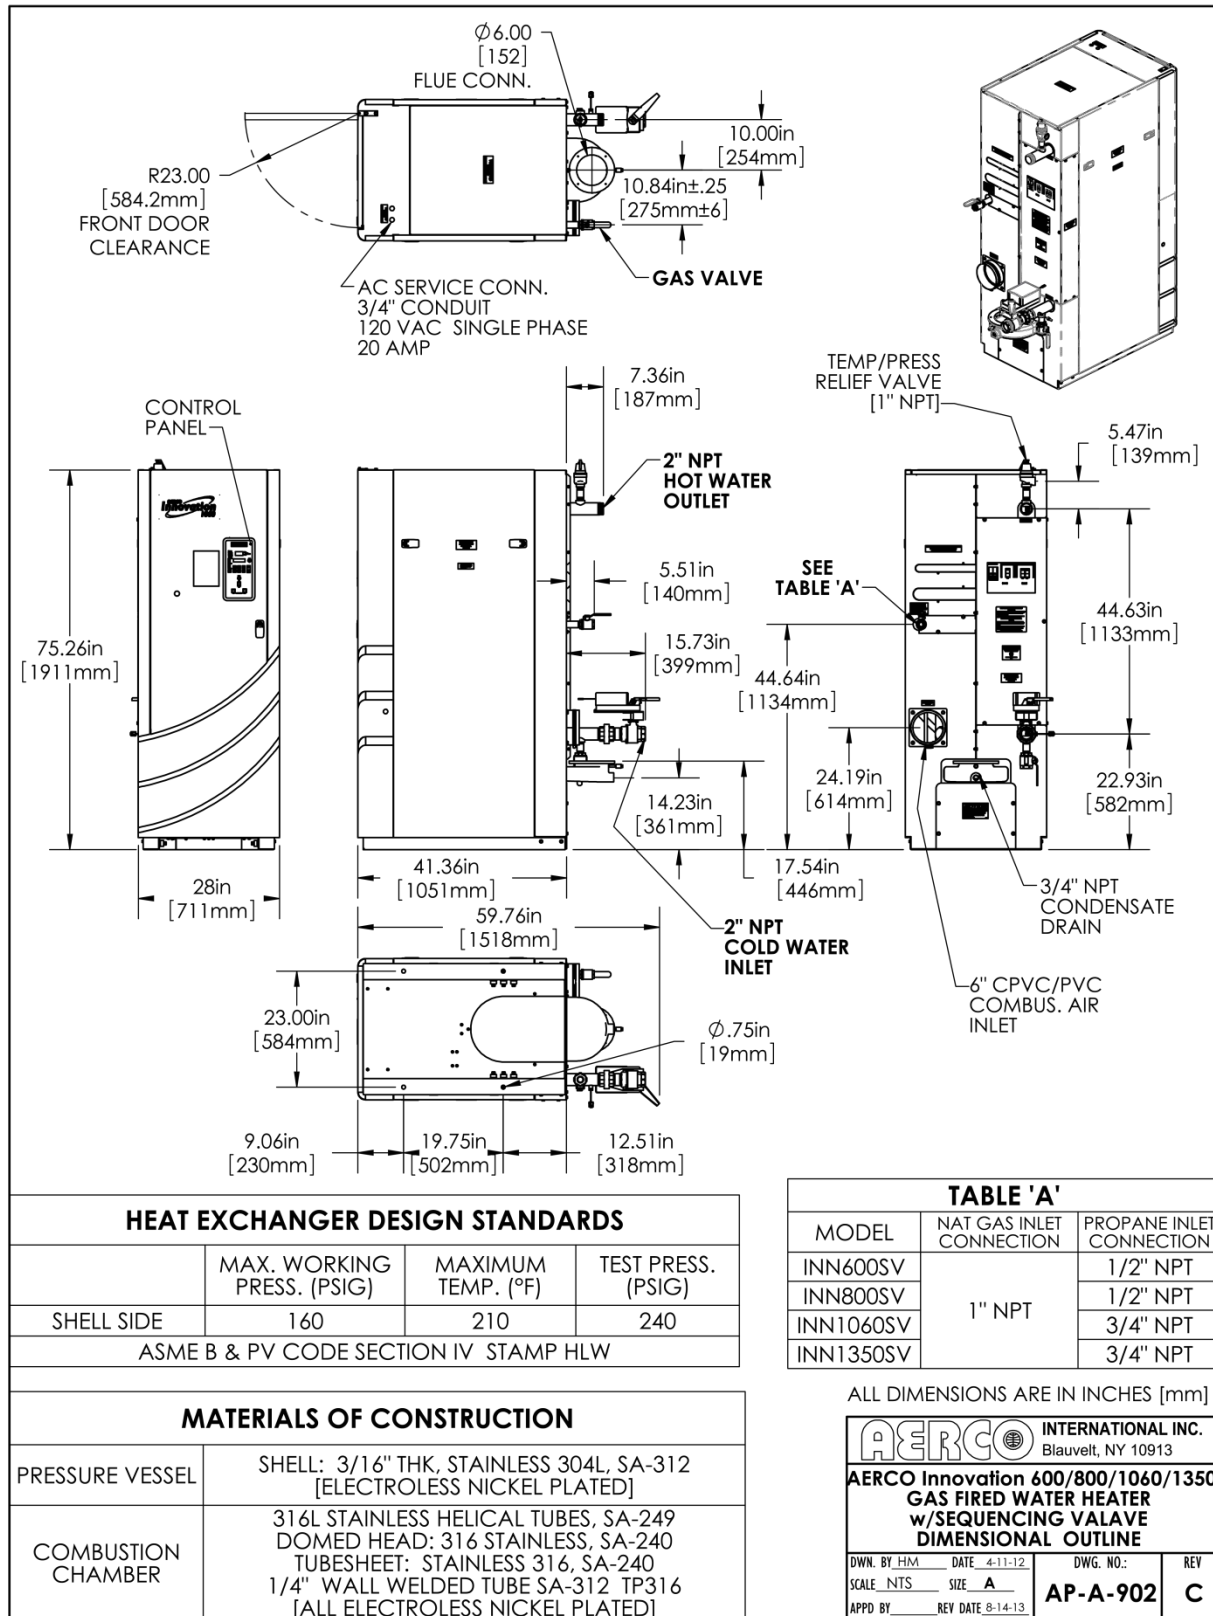

HEAT EXCHANGER DESIGN STANDARDS

	MAX. WORKING PRESS. (PSIG)	MAXIMUM TEMP. (°F)	TEST PRESS. (PSIG)
SHELL SIDE	160	210	240
ASME B & PV CODE SECTION IV STAMP HLW			

MATERIALS OF CONSTRUCTION

PRESSURE VESSEL	SHELL: 3/16" THK, STAINLESS 304L, SA-312 [ELECTROLESS NICKEL PLATED]
COMBUSTION CHAMBER	316L STAINLESS HELICAL TUBES, SA-249 DOMED HEAD: 316 STAINLESS, SA-240 TUBESHEET: STAINLESS 316, SA-240 1/4" WALL WELDED TUBE SA-312 TP316 [ALL ELECTROLESS NICKEL PLATED]

TABLE 'A'

MODEL	NAT GAS INLET CONNECTION	PROPANE INLET CONNECTION
INN600SV	1" NPT	1/2" NPT
INN800SV		1/2" NPT
INN1060SV		3/4" NPT
INN1350SV		3/4" NPT

ALL DIMENSIONS ARE IN INCHES [mm]

AERCO INTERNATIONAL INC.

Blauvelt, NY 10913

AERCO Innovation 600/800/1060/1350
GAS FIRED WATER HEATER
w/SEQUENCING VALVE
DIMENSIONAL OUTLINE

DWN. BY: HM	DATE: 4-11-12	DWG. NO.:	REV
SCALE: NTS	SIZE: A	AP-A-902	C
APPD BY:	REV DATE: 8-14-13		

Drawing Number: AP-A-902 rev C

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX F – PARTS LIST DRAWINGS

APPENDIX F – PARTS LIST DRAWINGS

Innovation 600/800/1060/1350 Parts List

Item	Qty	Part #	Description	Item	Qty	Part #	Description
HEAT EXCHANGER							
1 ⑤	1	24336-1	PLATED HEAT EXCHANGER KIT INN 600	32	2	34063	LEG: BASE
	1	24336-2	PLATED HEAT EXCHANGER KIT INN 800	33	1	30090	PANEL: ELECTRICAL
	1	24336-3	PLATED HEAT EXCHANGER KIT INN 1060	GASKETS / "O" RINGS			
	1	24336-4	PLATED HEAT EXCHANGER KIT INN 1350				
DYNAMIC LOAD ANTICIPATOR ASSY				34	1	18900	SEAL: MANIFOLD TO LOWER HEAD
				35	1	122537	GASKET: EXH MANIF TO COMB CHAMB
2	1	69197	WATER CIRCULATION PUMP	36	1	GP-18899	BURNER GASKET
3	1	92121	BALL VALVE, 3/4" NPT LEAD FREE	37	1	81136	GASKET: INTAKE MANIFOLD
4	1	92065-6	T&P VALVE 3/4F X 3/4F	38	1	124749	FIBER FRAX GASKET
5	3	123449	SENSOR: TEMPERATURE	39	1	81150	GASKET: FLAME DETECTOR
6	1	92060	VALVE, 3/4" DRAIN MNPT X GHT	40	2	18532	SHELL GASKET: 1/16 THK
GAS TRAIN				41	1	18556	RELEASE GASKET
				42	1	123077	UPPER HEAD COPPER LINER
7 ②	1	22122	STD FM GAS TRAIN INN600/800/1060 NAT GAS	43 ⑤	1	81064	GASKET: BLOWER
	1	22122-1	DBB GAS TRAIN, NAT GAS	44 ①⑤	1	81057	GASKET: BLOWER
	1	22179	STD FM GAS TRAIN, 600/800 PROPANE	45 ①④	1	88003	O-RING #2-339
	1	22180	STD FM GAS TRAIN, 1060 PROPANE	46 ③	1	88004	O-RING #2-244 BUNA-N
	1	22168	STD FM 1" GAS TRAIN, INN 1350	CONTROLS			
	1	22168-1	DBB GAS TRAIN, NAT GAS, INN 1350				
EXHAUST MANIFOLD				47	1	64099	POWER BOX - w/o SEQ VALVE
				47	1	64077	POWER BOX - w SEQ VALVE
8	1	44085-1	6" EXHAUST MANIFOLD - INNOVATION	48	1	65085	TRANSFORMER: IGNITION
				49 ①	1	65146	IGNITION CABLE ASSEMBLY
AIR FUEL DELIVERY SYSTEM - BLOWER, A/F VALVE & ACCESS				50 ①	1	63143	HARNESS: SHELL WIRING
				51 ①	1	63079	HARNESS: INNOVATION CONTROL
10 ⑤	1	24111	BLOWER: AMETEK 8.9"	52	1	69158	I/O BOX WITH ONAER & SEQ VALVE
11 ④	1	24220-3	A/F VALVE ASSY, INN 600/800/1060	52	1	69153	I/O BOX WITH ONAER & w/o SEQ VALVE
	1	24220-4	A/F VALVE ASSY, INN 1350 ONLY	53	1	123552	switch, over-temp - manual
12	1	59138	AIR FILTER: 6"	54	1	123966	SWITCH: OVER TEMP-AUTO RESET
13	1	61024	AIR INLET TEMPERATURE SENSOR	55 ⑤	1	123843	LOW WATER CUT-OFF
14	1	60011-4	SWITCH ASSY: BLOWER PROOF	56	1	181197	C-MORE CONTROL BOX
	1	60011-3	SWITCH ASSY: BLOWER PROOF, INN 1359 ONLY	57 ①	1	63147	HARNESS, GAS TRAIN MAIN WIRING (FM & DBB)
15	1	61002-5	BLOCKED INLET SWITCH -8.0" W.C.	58 ①	1	124024	HARNESS, DBB GAS TRAIN
BURNER				OTHER PARTS			
16 ⑦	1	24335-1	LOW NOx BURNER ASSY KIT				
17	1	44086	LOW NOX BURNER MTG PLATE	59	5	59133	LATCH, COMPRESSION
ENCLOSURE - BASE ELECTRICAL PANEL				60		32142-1	BAFFLE ASSY HT EXCHANGER
18	1	37094	FRONT PANEL ASSY - EYELET	61	1	74018	INN 600 LOGO
	1	37098	PANEL: TOP		1	74019	INN 800 LOGO
19	1	37097	PANEL, LEFT REAR		1	74020	INN 1060 LOGO
20	1	37097	PANEL, LEFT REAR		1	740201	INN 1350 LOGO
21	1	37081	COVER: PIPE 1"		63	1	49209
22	1	37101	REAR PANEL: UPPER RIGHT	64	1	33132	GAS TRAIN LOWER BRACKET
23	1	37102	ACCESS PANEL: RIGHT REAR	65	1	33133	PIPE SUPPORT BRACKET
24	1	37104	RIGHT SIDE ZERO CLEARANCE PANEL	66	2	55064	U-BOLT 1" PIPE 5/16-18 THD
25	1	37103	LOWER PANEL: RIGHT REAR	67	1	33114	GAS TRAIN LOWER BRACKET
26	1	37096	FRONT DOOR ASSY	68	1	33115	UPPER GAS TRAIN BRACKET
27	1	37099	PANEL, SIDE	69	27	52031	STUD 5/8-11 X 3/4" ZINC PLATED
28	1	37063	PANEL: REAR	70	64	56061	NUT: HEX 5/8-11 [PLATED]
29	1	30081	PANEL: BASE COVER	71	24	53037	WASHER: 5/8 FLAT TYPE A NARROW
30	1	34061	BASE FORMED 26 X 40	72	2	52029	STUD 5/8-11 X 4-1/2" PLATED
31	1	39144	LOWER HEAD RING ASSY				

AERCO International, Inc. Blauvelt, NY 10913	Innovation Parts List 29184-TAB rev G, 29293 rev D	05/15/2014 Page 1 of 4
---	---	-------------------------------

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX F – PARTS LIST DRAWINGS

Innovation 600/800/1060/1350 Parts List – Continued

Item	Qty	Part Number	Description
73	3	52030	STUD: 5/8/-11 UNC X 7 3/4" LONG [PLATED]
74	1	59039	6" WORM-DRIVE HOSE CLAMP
75	1	39125	ADAPTER: AIR INLET 6" PVC
76	1	62005	CORD GRIP
78 ❶	1	61034	AC CURRENT TRANSDUCER
80	1	90083-2.00	NIPPLE S/S: 1/8 NPT X 2 LG
81	1	93410	COUPLING: 1/8 NPT 304 SST 150PSI
82	1	93357	PLUG: 1/8 NPT HEX PIPE 304 STAINLESS
83	1	80088	EXHAUST MANIFOLD SEAL
PARTS FOR MODELS EQUIPED WITH ACTUATOR/SEQUENCING VALVE			
98	1	93100	UNION: 2" NPT 304 STAINLESS
99	1	90046-3	NIPPLE: 2" NPT 304 SS
100	1	92093	VALVE: 2" DOMESTIC WATER MTRZD SEQ BALL


NOTES:

❶	Not shown in drawings below		
❷	For pictorial purposes only. See below for full gas train full diagrams and part lists.		
❸	See drawing PL-A-164 below for exploded diagram and full part list.		
❹	24311-3	A/F VALVE FRU KIT	
	1	81057	GASKET: BLOWER
	1	88003	O-RING #2-339
	1	24220-3	A/F VALVE ASSY
❺	58039	BLOWER FRU KIT	
	1	24111	BLOWER: AMETEK 8.9"
	1	81064	GASKET: BLOWER
	1	81057	GASKET: BLOWER
❻	69126	LWCO/CAPACITOR ASSEMBLY KIT	
	1	122843	LOW WATER CUT-OFF
	1	63070	47 MCF CAPACITOR ASSY
	1	122690	NUT, ACORN NYLON #8-32
❼	24335-1	LOW NOx BURNER ASSY REPLACEMENT KIT	
	1	46023	BURNER HEAD ASSEMBLY
	1	GP-18899	BURNER FLANGE GASKET
	1	124749	FIBER FRAX GASKET
❽	24336-TAB	PLATED HEAT EXCHANGER KIT	



AERCO International, Inc. Blauvelt, NY 10913	Innovation Parts List	05/15/2014
	29184-TAB rev G, 29293 rev D	Page 2 of 4

Innovation Water Heaters Installation, Operation & Maintenance Manual


APPENDIX F – PARTS LIST DRAWINGS

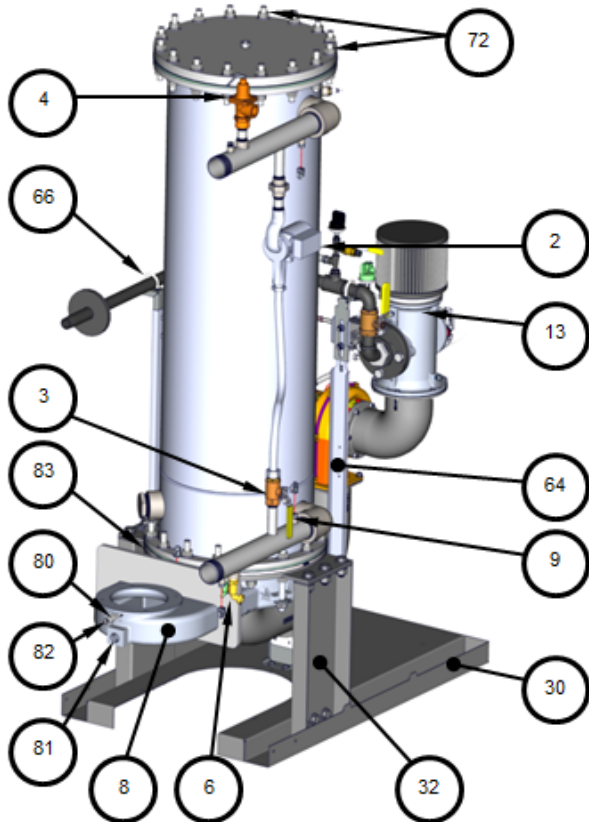


INN 600/800/1060 PICTURED

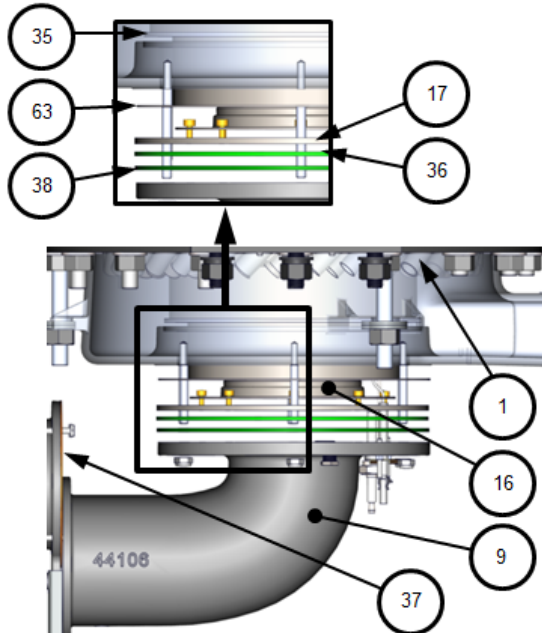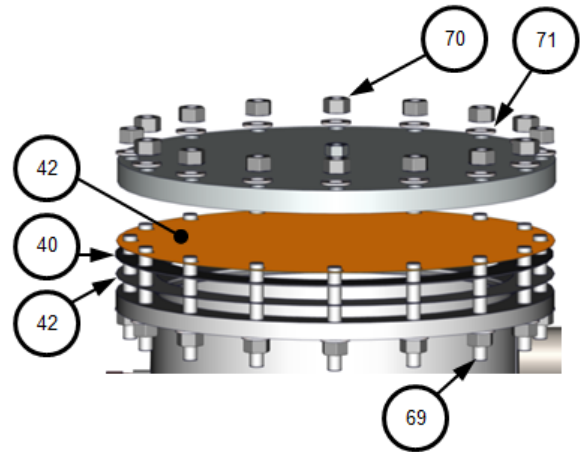

RIGHT-SIDE VIEW – EXPLODED

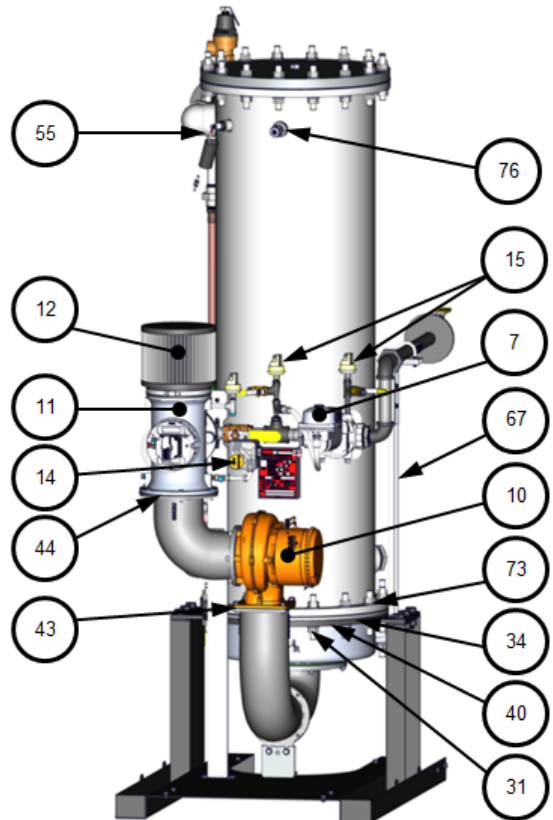


INN 1350 PICTURED

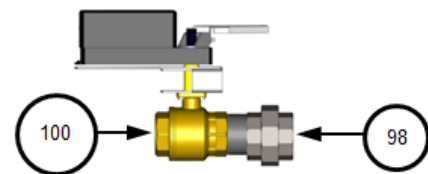


AERCO International, Inc. Blauvelt, NY 10913	Innovation Parts List	05/15/2014
	29184-TAB rev G, 29293 rev D	Page 3 of 4

Innovation Water Heaters Installation, Operation & Maintenance Manual


APPENDIX F – PARTS LIST DRAWINGS

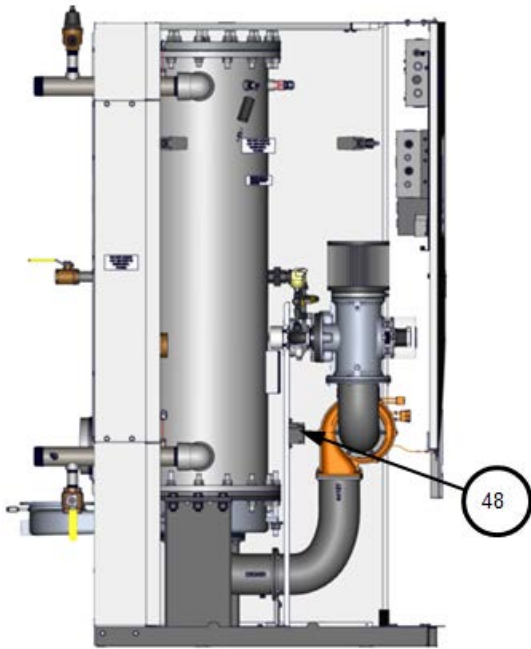


LEFT SIDE VIEW

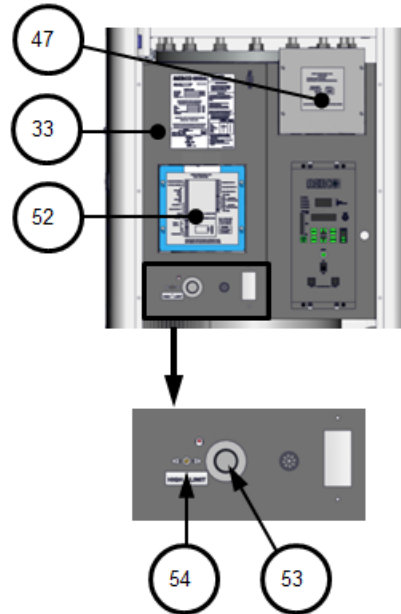

PARTIAL FRONT VIEW

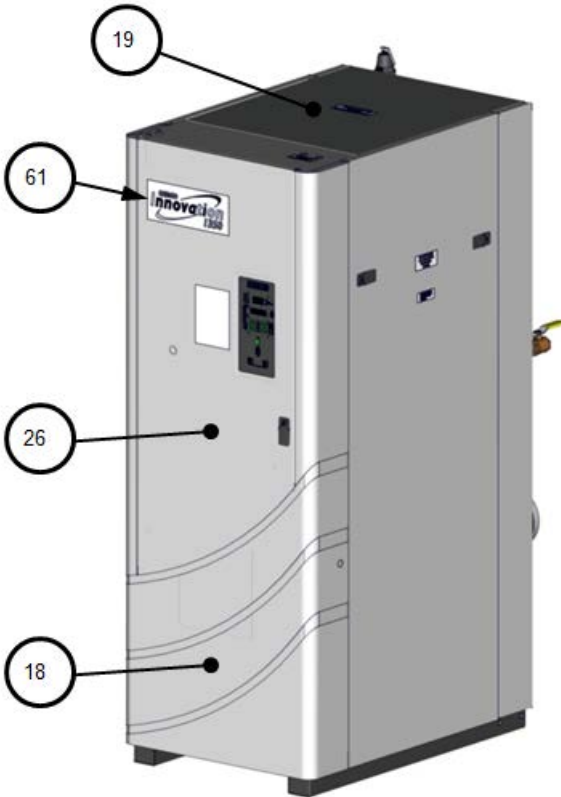

RIGHT-FRONT VIEW

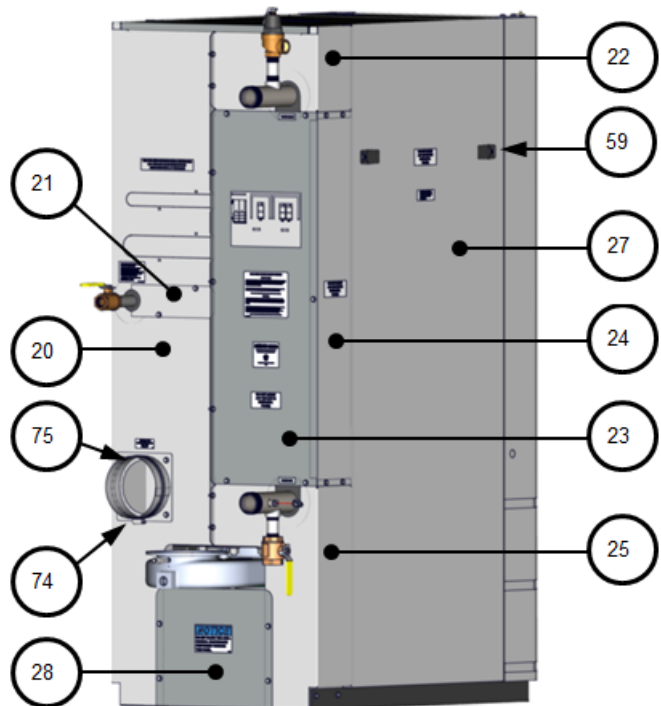

LEFT-REAR VIEW

AERCO International, Inc. Blauvelt, NY 10913	Innovation Parts List	05/15/2014
	29184-TAB rev G, 29293 rev D	Page 4 of 4


Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX F – PARTS LIST DRAWINGS

Innovation 600-800-1060 FM Gas Train

Item	Qty	Part #	Description	Item	Qty	Part #	Description
1	1	92036	VALVE: SSOV 1" NPT	15	1	63147	HARNESS: WIRING: GAS TRAIN
2 ①	1	69005	ACTUATOR: SSOV W/ REGULATOR	16	1	124862	RESISTOR ASSY
3	2	94028-3.00	NIPPLE: 1" NPT TBE X 3.00 LG	17	1	94028-2.50	NIPPLE: 1" NPT TBE X 2.50 LG
4	2	12951-2	BUSHING: CONTROL BOX	18	1	9-222	ELBOW: 90<MOD-DEG>: 1" NPT: M/I
5	1	61002-1	PRESSURE SWITCH: 2.6" W.C. FALL N.O.	19	1	94028-24.00	NIPPLE: 1" NPT TBE X 24" LG
6	2	99014	NIPPLE: HEX 1/4" NPT X 3/8" NPT	20	3	93290	TEE MXFXF BLACK IRON 1/4" NPT
7	2	123536	BUSHING: REDUCING 1/4" X 1/8" NPT	21	2	92077	1/4" NPT MXF BRASS BALL VALVE (OPEN)
8	1	61002-4	HIGH GAS PRESSURE SWITCH 4.0" W.C.	22	2	9-22	PIPE PLUG: 1/4" NPT: STEEL
9	1	123542	FLANGE 2" 125# 2"NPT	23	1	93315	TEE RDCG 1" x 1/2" x 1" M.I.
10	1	93035	ELBOW: STREET 1/4" NPT	24	1	9-43	BUSHING: REDUCING 1/2 X 1/4 NPT
11	1	92006-5	VALVE: BALL 1" NPT	25	1	123771	UNION: MA x FEM 1" NPT: 150# M.I.
12	1	8-31	BUSHING: REDUCING 1" X 2"	26	1	97005-5	TUBE: FLEXIBLE GAS 18"
13	1	94028-7.00	NIPPLE: 1" NPT TBE X 7.00 LG	27	1	80087-2	INNOVATION ENCLOSURE PIPE SEAL
14	2	93181	ELBOW: STREET 1" NPT				

① 69005 and 124862 are supplied as a kit # 64100

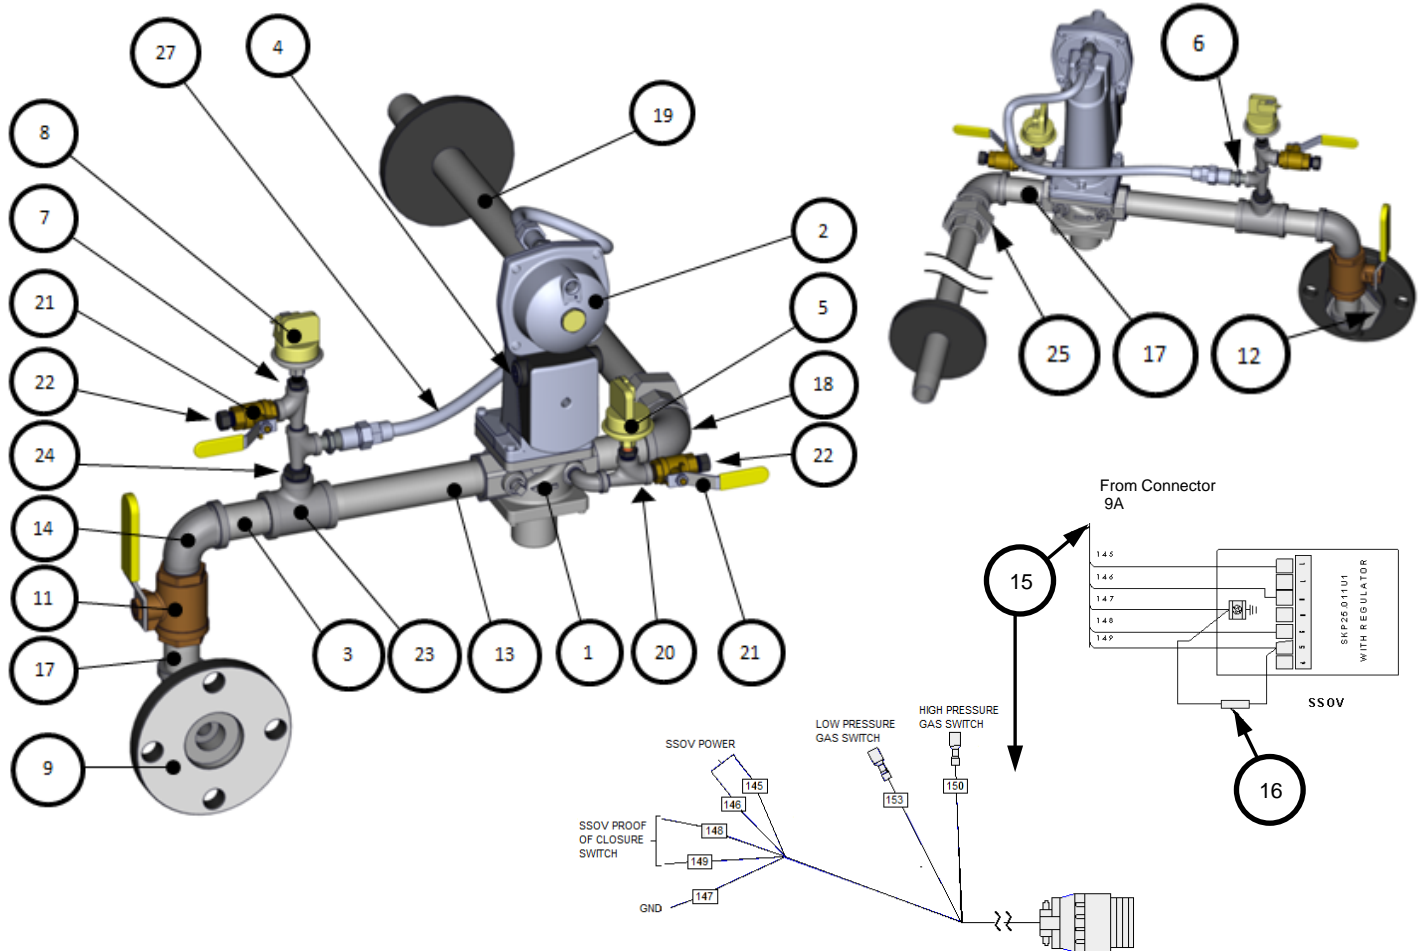

AERCO International, Inc. Blauvelt, NY 10913	Innovation 600-800-1060 FM Gas Train 22122 rev F (AP-A-896)	12/06/2013 Sheet 1 of 1
--	--	--------------------------------


Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX F – PARTS LIST DRAWINGS

Innovation 1350 FM Gas Train

Item	Qty	Part #	Description	Item	Qty	Part #	Description
1	1	123542	FLANGE 2" 125# 2"NPT	16	2	92077	1/4" NPT MXF BRASS BALL VALVE (CLOSED)
2	1	8-31	BUSHING: REDUCING 1" X 2"	17	2	9-22	PIPE PLUG: 1/4" NPT: STEEL
3	2	93181	ELBOW: STREET 1" NPT	18	2	123536	BUSHING: REDUCING 1/4" X 1/8" NPT
4	1	94028-3.00	NIPPLE: 1" NPT TBE X 3.00 LG	19	2	12951-2	BUSHING: CONTROL BOX
5	1	92006-5	VALVE: BALL 1" NPT	20	2	99014	NIPPLE: HEX 1/4" NPT X 3/8" NPT
6	1	94028-2.50	NIPPLE: 1" NPT TBE X 2.50 LG	21	1	63147	HARNESS: WIRING: GAS TRAIN
7	1	93315	TEE RDCG 1" x 1/2" x 1" M.I.	22	1	124862	RESISTOR ASSY
8	1	69005	ACTUATOR: SSOV W/ REGULATOR	23	2	8-22	BUSHING: REDUCING 1 1/2" F NPT X 1" M NPT
9	1	124150	VALVE: SSOV 1-1/2" NPT	24	1	61002-12	HIGH GAS PRESSURE SWITCH 4.7" W.C.
10	1	123771	UNION: MA x FEM 1" NPT: 150# M.I.	25	1	61002-11	LOW GAS PRESSURE SWITCH 3.6" W..C.
11	1	94028-24.00	NIPPLE: 1" NPT TBE X 24" LG	26	1	124088	NIPPLE: 1/4" NPT: C.S. 2 1/2" LONG
12	1	9-222	ELBOW: 90<MOD-DEG>: 1" NPT: M/I	27	1	93405	TEE: 1/4" NPT BLK M.I.
13	1	94028-5.25	NIPPLE: 1" NPT TBE X 5.25 LG	28	1	9-331	NIPPLE: 1" NPT TBE X 1.50 LG
14	1	9-43	BUSHING: REDUCING 1/2 X 1/4 NPT	29	1	80087-2	INNOVATION ENCLOSURE PIPE SEAL
15	2	93290	TEE MXFXF BLACK IRON 1/4" NPT	30	1	97005-2	TUBE: FLEXIBLE GAS 12"

● 69005 and 124862 are supplied as a kit # 64100

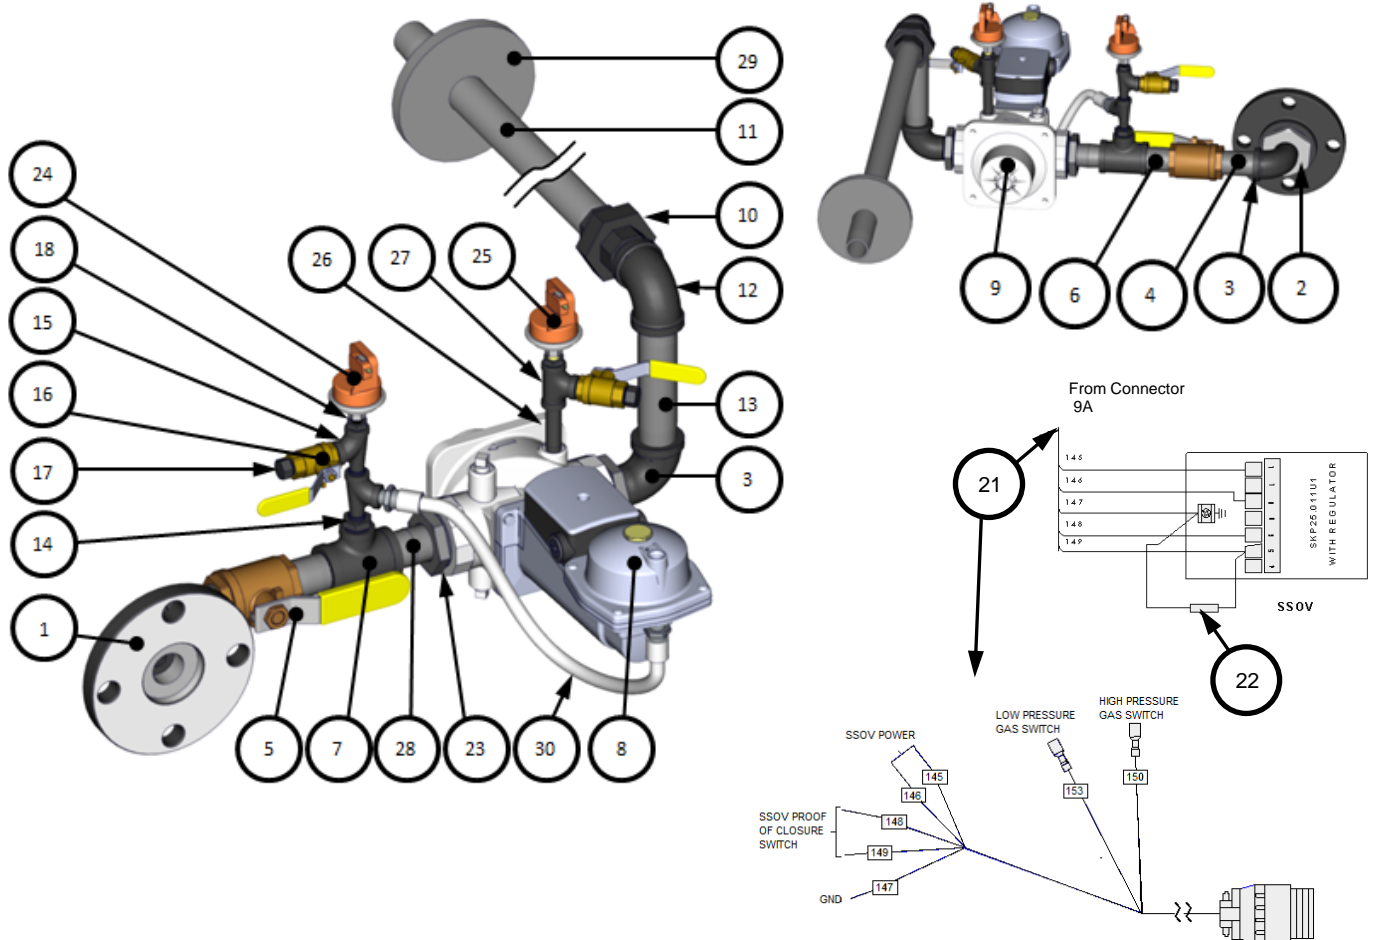

AERCO International, Inc. Blauvelt, NY 10913	Innovation 1350 FM Gas Train	12/06/2013
	22168 rev A (AP-A-905)	Sheet 1 of 1


Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX F – PARTS LIST DRAWINGS

Innovation 600-800-1060 DBB Gas Train

Item	Qty	Part #	Description	Item	Qty	Part #	Description
1	4	12951-2	BUSHING: CONTROL BOX	22	1	69038	ACTUATOR: SSOV W/O P.O.C. SWITCH
2	1	61002-1	PRESSURE SWITCH: 2.6" W.C. FALL N.O.	23	1	123148	BUSHING: 1" NPT X 3/4" NPT
3	2	99014	NIPPLE: HEX 1/4" NPT X 3/8" NPT	24	2	9-469	ELBOW: 90° 3/4" NPT
4	2	123536	BUSHING: REDUCING 1/4" X 1/8" NPT	25	1	94061-8.00	NIPPLE: 3/4" NPT X 8.00 LG
5	1	61002-4	HIGH GAS PRESSURE SWITCH 4.0" W.C.	26	1	122774	VALVE: VENT 3/4" NPT
6	1	123542	FLANGE 2" 125# 2"NPT	27	1	50005	3/4" PIPE SIZE CLAMP
7	1	92006-5	VALVE: BALL 1" NPT	28	1	123774	1" PIPE SIZE CLAMP
8	1	8-31	BUSHING: REDUCING 1" X 2"	29	1	94061-6.50	NIPPLE: 3/4" NPT
9	1	63147	HARNESS: WIRING: GAS TRAIN	30	1	94061-3.00	NIPPLE: 3/4" NPT X 3.00 LG
10	1	124862	RESISTOR ASSY	31	1	94061-19.00	NIPPLE: 3/4" NPT
11	1	94028-24.00	NIPPLE: 1" NPT TBE X 24" LG	32	1	59053	CHANNEL: STRUT
12	3	93290	TEE MXFXF BLACK IRON 1/4" NPT	33	1	124024	HARNESS: WIRING: IRI
13	2	92077	1/4" NPT MXF BRASS BALL VALVE (OPEN)	34	1	9-465	TEE: 1" NPT
14	2	9-22	PIPE PLUG: 1/4" NPT: STEEL	35	1	94028-2.50	NIPPLE: 1" NPT TBE X 2.50 LG
15	2	93181	ELBOW: STREET 1" NPT	36	1	94028-4.50	NIPPLE: 1" NPT TBE X 4.50 LG
16	1	123771	UNION: MA x FEM 1" NPT: 150# M.I.	37	1	93337	BUSHING: REDUCING 1x 1/4
17	1	97005-5	TUBE: FLEXIBLE GAS 18"	38	1	9-331	NIPPLE: 1" NPT TBE X 1.50 LG
18	1	124137	VALVE: SSOV: DOUBLE BODY: 1-1/2" NPT	39	1	80087-1	INNOVATION ENCLOSURE PIPE SEAL
19	2	8-22	BUSHING: REDUCING 1 1/2" F NPT X 1" M NPT	40	1	80087-2	INNOVATION ENCLOSURE PIPE SEAL
20	2	95029	FLANGE: SSOV 1 1/2" NPT	41	1	123533	NIPPLE: CLOSE 1/8"
21 ①	1	69005	ACTUATOR: SSOV W/ REGULATOR	42	1	93445	COUPLING: REDUCING 1/4 x 1/8 NPT: BLK MI


① 124862 and 69005 are supplied as a kit. Order Kit # 64100

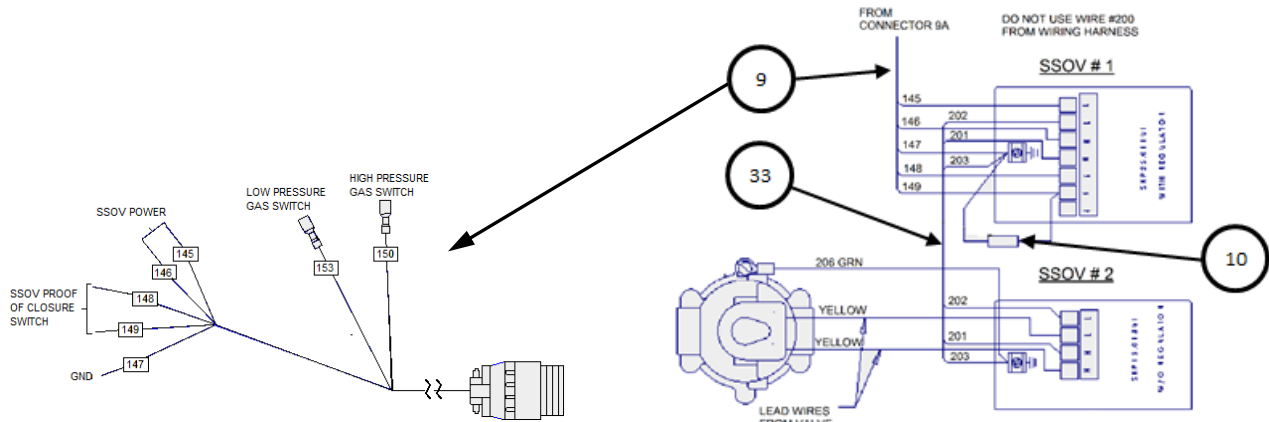

AERCO International, Inc. Blauvelt, NY 10913	Innovation 600-800-1060 DBB Gas Train	12/06/2013
	22122-1 rev G (AP-A-897)	Sheet 1 of 2

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX F – PARTS LIST DRAWINGS

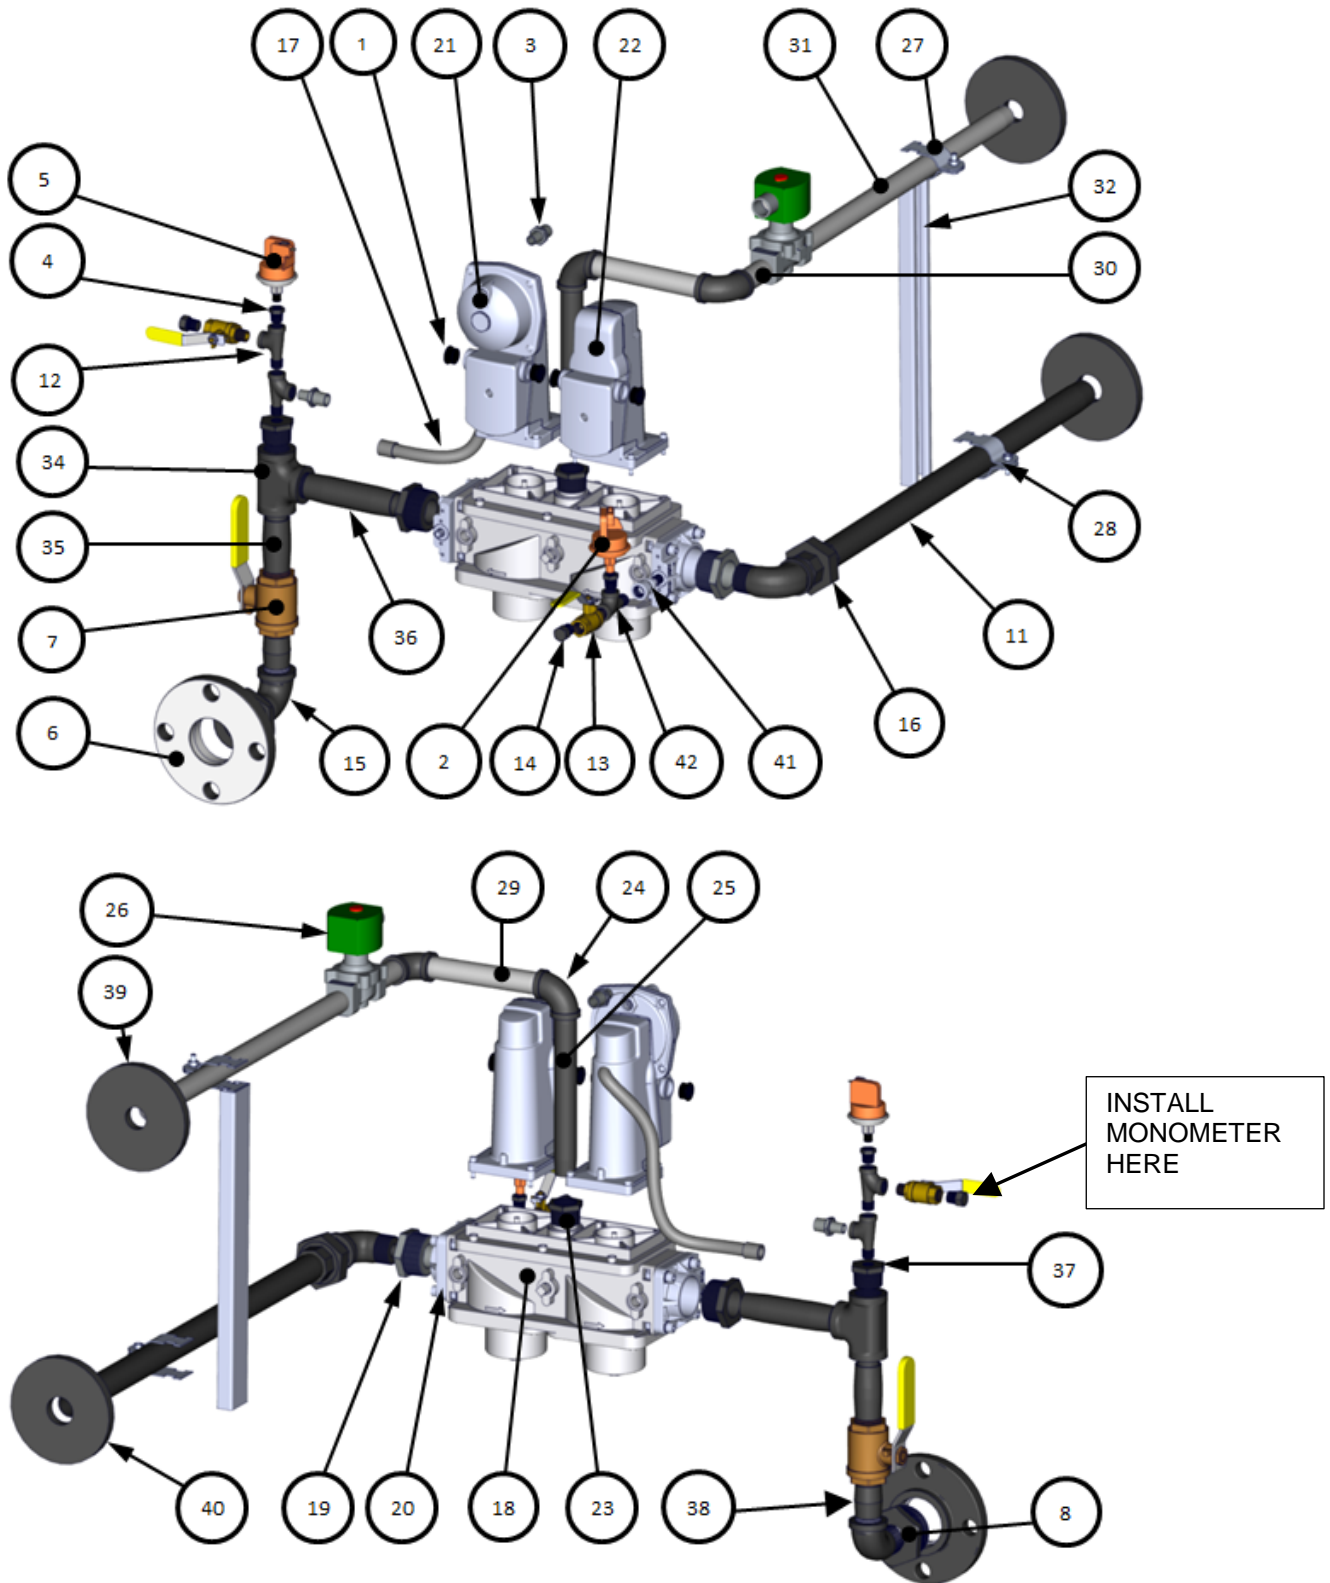


AERCO International, Inc. Blauvelt, NY 10913	Innovation 600-800-1060 DBB Gas Train	12/06/2013
	22122-1 rev G (AP-A-897)	Sheet 2 of 2

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX F – PARTS LIST DRAWINGS

Innovation 600P-800P Gas Train

Item	Qty	Part #	Description	Item	Qty	Part #	Description
1	1	123542	FLANGE 2" 125# 2"NPT	16	1	90096	NIPPLE: 1/4 X 3 1/2 SCH 40 BLACK STEEL
2	1	92103	VALVE: SSOV 1/2" NPT	17	1	90098	NIPPLE 1/2 x 24 SCH 40 BLK STL
3	1	69005	ACTUATOR: SSOV W/ REGULATOR	18	2	90099	NIPPLE 1/2 x 2.00 SCH 40 BLK STL
4	1	93405	TEE: 1/4" NPT BLK M.I.	19	3	90100	NIPPLE 1/2 x 3.00 SCH 40 BLK STL
5	1	93416	BUSHING: HEX REDUCING 2 x 1/2 BLK CAST IRON	20	1	90101	NIPPLE 1/2 x 4.50 SCH 40 BLK STL
6	1	93417	FEM x MA 90° 1/2 [STREET] ELBOW BLK MI	21	1	90102	NIPPLE 1/2 x 6.00 SCH 40 BLK STL
7	2	93418	TEE 1/2" NPT BLACK MI	22	2	92006-3	VALVE: FULL PORT BALL 1/2" NPT BRASS
8	1	93419	ELBOW: 90° FEMALE 1/2" NPT BLACK MI	23	2	92077	1/4" NPT MXF BRASS BALL VALVE (CLOSED)
9	1	93420	UNION 1/2" NPT FEMALE BLACK MI	24	2	12951-2	BUSHING: CONTROL BOX
10	2	93290	TEE MXFXF BLACK IRON 1/4" NPT	25	1	61002-8	LOW GAS PRESSURE SWITCH 4.4" W.C.
11	1	93428	CAP: 1/2" NPT PIPE STEEL	26	1	61002-4	HIGH GAS PRESSURE SWITCH 4.0" W.C.
12	1	123311	BUSHING: REDUCING 1/2" NPT X 1/4" NPT	27	1	124862	RESISTOR ASSY
13	2	123536	BUSHING: REDUCING 1/4" X 1/8" NPT	28	1	63147	HARNESS: WIRING: GAS TRAIN
14	2	9-22	PIPE PLUG: 1/4" NPT: STEEL	29	1	97005-2	TUBE: .38 FLEXIBLE GAS 12" LG
15	2	99014	NIPPLE: HEX 1/4" NPT X 3/8" NPT	30	1	80087-0	INNOVATION ENCLOSURE PIPE SEAL

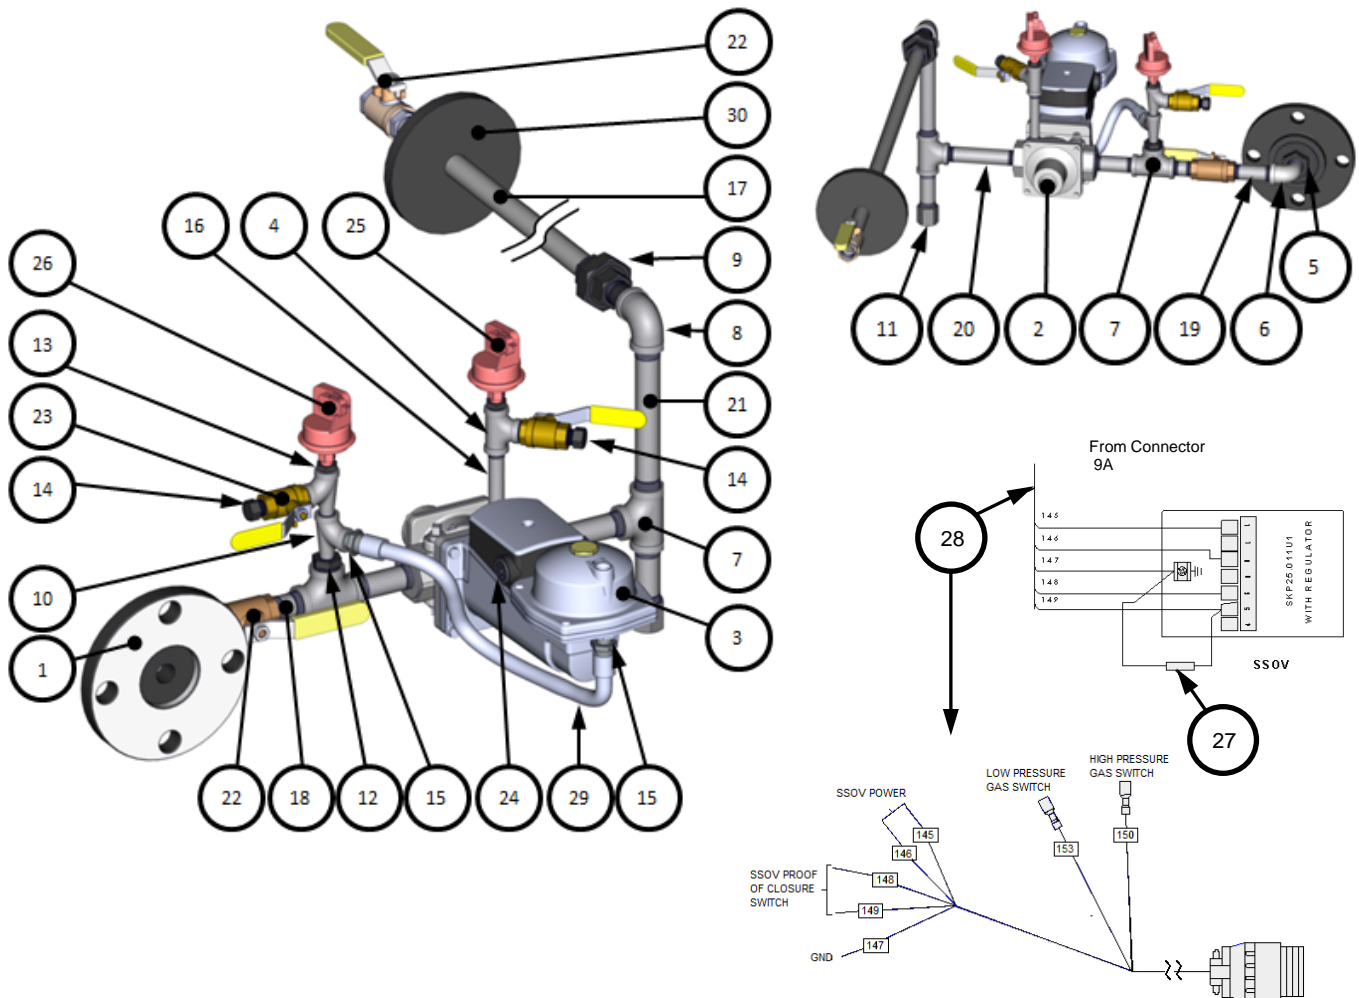


AERCO International, Inc. Blauvelt, NY 10913	Innovation 600P-800P PROPANE Gas Train	12/06/2013
	22179 rev C (AP-A-922)	Sheet 1 of 1

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX F – PARTS LIST DRAWINGS

Innovation 1060P-1350P Gas Train

Item	Qty	Part #	Description	Item	Qty	Part #	Description
1	1	123542	FLANGE 2" 125# 2"NPT	17	1	90096	NIPPLE: 1/4 X 3/4 SCH 40 BLACK STEEL
2	1	93396	BUSHING: HEX REDUCING 2" x 3/4" NPT BLK MI	18	2	99014	NIPPLE: HEX 1/4" NPT X 3/8" NPT
3	1	93397	ELBOW: STREET 3/4" NPT BLK MI	19	1	93429	CAP: 3/4" NPT PIPE BLK STL
4	1	9-467	TEE: 3/4" NPT BLK MI	20	2	9-22	PIPE PLUG: 1/4" NPT: STEEL
5	1	9-469	ELBOW: 90° 3/4" NPT	21	1	92101	VALVE: SSOV 3/4" NPT
6	1	5016	UNION: 3/4" NPT MALE-FEMALE 150#	22	1	69005	ACTUATOR: SSOV W/ REGULATOR
7	1	93398	TEE: INLINE REDUCING 3/4 X 3/4 X 1/2 BLK MI	23	2	92006-4	VALVE: FULL PORT BAL 3/4" NPT
8	2	93290	TEE MXFXF BLACK IRON 1/4" NPT	24	2	92077	1/4" NPT MXF BRASS BALL VALVE (OPEN)
9	1	93405	TEE: 1/4" NPT BLK M.I.	25	2	12951-2	BUSHING: CONTROL BOX
10	1	9-43	BUSHING: REDUCING 1/2 X 1/4 NPT	26	1	63147	HARNESS: WIRING: GAS TRAIN
11	2	123536	BUSHING: REDUCING 1/4" X 1/8" NPT	27	1	124862	RESISTOR ASSY
12	3	94061-3.00	NIPPLE: 3/4" NPT X 3.00 LG	28	1	61002-8	LOW GAS PRESSURE SWITCH 4.4" W.C.
13	1	94061-4.50	NIPPLE: 3/4" NPT X 4.50 LG	29	1	61002-4	HIGH GAS PRESSURE SWITCH 4.0" W.C.
14	1	94061-6.00	NIPPLE: 3/4" NPT B/I X 6.00 LG	30	1	97005-2	TUBE: FLEXIBLE GAS 12"
15	1	94061-24.00	NIPPLE: 3/4" NPT X 24.00 LG	31	1	80087-1	INNOVATION ENCLOSURE PIPE SEAL
16	1	9-397	3/4" NPT SCH. 40 B/I CLOSE NIPPLE				

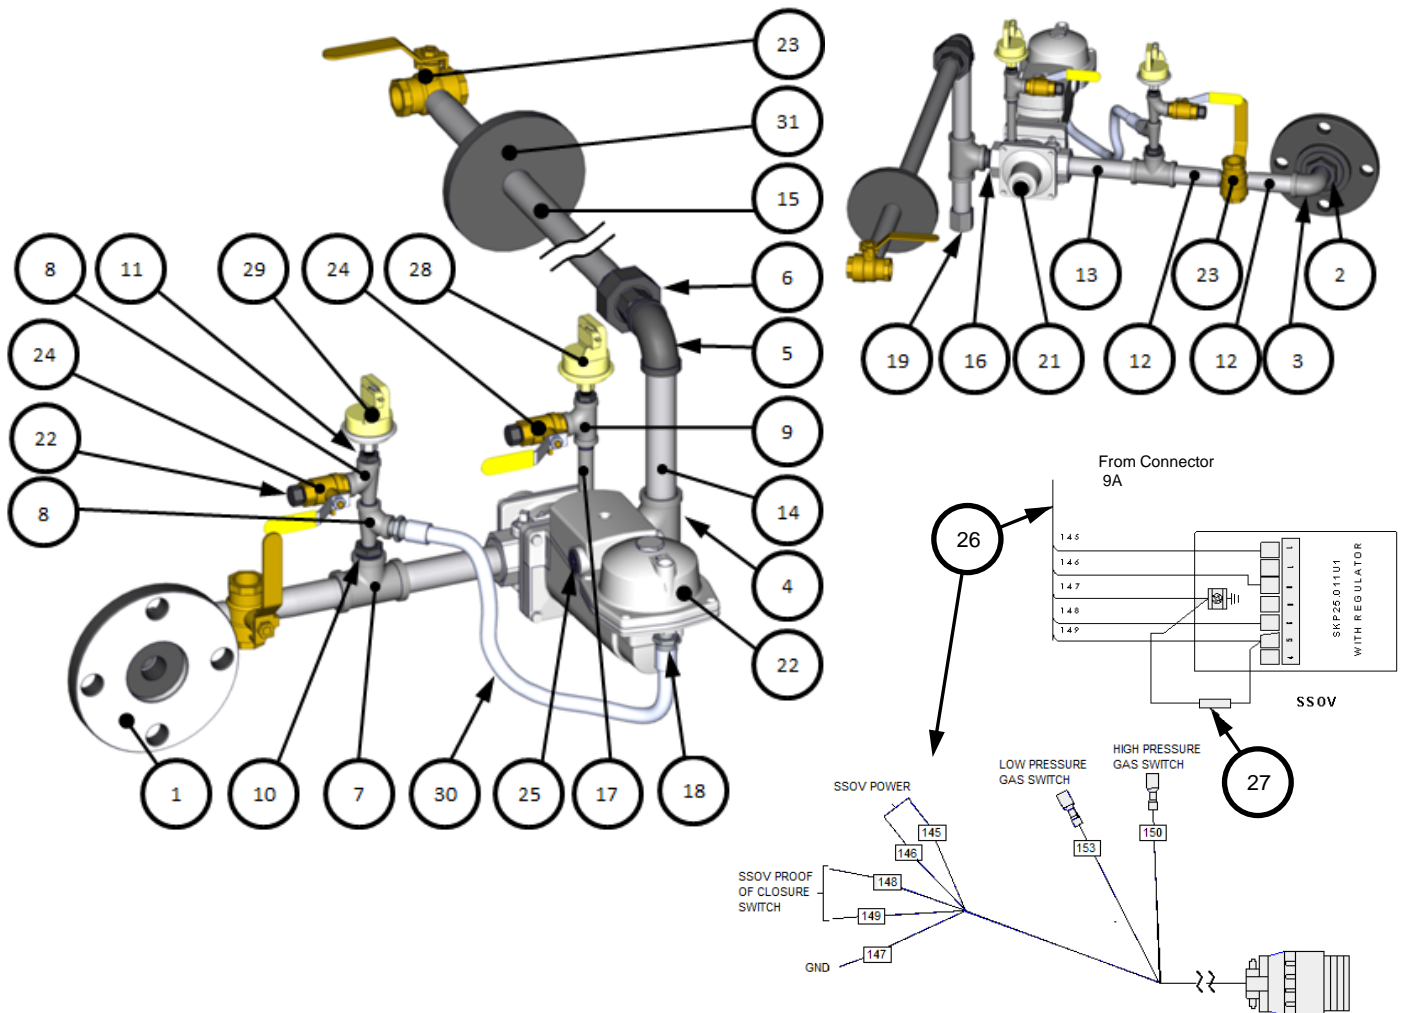

AERCO International, Inc. Blauvelt, NY 10913	Innovation 1060P-1350P PROPANE Gas Train 22180 rev C (AP-A-923)	12/06/2013 Sheet 1 of 1
--	--	--------------------------------


Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX F – PARTS LIST DRAWINGS

Innovation 1350 DBB Gas Train

Item	Qty	Part #	Description	Item	Qty	Part #	Description
1	4	12951-2	BUSHING: CONTROL BOX	22	1	69038	ACTUATOR: SSOV W/O P.O.C. SWITCH
2	1	61002-1	PRESSURE SWITCH: 2.6" W.C. FALL N.O.	23	1	123148	BUSHING: 1" NPT X 3/4" NPT
3	2	99014	NIPPLE: HEX 1/4" NPT X 3/8" NPT	24	2	9-469	ELBOW: 90° 3/4" NPT
4	2	123536	BUSHING: REDUCING 1/4" X 1/8" NPT	25	1	94061-8.00	NIPPLE: 3/4" NPT X 8.00 LG
5	1	61002-4	HIGH GAS PRESSURE SWITCH 4.0" W.C.	26	1	122774	VALVE: VENT 3/4" NPT
6	1	123542	FLANGE 2" 125# 2"NPT	27	1	50005	3/4" PIPE SIZE CLAMP
7	1	92006-5	VALVE: BALL 1" NPT	28	1	123774	1" PIPE SIZE CLAMP
8	1	8-31	BUSHING: REDUCING 1" X 2"	29	1	94061-7.50	NIPPLE: 3/4" NPT
9	1	63147	HARNESS: WIRING: GAS TRAIN	30	1	94061-3.00	NIPPLE: 3/4" NPT X 3.00 LG
10	1	124862	RESISTOR ASSY	31	1	94061-19.00	NIPPLE: 3/4" NPT
11	1	94028-24.00	NIPPLE: 1" NPT TBE X 24" LG	32	1	59053	CHANNEL: STRUT
12	3	93290	TEE MXFXF BLACK IRON 1/4" NPT	33	1	124024	HARNESS: WIRING: IRI
13	2	92077	1/4" NPT MXF BRASS BALL VALVE (OPEN)	34	1	9-465	TEE: 1" NPT
14	2	9-22	PIPE PLUG: 1/4" NPT: STEEL	35	1	94028-2.50	NIPPLE: 1" NPT TBE X 2.50 LG
15	2	93181	ELBOW: STREET 1" NPT	36	1	94028-3.50	NIPPLE: 1" NPT TBE X 3.50 LG
16	1	123771	UNION: MA x FEM 1" NPT: 150# M.I.	37	1	93337	BUSHING: REDUCING 1x 1/4
17	1	97005-5	TUBE, FLEXIBLE GAS - 18"	38	1	9-331	NIPPLE: 1" NPT TBE X 1.50 LG
18	1	124137	VALVE: SSOV: DOUBLE BODY: 1-1/2" NPT	39	1	123533	NIPPLE: CLOSE 1/8"
19	2	8-22	BUSHING: REDUCING 1 1/2" F NPT X 1" M NPT	40	1	93445	COUPLING: REDUCING 1/4 x 1/8 NPT: BLK MI
20	2	95029	FLANGE: SSOV 1 1/2" NPT	41	1	80087-1	INNOVATION ENCLOSURE PIPE SEAL
21	1	69005	ACTUATOR: SSOV W/ REGULATOR	42	1	80087-2	INNOVATION ENCLOSURE PIPE SEAL



6923005 and 124862 are supplied as a kit # 64100

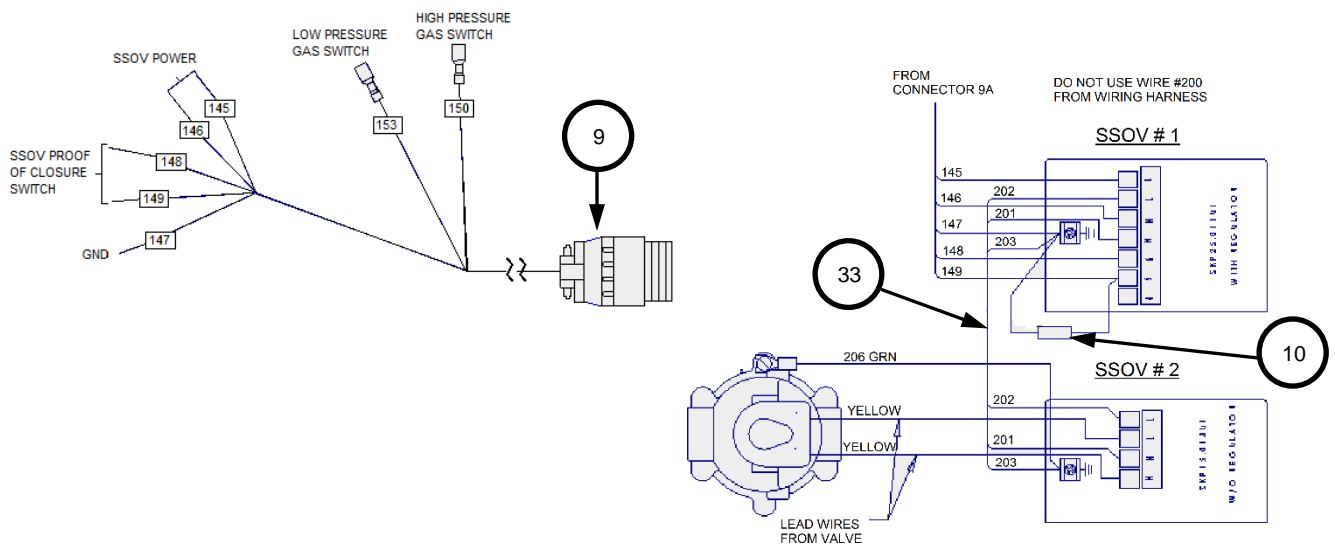

AERCO International, Inc. Blauvelt, NY 10913	Innovation 1350 DBB Gas Train	12/06/2013
	22168-1 rev B (AP-A-906)	Sheet 1 of 2

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX F – PARTS LIST DRAWINGS

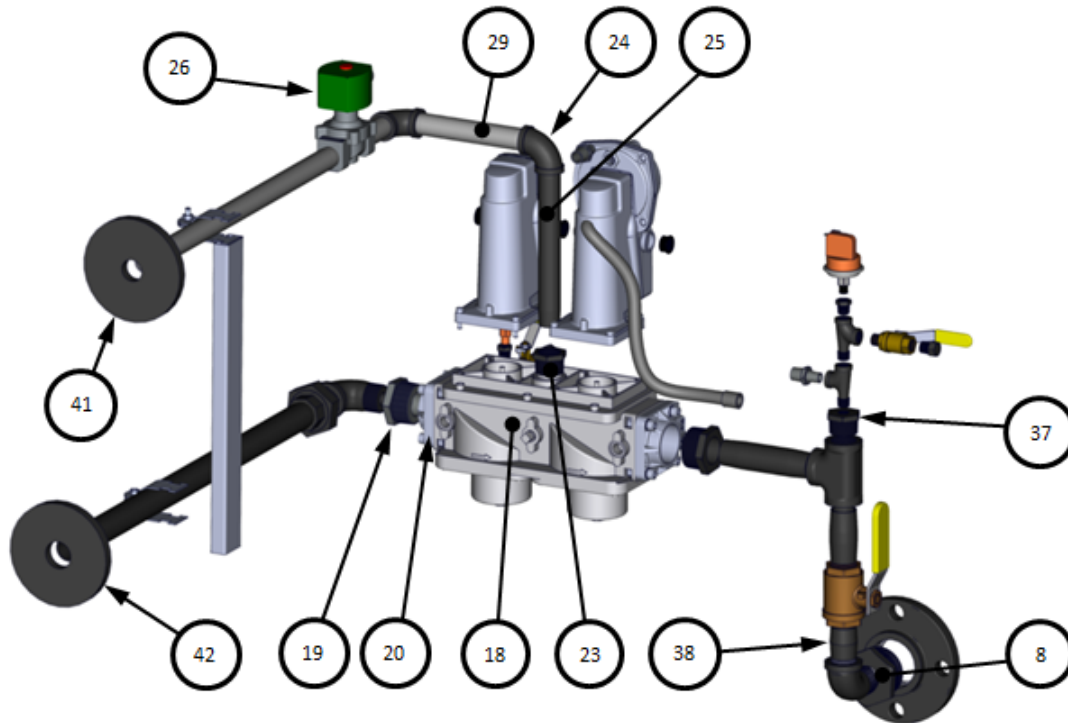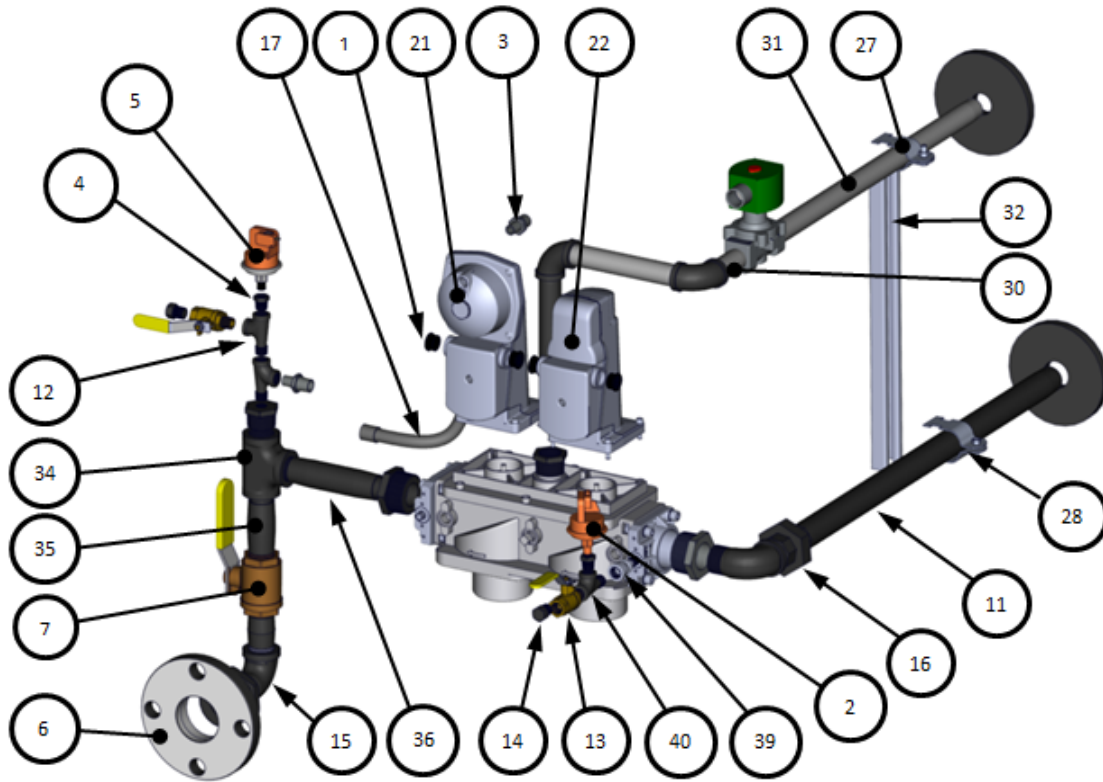

AERCO International, Inc. Blauvelt, NY 10913	Innovation 1350 DBB Gas Train	12/06/2013
	22168-1 rev B (AP-A-906)	Sheet 2 of 2

Innovation Water Heaters Installation, Operation & Maintenance Manual


APPENDIX F – PARTS LIST DRAWINGS

Innovation Air Fuel Delivery System

Item	Qty	Part #	Description	Item	Qty	Part #	Description
1	1	44107	BLOWER SIDE INTAKE MANIFOLD	11	2	123765	NIPPLE: 1/8 NPT X 2.00
2	1	44108	BLOWER-A/F VALVE ADAPTER	12	2	123535	TEE: 1/8" NPT
3 ①	1	81064	GASKET: BLOWER	13	3	123534	PLUG: HEX 1/8 NPT
4 ①	1	24111	BLOWER: AMETEK 8.9"	14	1	61002-5	BLOCKED INLET SWITCH -8.0" W.C.
5	1	88004	O-RING #2-244 BUNA-N	15	1	60011-4	SWITCH ASSY: BLOWER PROOF
6	4	54028	SCREW: HEX HD SERRATED 5/16-18	16	1	59138	FILTER: AIR 6"
7	6	55071	SCREW: SOC HD M8 x 1.25 x 30mm LG.	17	1	61024	AIR INLET TEMPERATURE SENSOR
8 ① ②	1	81057	GASKET: BLOWER	18	1	93367	SNUBBER: FAN PROVING SWITCH
9 ②	1	24220-3	A/F VALVE ASSY	19	1	124979	1/8" C.S. STREET ELBOW
10	6	122371	1/4-20 X 1" LG HEX HD. MACHINE SCREW				

① 81064, 24111 & 81057 are supplied as a kit: # 58039

② 81057, 24220-3 & 88003 'O'-Ring #2-339 (not shown) are supplied as a kit: #24311-3

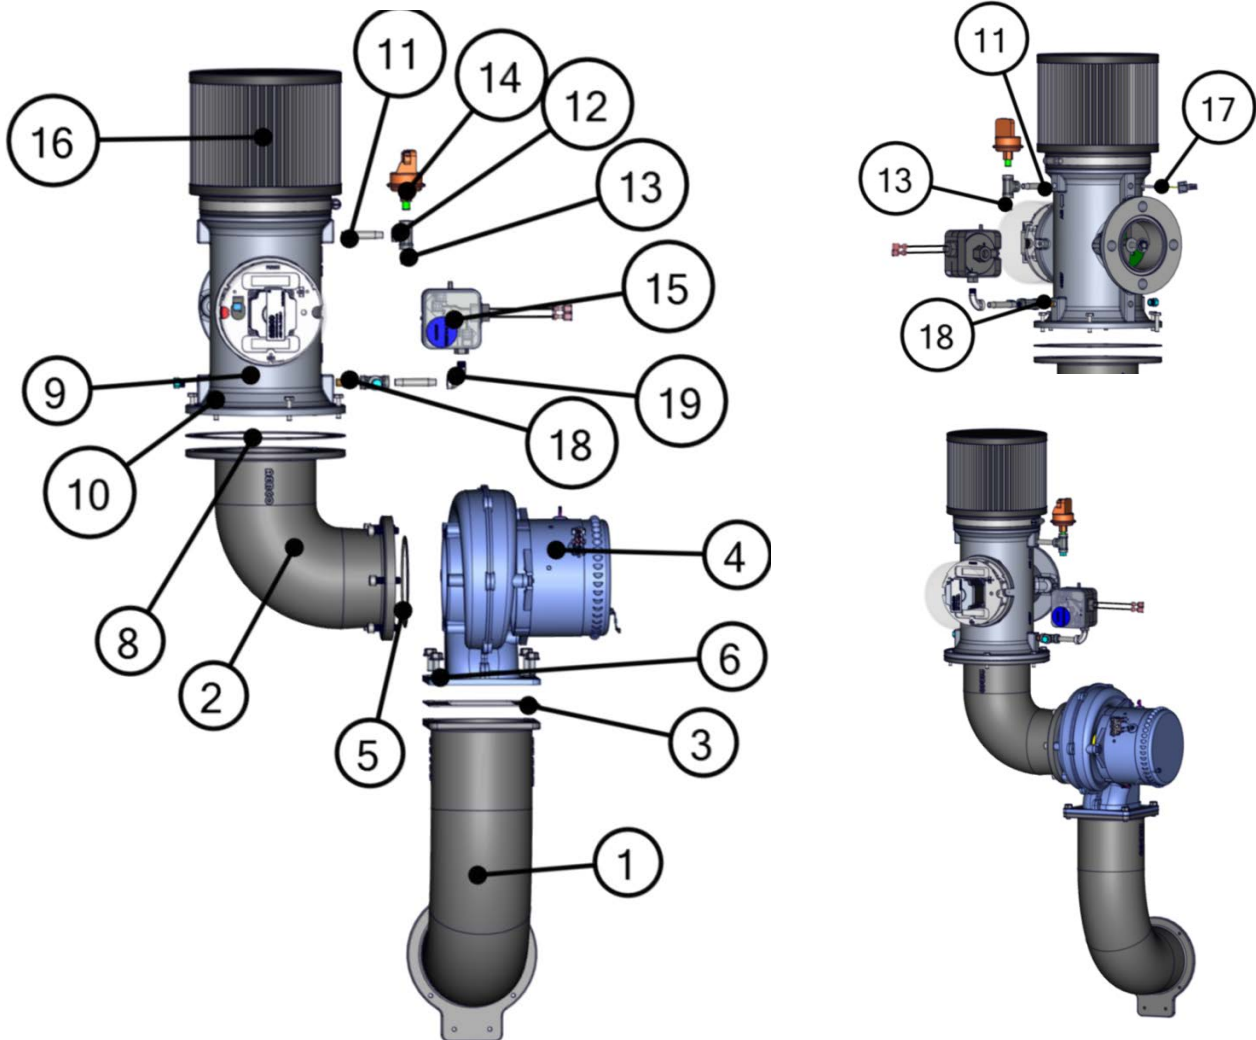

AERCO International, Inc. Blauvelt, NY 10913	Innovation 600/800/1060 Air Fuel Delivery System	11/14/2013
	24295 rev K (PL-A-164)	Sheet 1 of 1

Innovation Water Heaters Installation, Operation & Maintenance Manual


APPENDIX F – PARTS LIST DRAWINGS

Innovation Air Fuel Delivery System

Item	Qty	Part #	Description	Item	Qty	Part #	Description
1	1	44107	BLOWER SIDE INTAKE MANIFOLD	11	1	59138	FILTER: AIR 6"
2 ①	1	81064	GASKET: BLOWER	12	1	61024	AIR INLET TEMPERATURE SENSOR
3 ①	1	24111	BLOWER: AMETEK 8.9"	13	2	123765	NIPPLE: 1/8 NPT X 2.00
4	4	54028	SCREW: HEX HD SERRATED 5/16-18	14	2	123535	TEE: 1/8" NPT
5	1	88004	O-RING #2-244 BUNA-N	15	1	93367	SNUBBER: FAN PROVING SWITCH
6	1	44108	BLOWER-A/F VALVE ADAPTER	16	1	60011-3	SWITCH ASSY: BLOWER PROOF
7	6	55071	SCREW: SOC HD M8 x 1.25 x 30mm LG.	17	3	123534	PLUG: HEX 1/8 NPT
8 ① ②	1	81057	GASKET: BLOWER	18	1	61002-5	BLOCKED INLET SWITCH -8.0" W.C.
9 ②	1	24220-4	A/F VALVE ASSY	19	1	124979	1/8" C.S. STREET ELBOW
10	6	122371	1/4-20 X 1" LG HEX HD. MACHINE SCREW				

① 81064, 24111 and 81057 are supplied as a kit: # 58039

② 81057, 24220-4 & 88003 'O'-Ring #2-339 (not shown) are supplied as a kit: # 24311-4

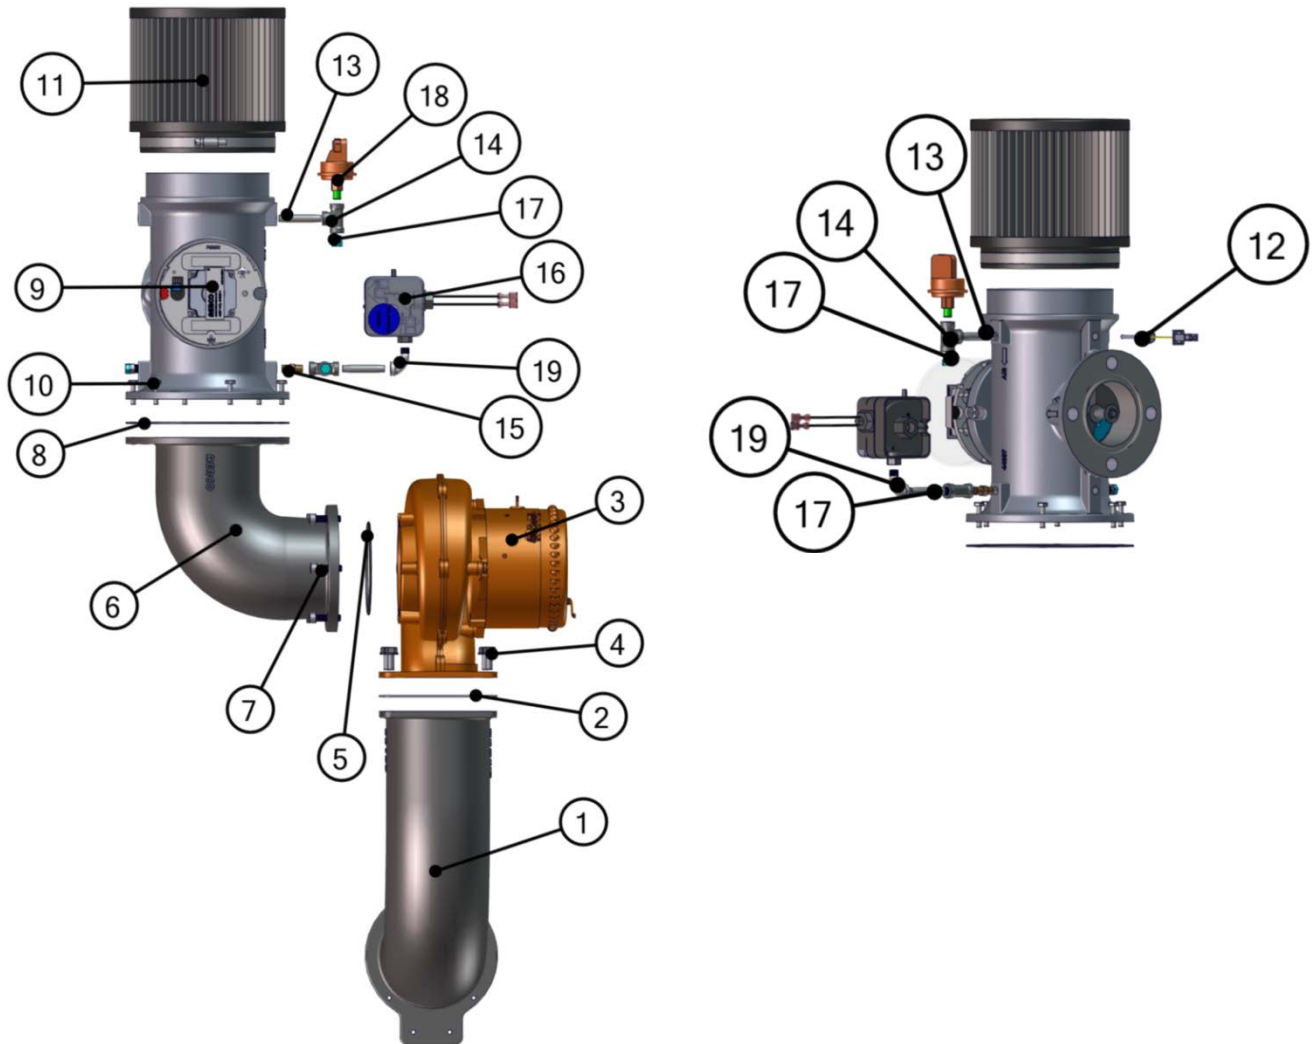

AERCO International, Inc. Blauvelt, NY 10913	Innovation 1350 Air Fuel Delivery System 24346 rev F (PL-A-174)	11/13/2013 Sheet 1 of 1
--	--	--------------------------------

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX F – PARTS LIST DRAWINGS




Innovation Intake Manifold

Item	Qty	Part #	Description	Item	Qty	Part #	Description
1	1	44106	INTAKE MANIFOLD	9 ⑤	1	124749	FIBER FRAX GASKET
2	1	59104	OBSERVATION PORT	10 ②	4	53033	WASHER: CLOCKING
3 ①	1	81150	GASKET: FLAME DETECTOR	11	1	44086	LOW NOX BURNER MTG PLATE
4 ①	1	66018	FLAME DETECTOR	12 ⑤	1	46023	LOW NOX BURNER HEAD ASSEMBLY
5	1	52036	STUD #8-32 x 1½ LG STL/ZINC PLATED	13	8	123948	10-32 x 3/8" LG. SET SCREW
6	1	59206	STANDOFF: FEM THREADED #8-32 x 5/8" x 1/4 HEX	14	1	49209	CONDENSATE SHIELD
7 ②	1	66023	IGNITOR w/HOOKED GROUND ROD	15	1	52037	STUD #10-32 x 1½ LG STL ZINC PLATED
8	2	93358	PLUG: 1/4 NPT HEX HD PIPE 304 STAINLESS	16	1	59207	STANDOFF: FEM THREADED #10-32 x 5/8" LG x 1/4 HEX

① 81150 & 66018 are supplied as a kit: # 24365-2

② 66023 & 53033 are supplied as a kit: #58047

⑤ 124749 & 46023 are supplied as a kit: #24353-1

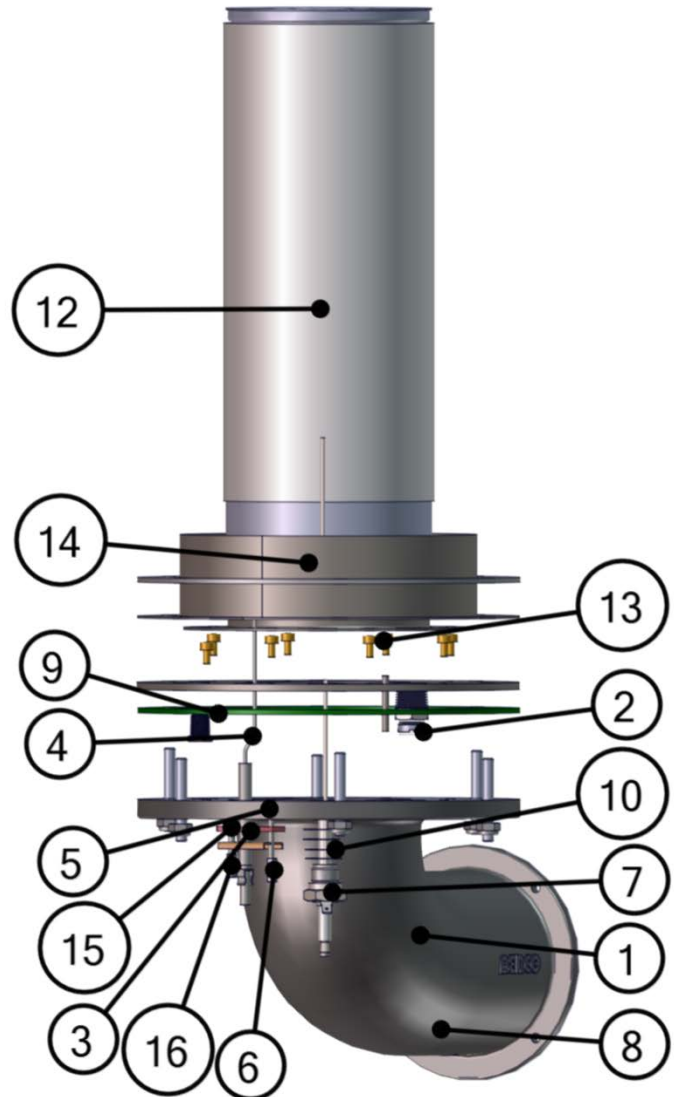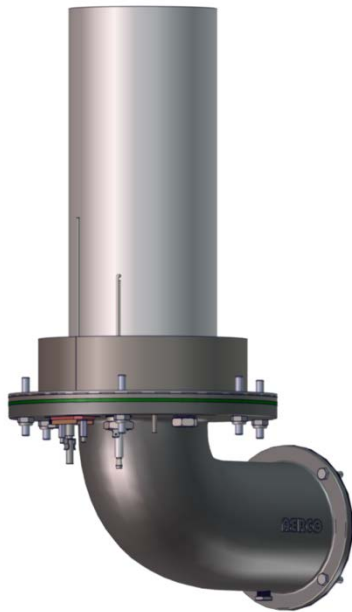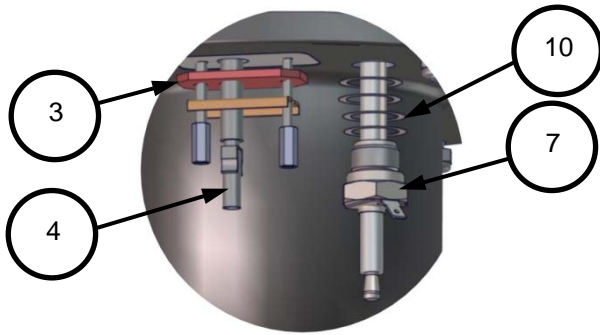


AERCO International, Inc. Blauvelt, NY 10913	Innovation Intake Manifold, Burner & Shield	08/02/2013
	24345 rev B & 24233 rev B (PL-A-175)	Sheet 1 of 1

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX F – PARTS LIST DRAWINGS

(This page left intentionally blank)


APPENDIX G – PIPING DRAWINGS

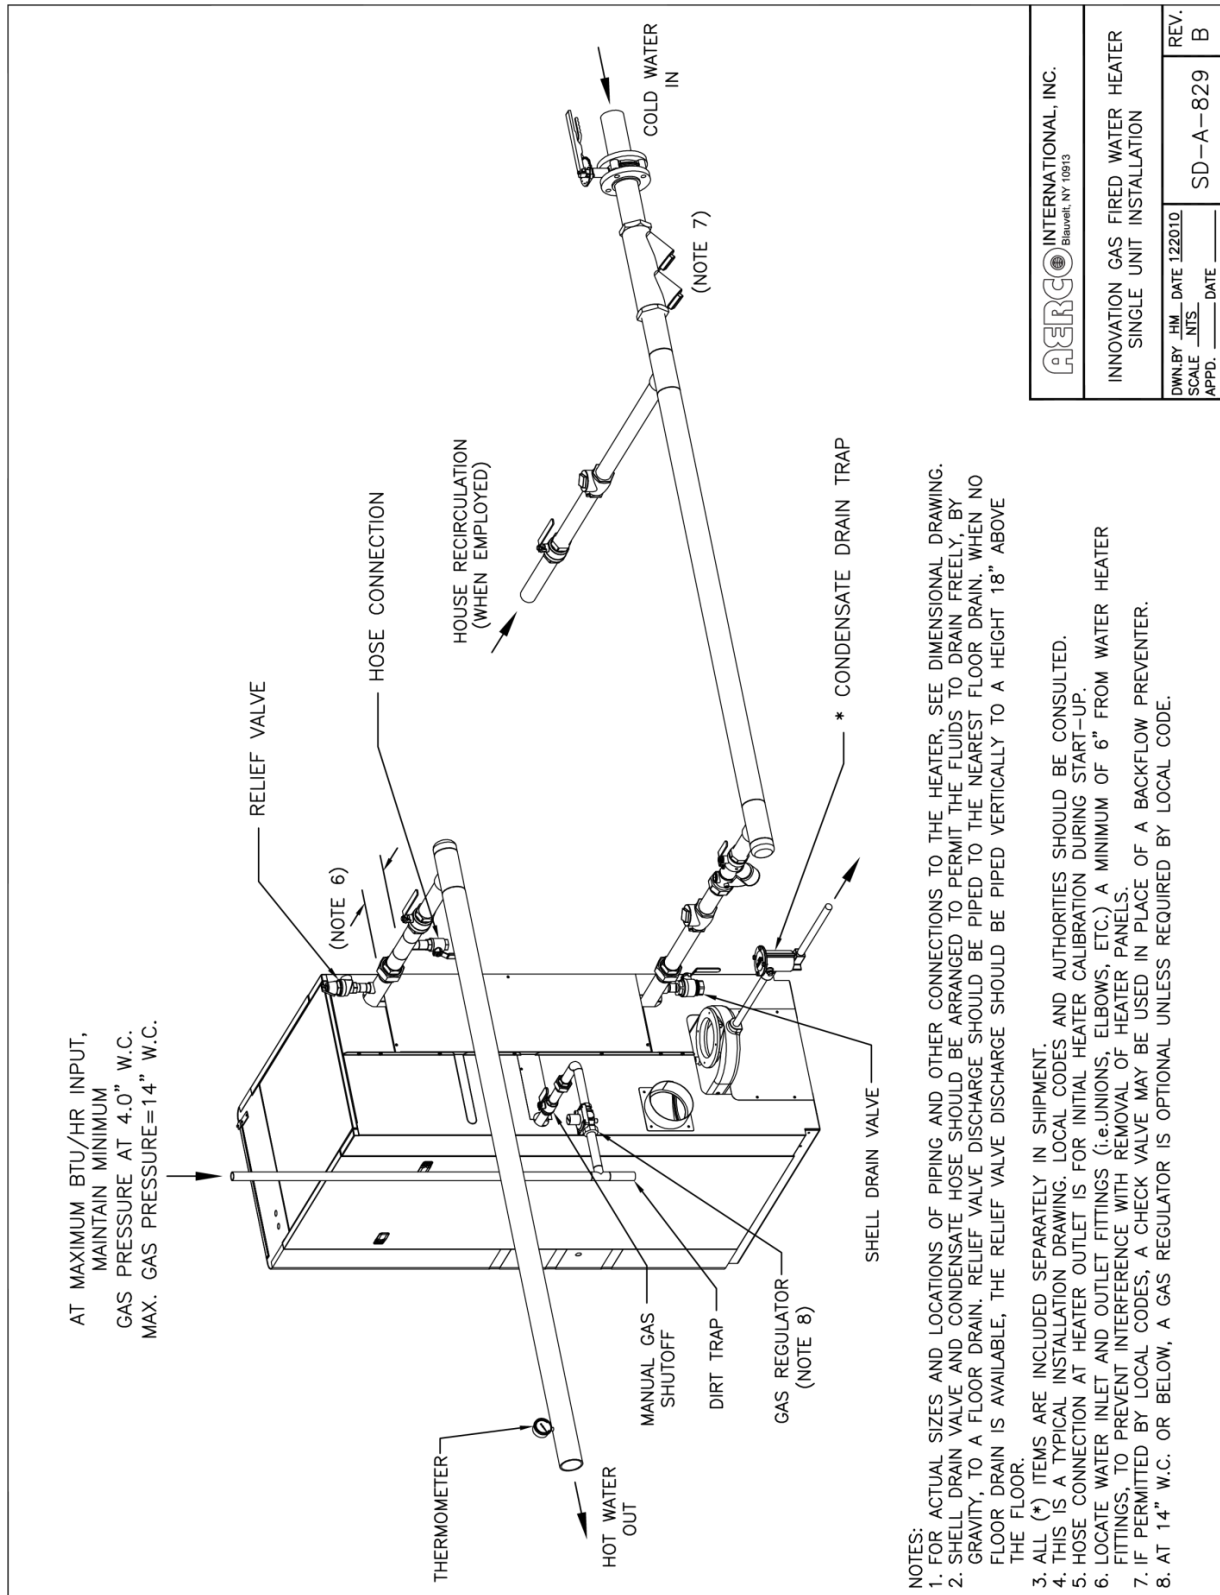

Drawing Number: SD-A-829 rev B

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX G – PIPING DRAWINGS

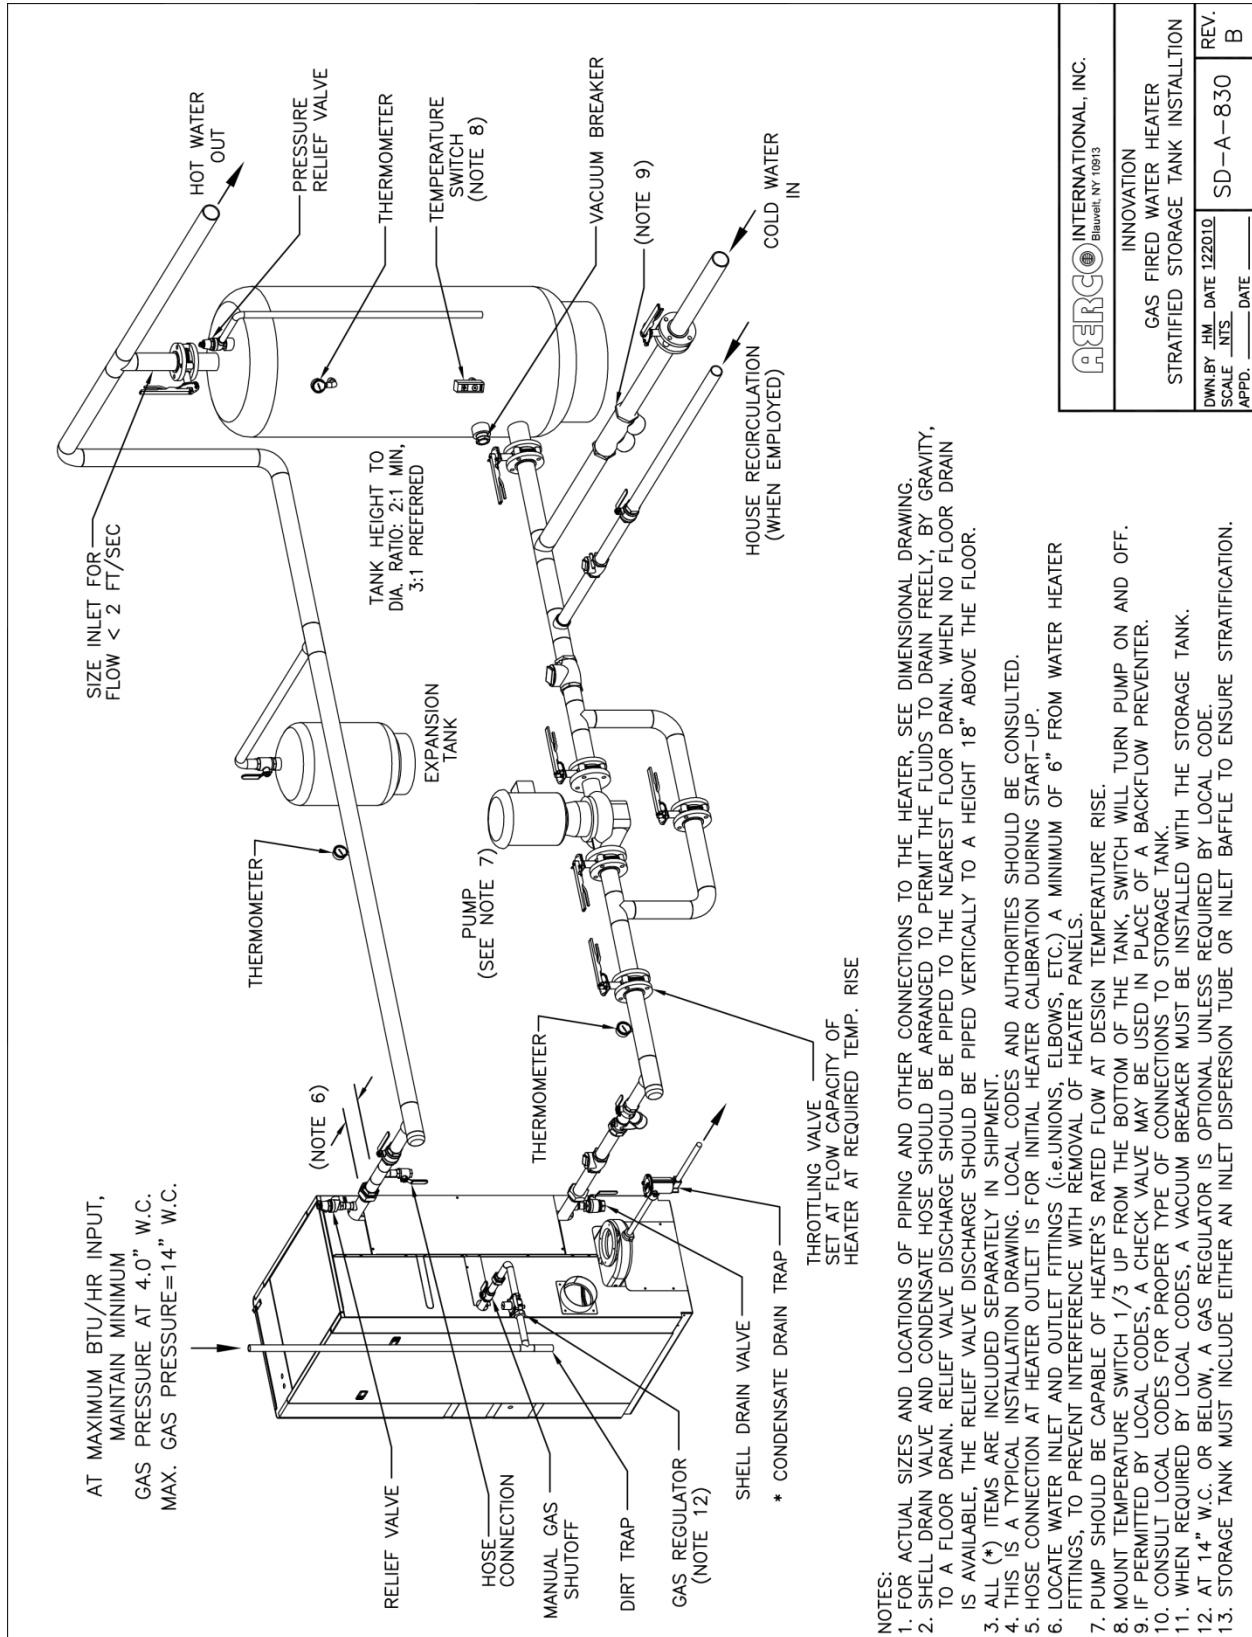


 INNOVATION <small>Blauvelt, NY 10913</small>	
GAS FIRED WATER HEATER STRATIFIED STORAGE TANK INSTALLATION	
DWN. BY: JHM DATE 122010 SCALE: NTS. _____ APPD. _____ DATE _____	SD-A-830 REV. B

Drawing Number: SD-A-830 rev B

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX G – PIPING DRAWINGS

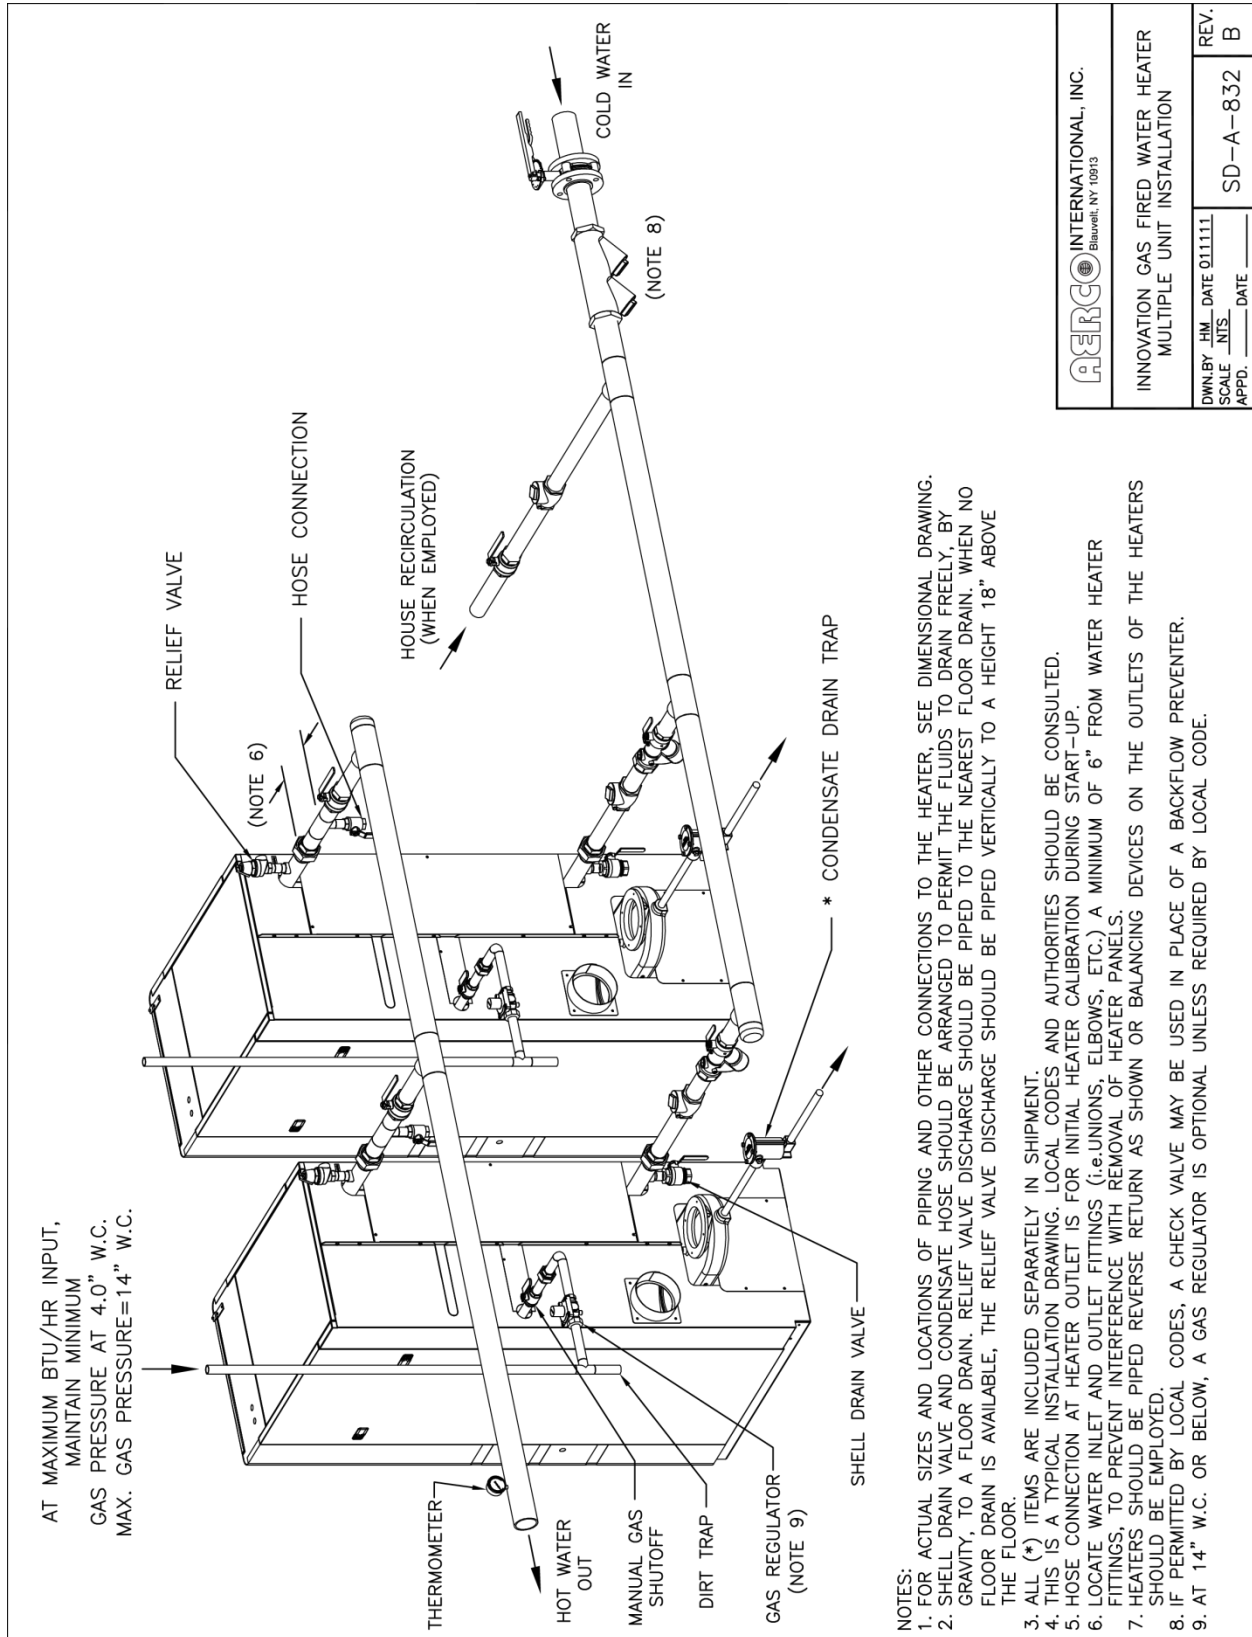

AERCO INTERNATIONAL, INC.
Blauvelt, NY 10913


INNOVATION GAS FIRED WATER HEATER
MULTIPLE UNIT INSTALLATION

DWN BY	HM	DATE	011111
SCALE	NTS	DATE	
APPD.		DATE	
REV.		SD-A-832	B

Drawing Number: SD-A-832 rev B

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX G – PIPING DRAWINGS

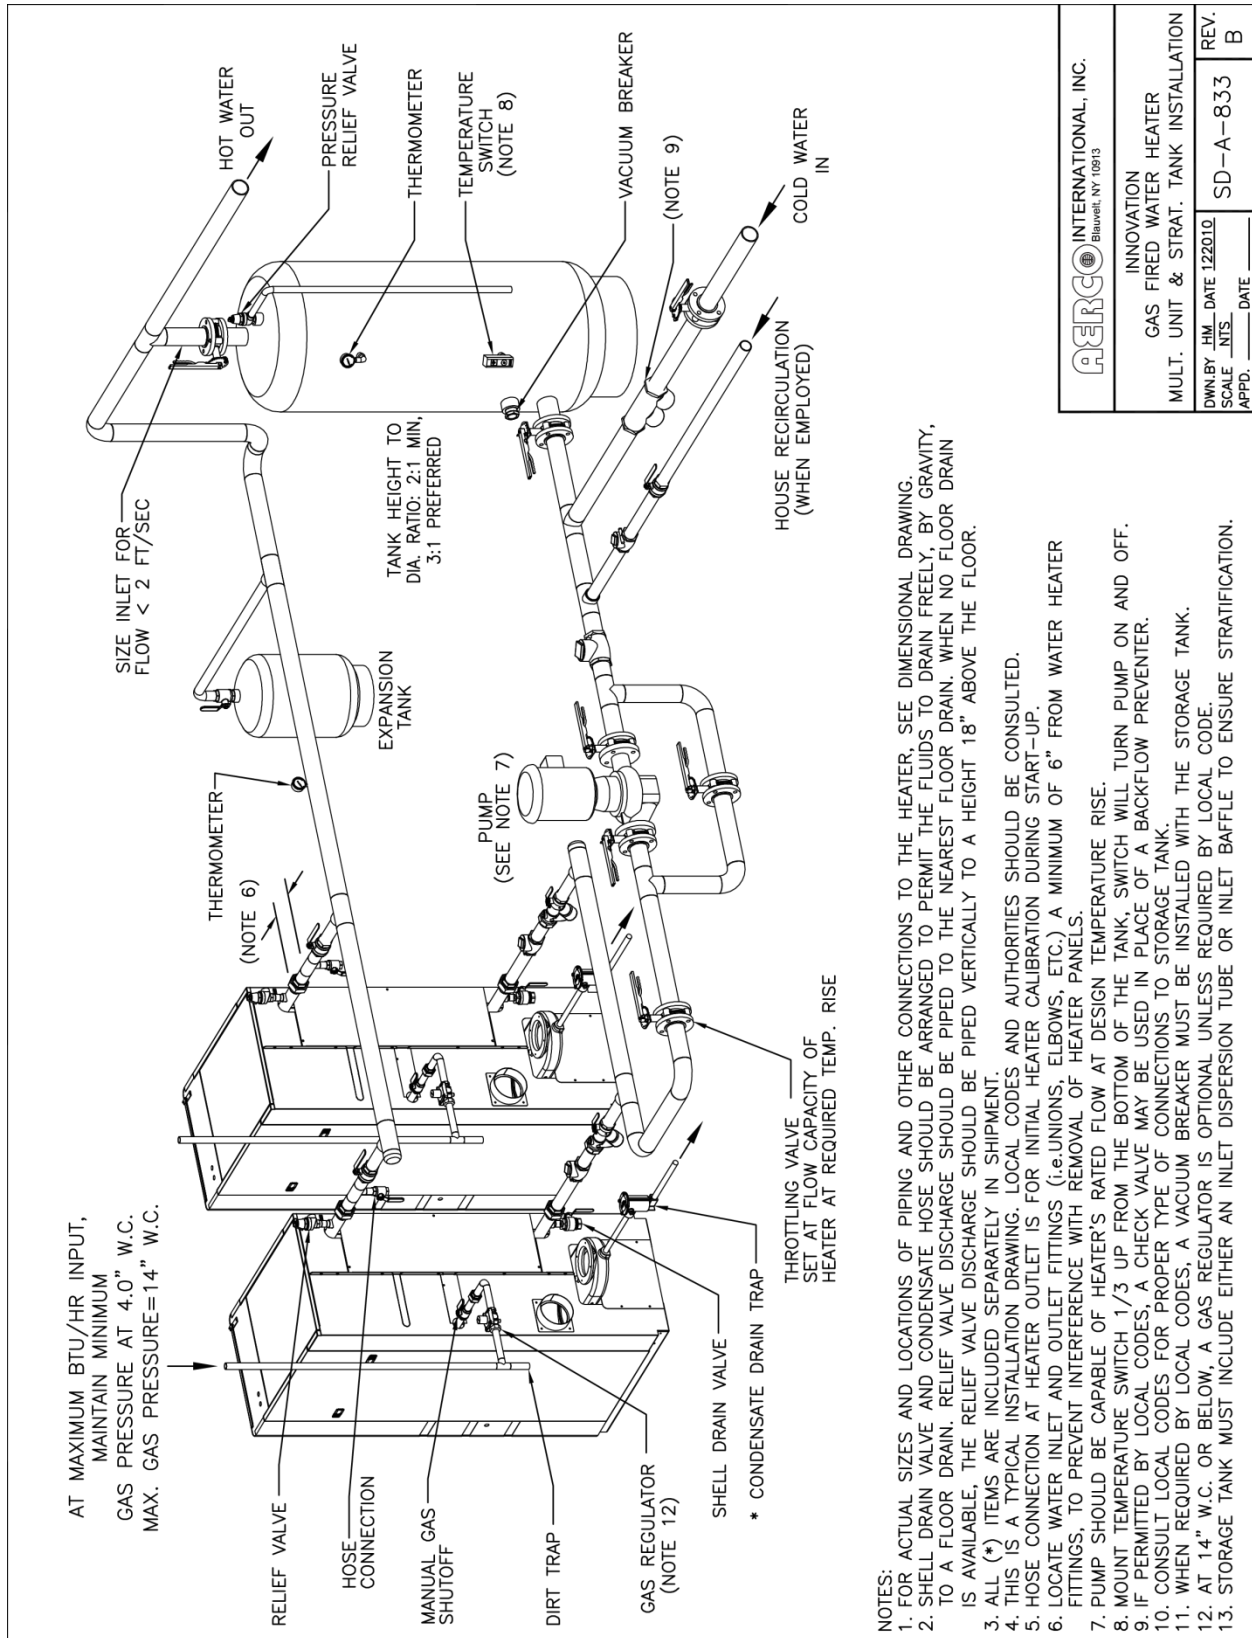


AERCO INTERNATIONAL, INC. <small>Blauvelt, NY 10913</small>	
INNOVATION GAS FIRED WATER HEATER	
MULT. UNIT & STRAT. TANK INSTALLATION	
DWN BY: <u>HM</u>	DATE: <u>122010</u>
SCALE: <u>NIS</u>	DATE: _____
APPD: _____	DATE: _____
SD-A-833	REV. B

- NOTES:
- FOR ACTUAL SIZES AND LOCATIONS OF PIPING AND OTHER CONNECTIONS TO THE HEATER, SEE DIMENSIONAL DRAWING.
 - SHELL DRAIN VALVE AND CONDENSATE HOSE SHOULD BE ARRANGED TO PERMIT THE FLUIDS TO DRAIN FREELY, BY GRAVITY, TO A FLOOR DRAIN. RELIEF VALVE DISCHARGE SHOULD BE PIPED TO THE NEAREST FLOOR DRAIN. WHEN NO FLOOR DRAIN IS AVAILABLE, THE RELIEF VALVE DISCHARGE SHOULD BE PIPED VERTICALLY TO A HEIGHT 18" ABOVE THE FLOOR.
 - ALL (*) ITEMS ARE INCLUDED SEPARATELY IN SHIPMENT.
 - THIS IS A TYPICAL INSTALLATION DRAWING. LOCAL CODES AND AUTHORITIES SHOULD BE CONSULTED.
 - HOSE CONNECTION AT HEATER OUTLET IS FOR INITIAL HEATER CALIBRATION DURING START-UP.
 - LOCATE WATER INLET AND OUTLET FITTINGS (i.e. UNIONS, ELBOWS, ETC.) A MINIMUM OF 6" FROM WATER HEATER FITTINGS, TO PREVENT INTERFERENCE WITH REMOVAL OF HEATER PANELS.
 - PUMP SHOULD BE CAPABLE OF HEATER'S RATED FLOW AT DESIGN TEMPERATURE RISE.
 - MOUNT TEMPERATURE SWITCH 1/3 UP FROM THE BOTTOM OF THE TANK. SWITCH WILL TURN PUMP ON AND OFF.
 - IF PERMITTED BY LOCAL CODES, A CHECK VALVE MAY BE USED IN PLACE OF A BACKFLOW PREVENTER.
 - CONSULT LOCAL CODES FOR PROPER TYPE OF CONNECTIONS TO STORAGE TANK.
 - WHEN REQUIRED BY LOCAL CODES, A VACUUM BREAKER MUST BE INSTALLED WITH THE STORAGE TANK.
 - AT 14" W.C. OR BELOW, A GAS REGULATOR IS OPTIONAL UNLESS REQUIRED BY LOCAL CODE.
 - STORAGE TANK MUST INCLUDE EITHER AN INLET DISPERSION TUBE OR INLET BAFFLE TO ENSURE STRATIFICATION.

Drawing Number: SD-A-833 rev B

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX G – PIPING DRAWINGS

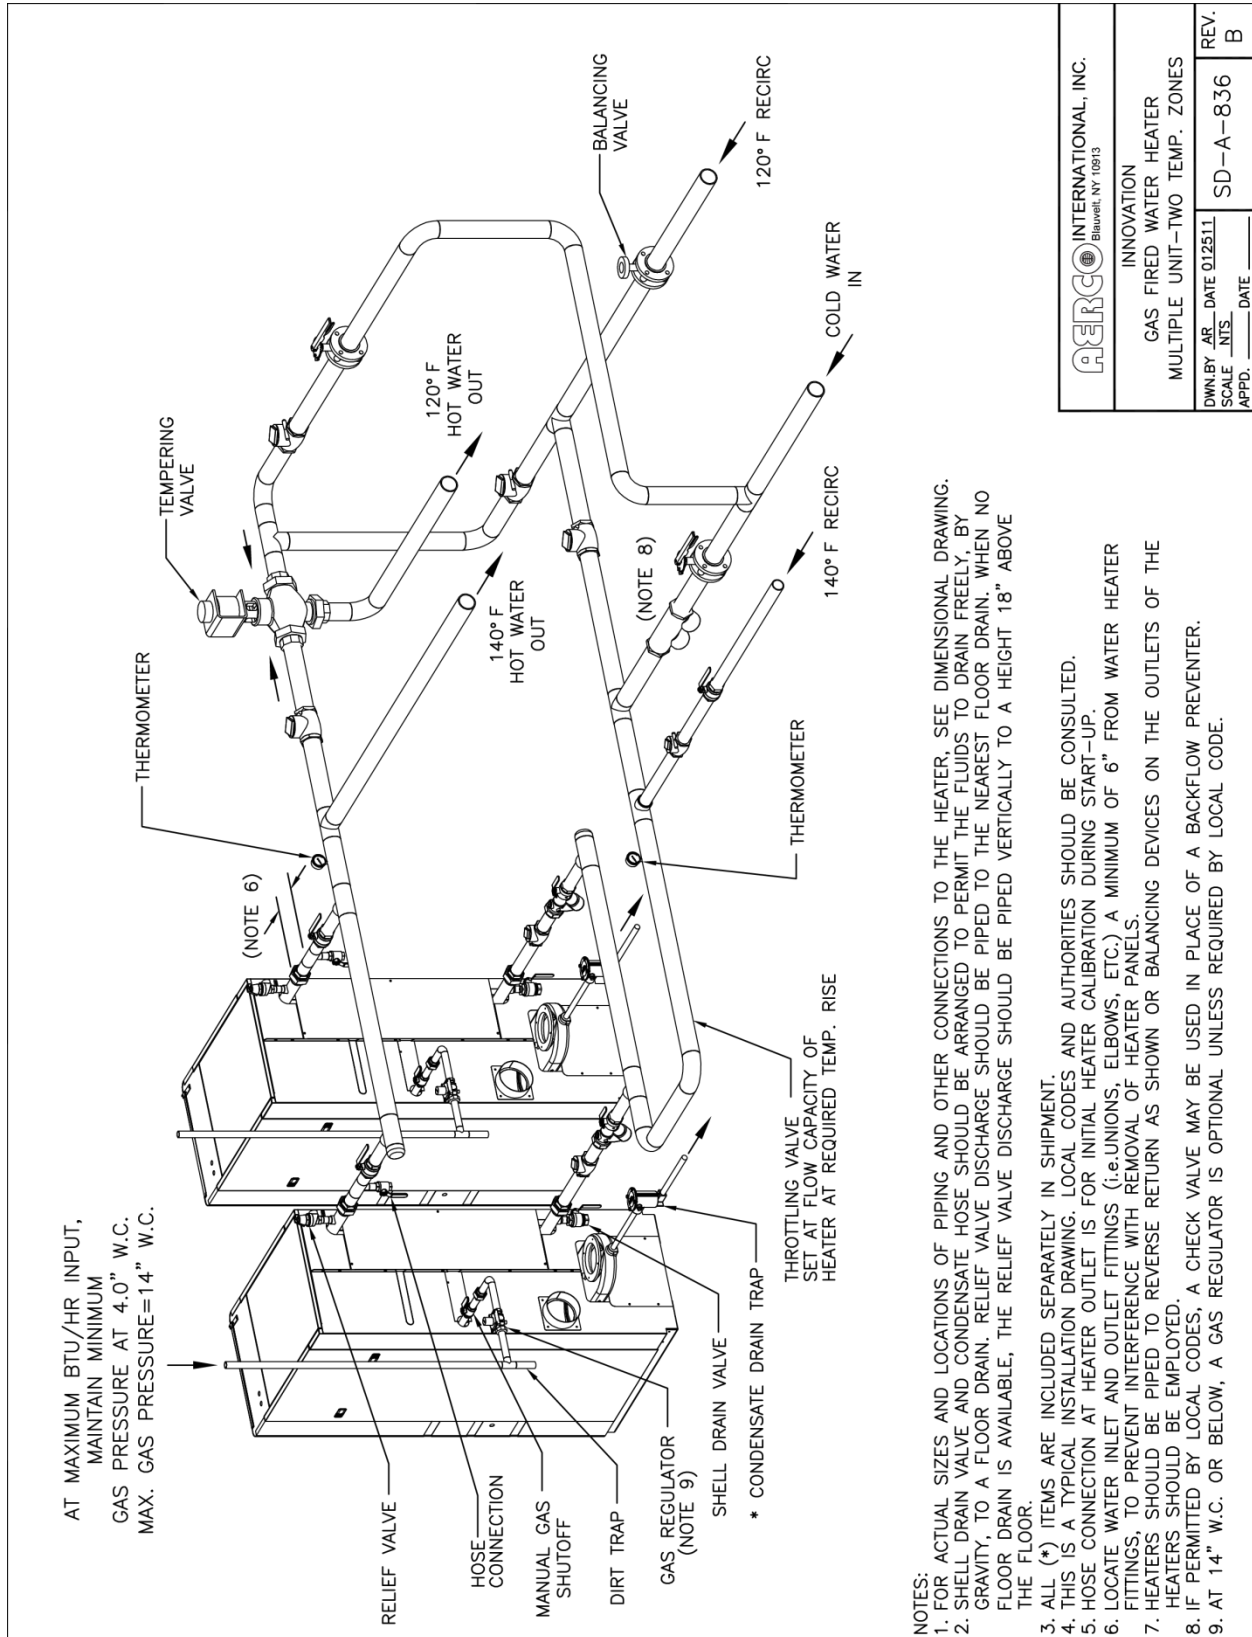


AERCO INTERNATIONAL, INC. <small>Blauvelt, NY 10915</small>	
INNOVATION GAS FIRED WATER HEATER MULTIPLE UNIT - TWO TEMP. ZONES	
DWN. BY: <u>AR</u> DATE: <u>012511</u>	REV: <u>B</u>
SCALE: <u>NTS</u> APPD. _____ DATE _____	SD-A-836

Drawing Number: SD-A-836 rev B

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX G – PIPING DRAWINGS

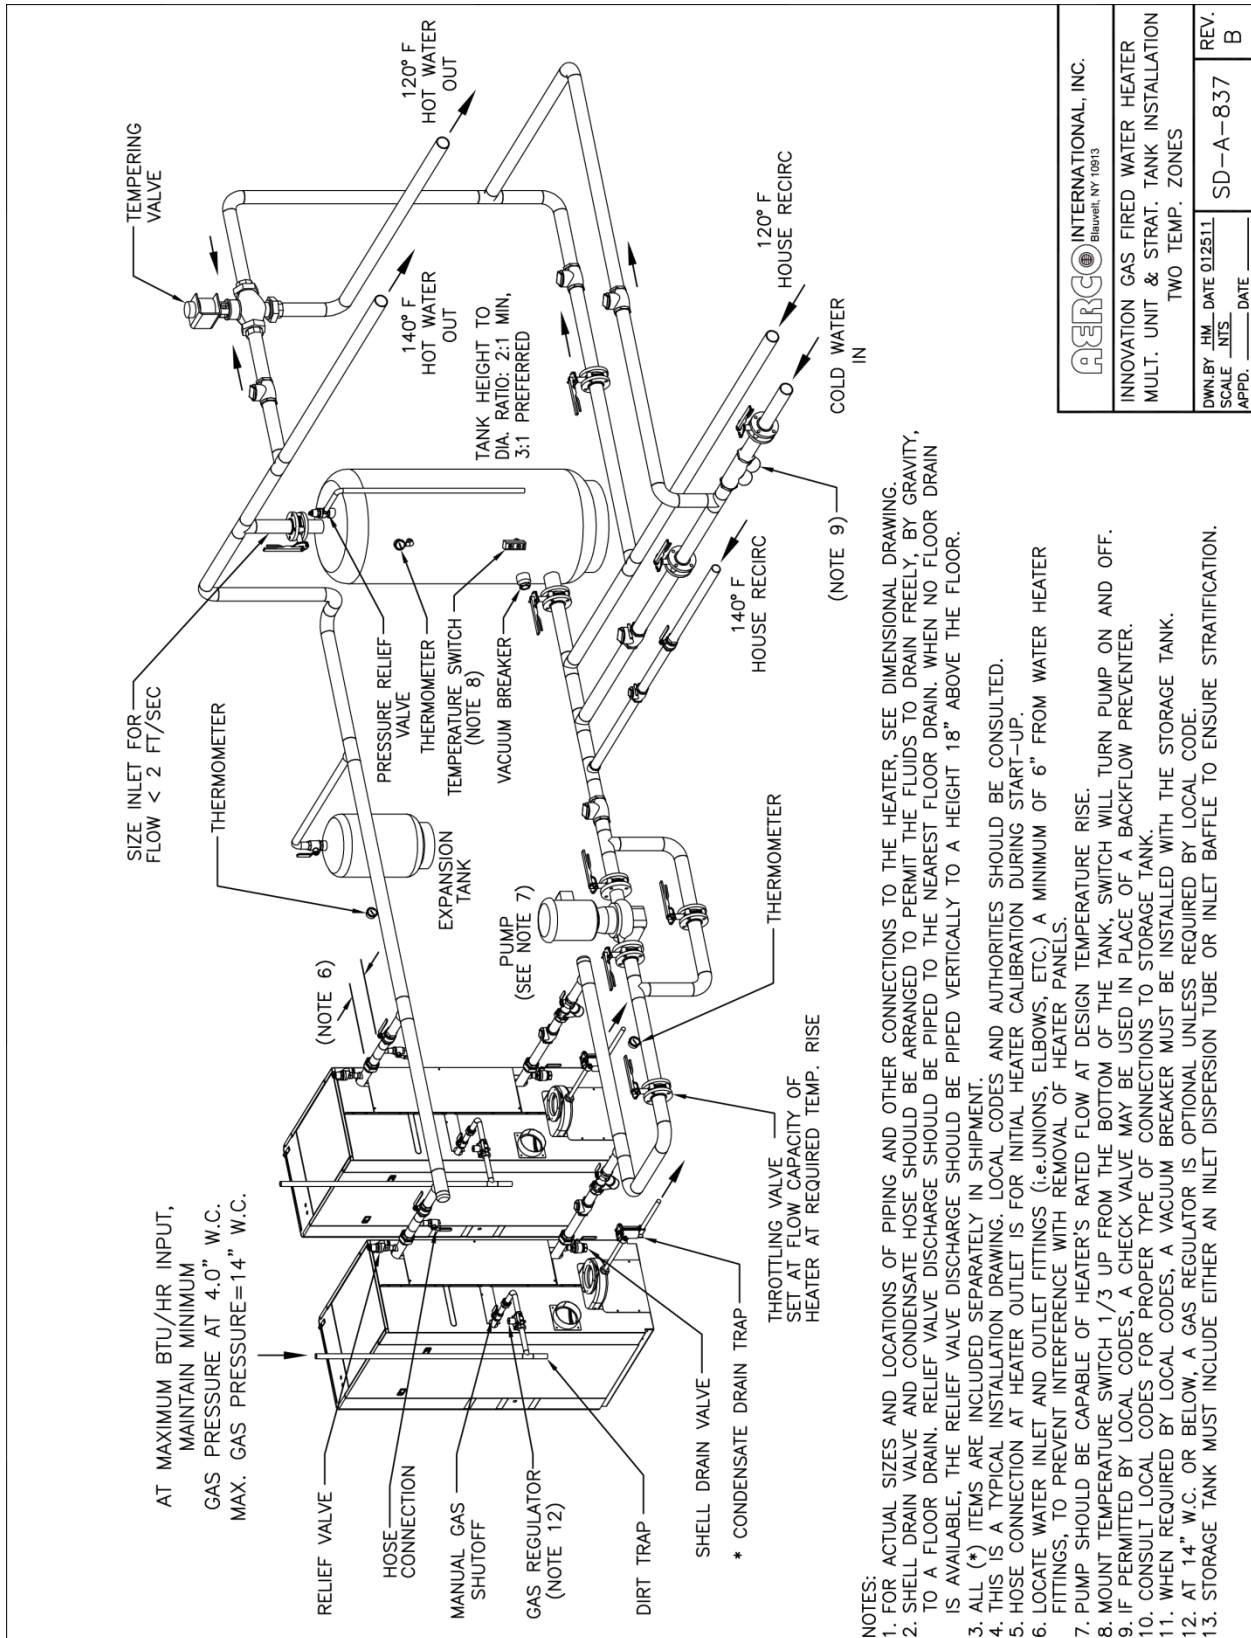


AERCO INTERNATIONAL, INC. <small>Blauvelt, NY 10913</small>	
INNOVATION GAS FIRED WATER HEATER MULT. UNIT & STRAT. TANK INSTALLATION TWO TEMP. ZONES	
DWN BY: <u>JM</u> DATE: <u>012511</u>	REV. <u>B</u>
SCALE: <u>AS SHOWN</u>	APPD. _____ DATE _____
SD-A-837	

- NOTES:**
- FOR ACTUAL SIZES AND LOCATIONS OF PIPING AND OTHER CONNECTIONS TO THE HEATER, SEE DIMENSIONAL DRAWING.
 - SHELL DRAIN VALVE AND CONDENSATE HOSE SHOULD BE ARRANGED TO PERMIT THE FLUIDS TO DRAIN FREELY, BY GRAVITY, TO A FLOOR DRAIN. RELIEF VALVE DISCHARGE SHOULD BE PIPED TO THE NEAREST FLOOR DRAIN. WHEN NO FLOOR DRAIN IS AVAILABLE, THE RELIEF VALVE DISCHARGE SHOULD BE PIPED VERTICALLY TO A HEIGHT 18" ABOVE THE FLOOR.
 - ALL (*) ITEMS ARE INCLUDED SEPARATELY IN SHIPMENT.
 - THIS IS A TYPICAL INSTALLATION DRAWING. LOCAL CODES AND AUTHORITIES SHOULD BE CONSULTED.
 - HOSE CONNECTION AT HEATER OUTLET IS FOR INITIAL HEATER CALIBRATION DURING START-UP.
 - LOCATE WATER INLET AND OUTLET FITTINGS (i.e. UNIONS, ELBOWS, ETC.) A MINIMUM OF 6" FROM WATER HEATER FITTINGS, TO PREVENT INTERFERENCE WITH REMOVAL OF HEATER PANELS.
 - PUMP SHOULD BE CAPABLE OF HEATER'S RATED FLOW AT DESIGN TEMPERATURE RISE.
 - MOUNT TEMPERATURE SWITCH 1/3 UP FROM THE BOTTOM OF THE TANK. SWITCH WILL TURN PUMP ON AND OFF.
 - IF PERMITTED BY LOCAL CODES, A CHECK VALVE MAY BE USED IN PLACE OF A BACKFLOW PREVENTER.
 - CONSULT LOCAL CODES FOR PROPER TYPE OF CONNECTIONS TO STORAGE TANK.
 - WHEN REQUIRED BY LOCAL CODES, A VACUUM BREAKER MUST BE INSTALLED WITH THE STORAGE TANK.
 - AT 14" W.C. OR BELOW, A GAS REGULATOR IS OPTIONAL UNLESS REQUIRED BY LOCAL CODE.
 - STORAGE TANK MUST INCLUDE EITHER AN INLET DISPERSION TUBE OR INLET BAFFLE TO ENSURE STRATIFICATION.

Drawing Number: SD-A-837 rev B

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX G – PIPING DRAWINGS

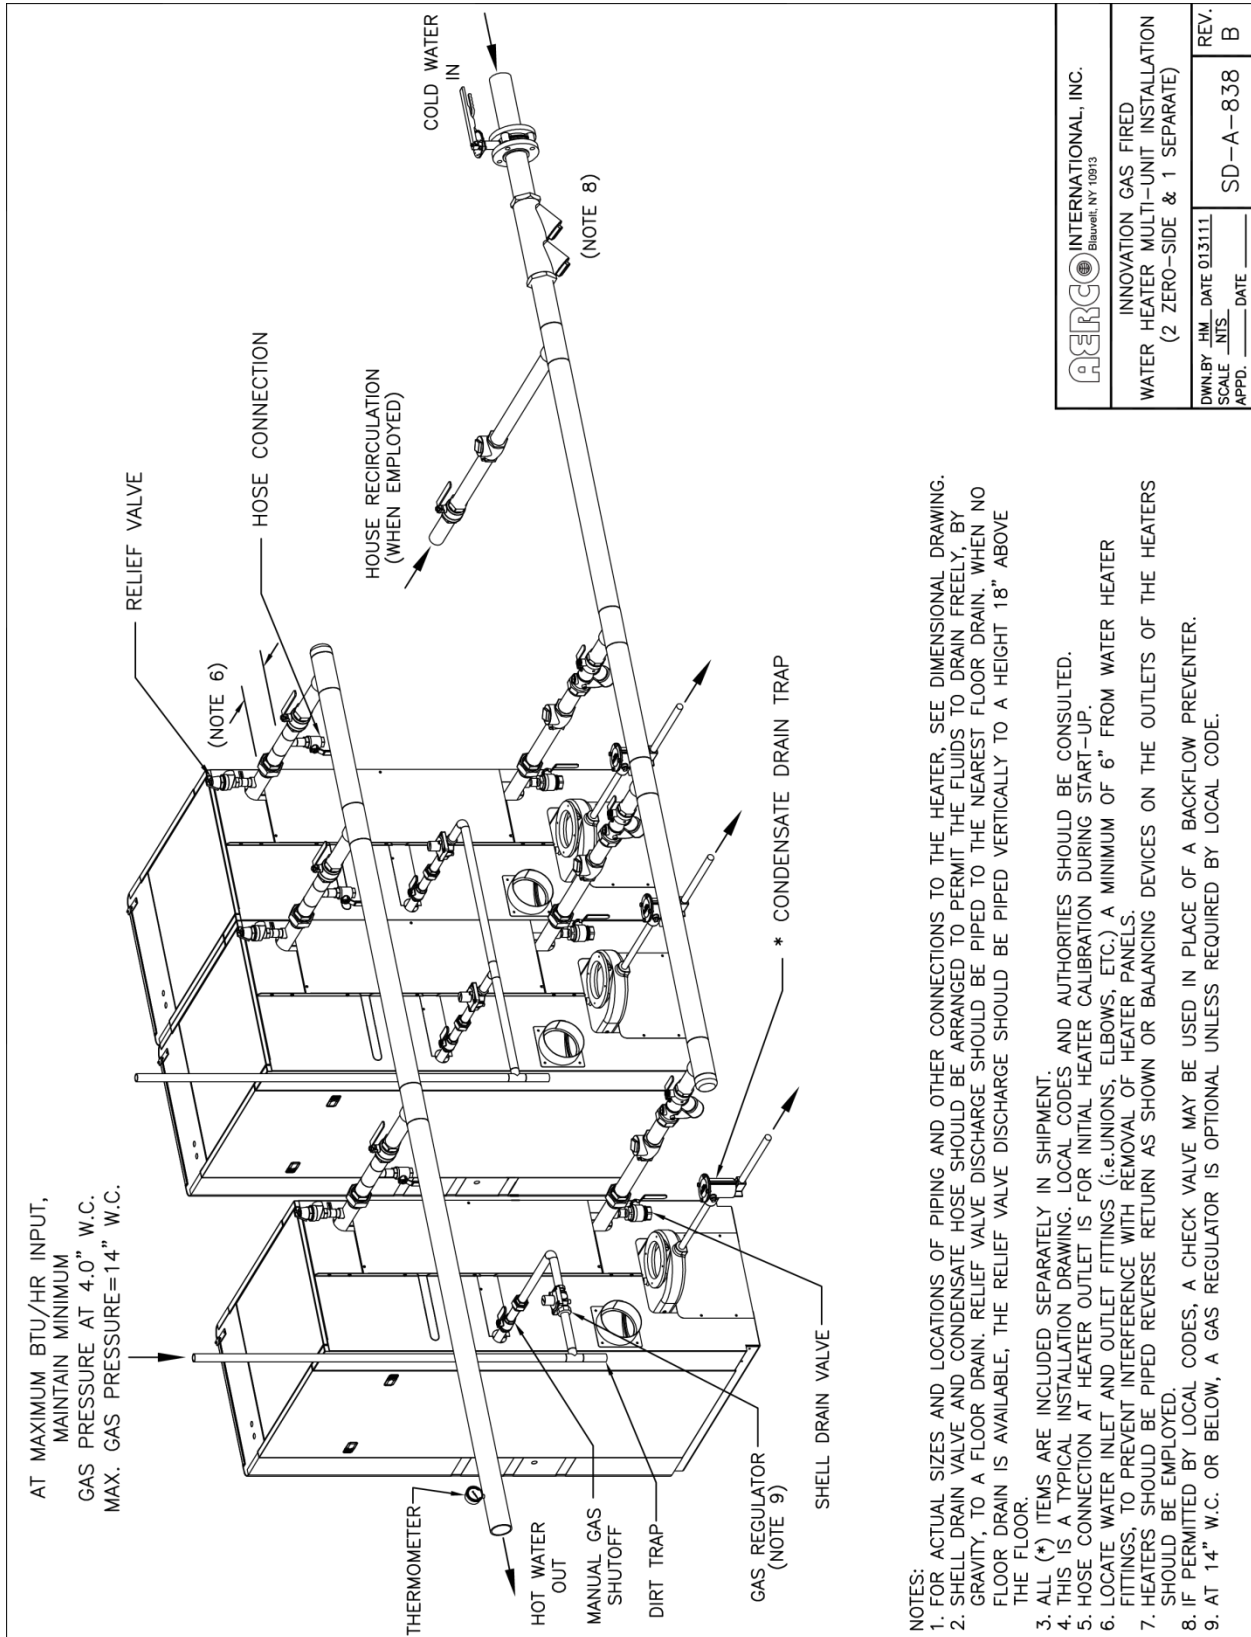


 INTERNATIONAL, INC. <small>Blauvelt, NY 10913</small>	
INNOVATION GAS FIRED WATER HEATER MULTI-UNIT INSTALLATION (2 ZERO-SIDE & 1 SEPARATE)	
DWN BY: HM DATE 013111 SCALE: NTS. DATE _____ APPD: _____	REV. SD-A-838 B

Drawing Number: SD-A-838 rev B

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX G – PIPING DRAWINGS

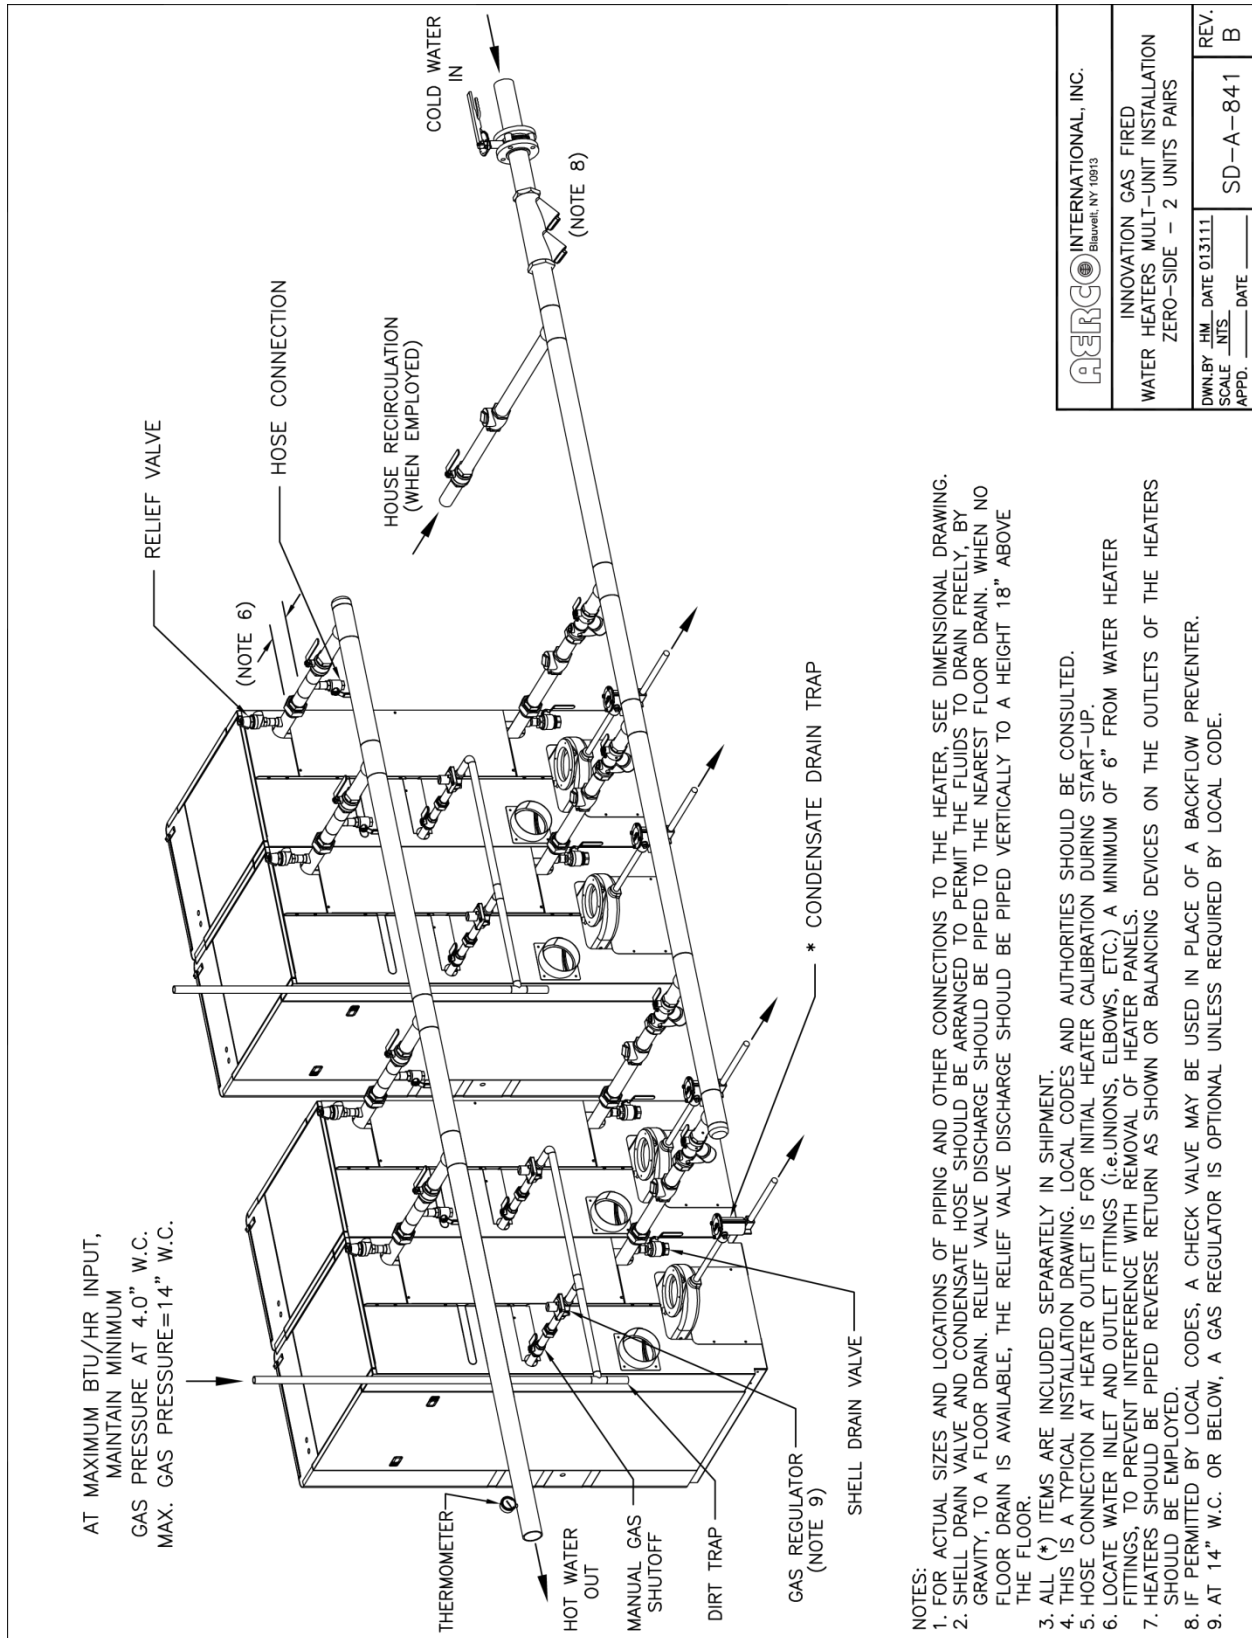


 AERCO INTERNATIONAL, INC. <small>Blauvelt, NY 10913</small>	
INNOVATION GAS FIRED WATER HEATERS MULTI-UNIT INSTALLATION ZERO-SIDE - 2 UNITS PAIRS	
DWN BY: HM _____ DATE 01.31.11 SCALE: NTS _____ APPD: _____ DATE _____	REV. _____ SD-A-841 B

- NOTES:
- FOR ACTUAL SIZES AND LOCATIONS OF PIPING AND OTHER CONNECTIONS TO THE HEATER, SEE DIMENSIONAL DRAWING.
 - SHELL DRAIN VALVE AND CONDENSATE HOSE SHOULD BE ARRANGED TO PERMIT THE FLUIDS TO DRAIN FREELY, BY GRAVITY, TO A FLOOR DRAIN. RELIEF VALVE DISCHARGE SHOULD BE PIPED TO THE NEAREST FLOOR DRAIN. WHEN NO FLOOR DRAIN IS AVAILABLE, THE RELIEF VALVE DISCHARGE SHOULD BE PIPED VERTICALLY TO A HEIGHT 18" ABOVE THE FLOOR.
 - ALL (*) ITEMS ARE INCLUDED SEPARATELY IN SHIPMENT.
 - THIS IS A TYPICAL INSTALLATION DRAWING. LOCAL CODES AND AUTHORITIES SHOULD BE CONSULTED.
 - HOSE CONNECTION AT HEATER OUTLET IS FOR INITIAL HEATER CALIBRATION DURING START-UP.
 - LOCATE WATER INLET AND OUTLET FITTINGS (i.e. UNIONS, ELBOWS, ETC.) A MINIMUM OF 6" FROM WATER HEATER FITTINGS, TO PREVENT INTERFERENCE WITH REMOVAL OF HEATER PANELS.
 - HEATERS SHOULD BE PIPED REVERSE RETURN AS SHOWN OR BALANCING DEVICES ON THE OUTLETS OF THE HEATERS SHOULD BE EMPLOYED.
 - IF PERMITTED BY LOCAL CODES, A CHECK VALVE MAY BE USED IN PLACE OF A BACKFLOW PREVENTER.
 - AT 14" W.C. OR BELOW, A GAS REGULATOR IS OPTIONAL UNLESS REQUIRED BY LOCAL CODE.

Drawing Number: SD-A-841 rev B

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX G – PIPING DRAWINGS

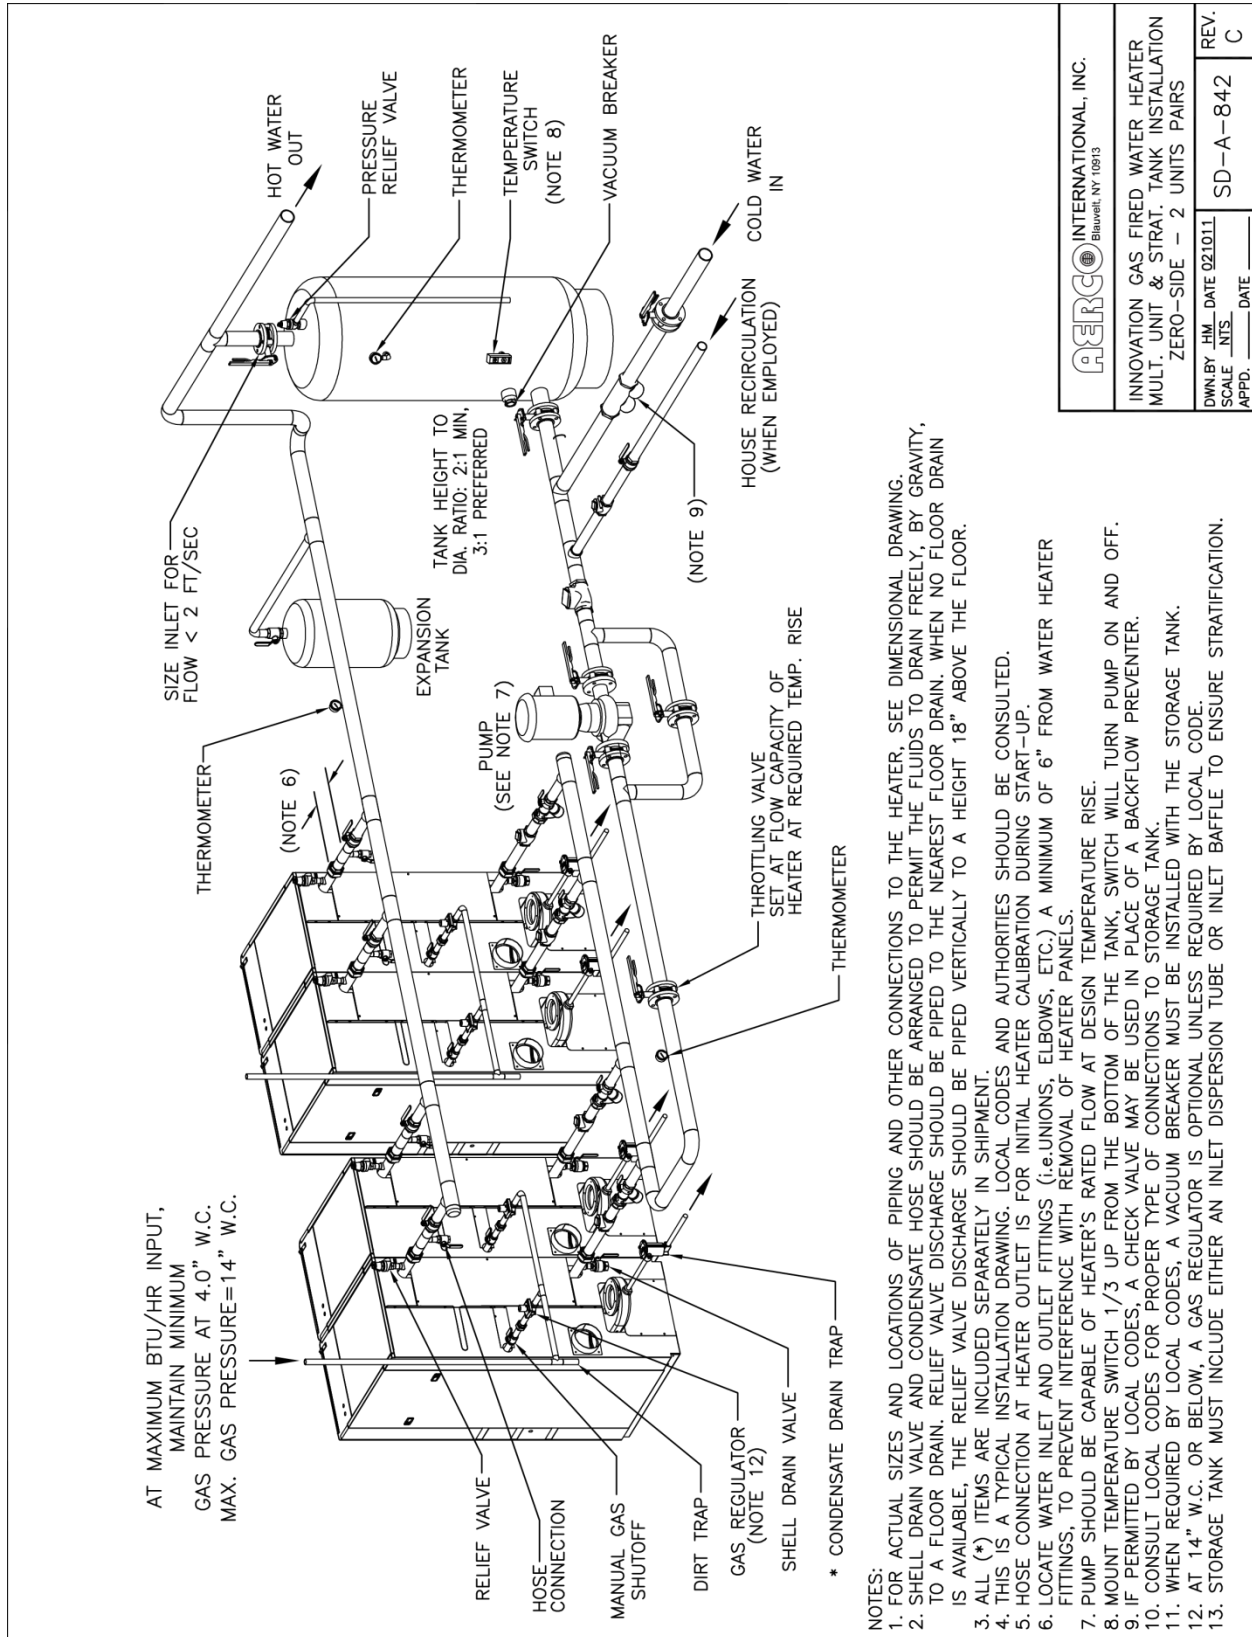


 Blauvelt, NY 10913	
INNOVATION GAS FIRED WATER HEATER MULT. UNIT & STRAT. TANK INSTALLATION ZERO-SIDE - 2 UNITS PAIRS	
DWN. BY: JHM DATE 021011 SCALE: NTS. _____ APPD. _____	SD-A-842 REV. C

Drawing Number: SD-A-842 rev C

Innovation Water Heaters Installation, Operation & Maintenance Manual


APPENDIX G – PIPING DRAWINGS

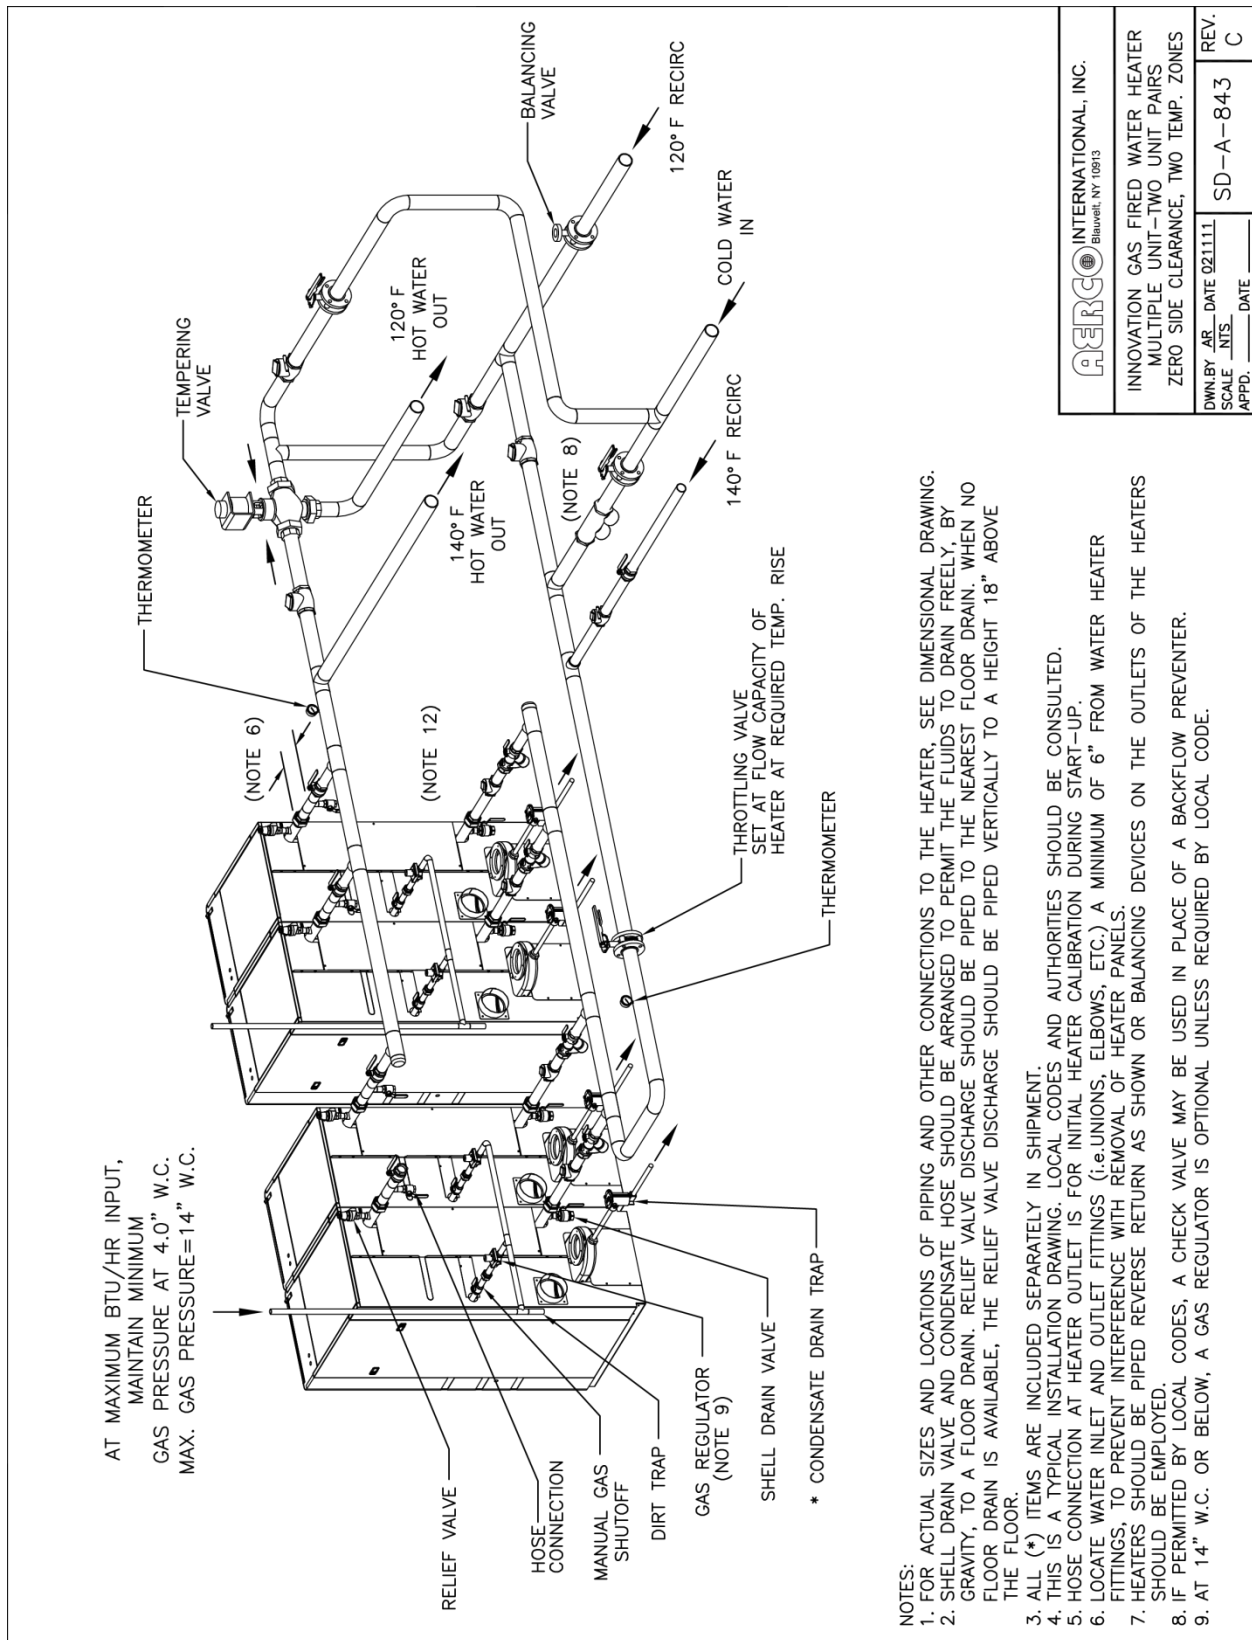

Drawing Number: SD-A-843 rev C

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX G – PIPING DRAWINGS

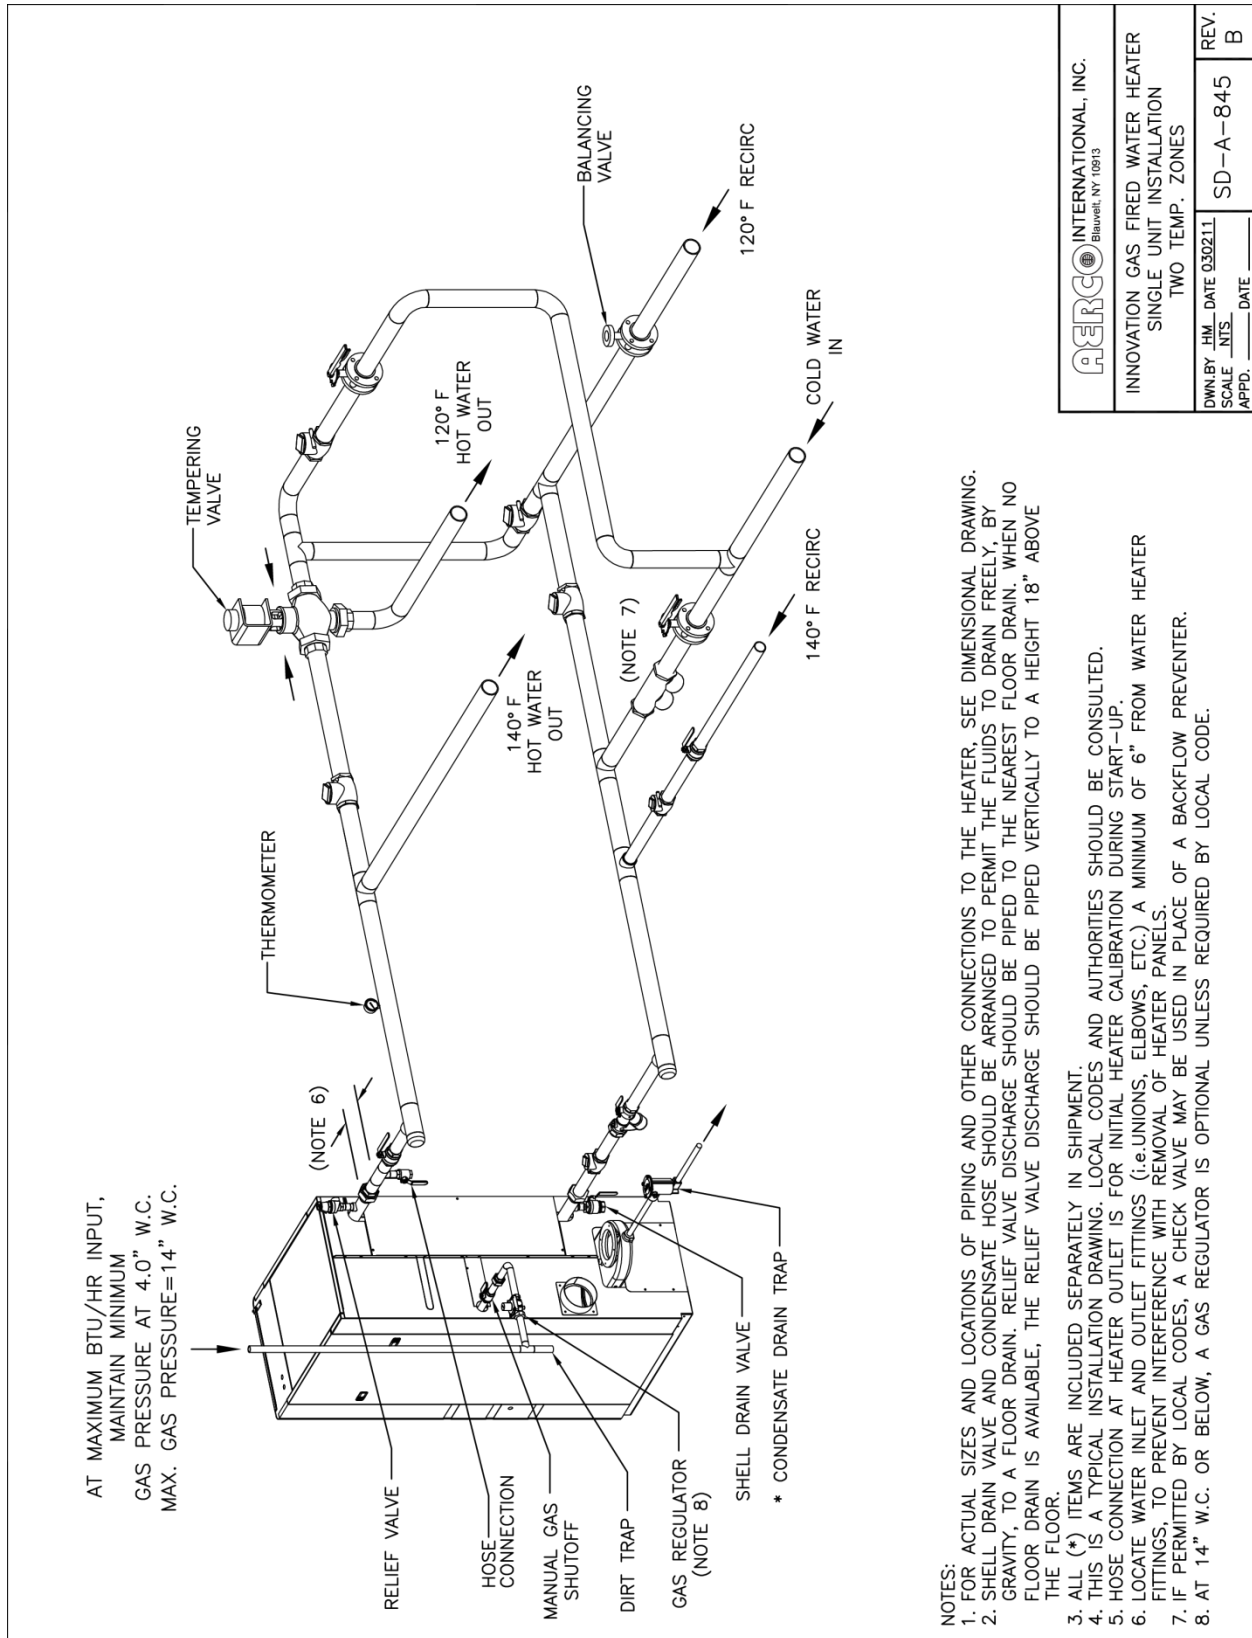


AERCO INTERNATIONAL, INC. <small>Blauvelt, NY 10913</small>	
INNOVATION GAS FIRED WATER HEATER SINGLE UNIT INSTALLATION TWO TEMP. ZONES	
DWN BY: <u>HM</u> DATE: <u>030211</u>	REV. <u>B</u>
SCALE: <u>NIS</u>	APPD. _____ DATE: _____
	SD-A-845

Drawing Number: SD-A-845 rev B

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX G – PIPING DRAWINGS

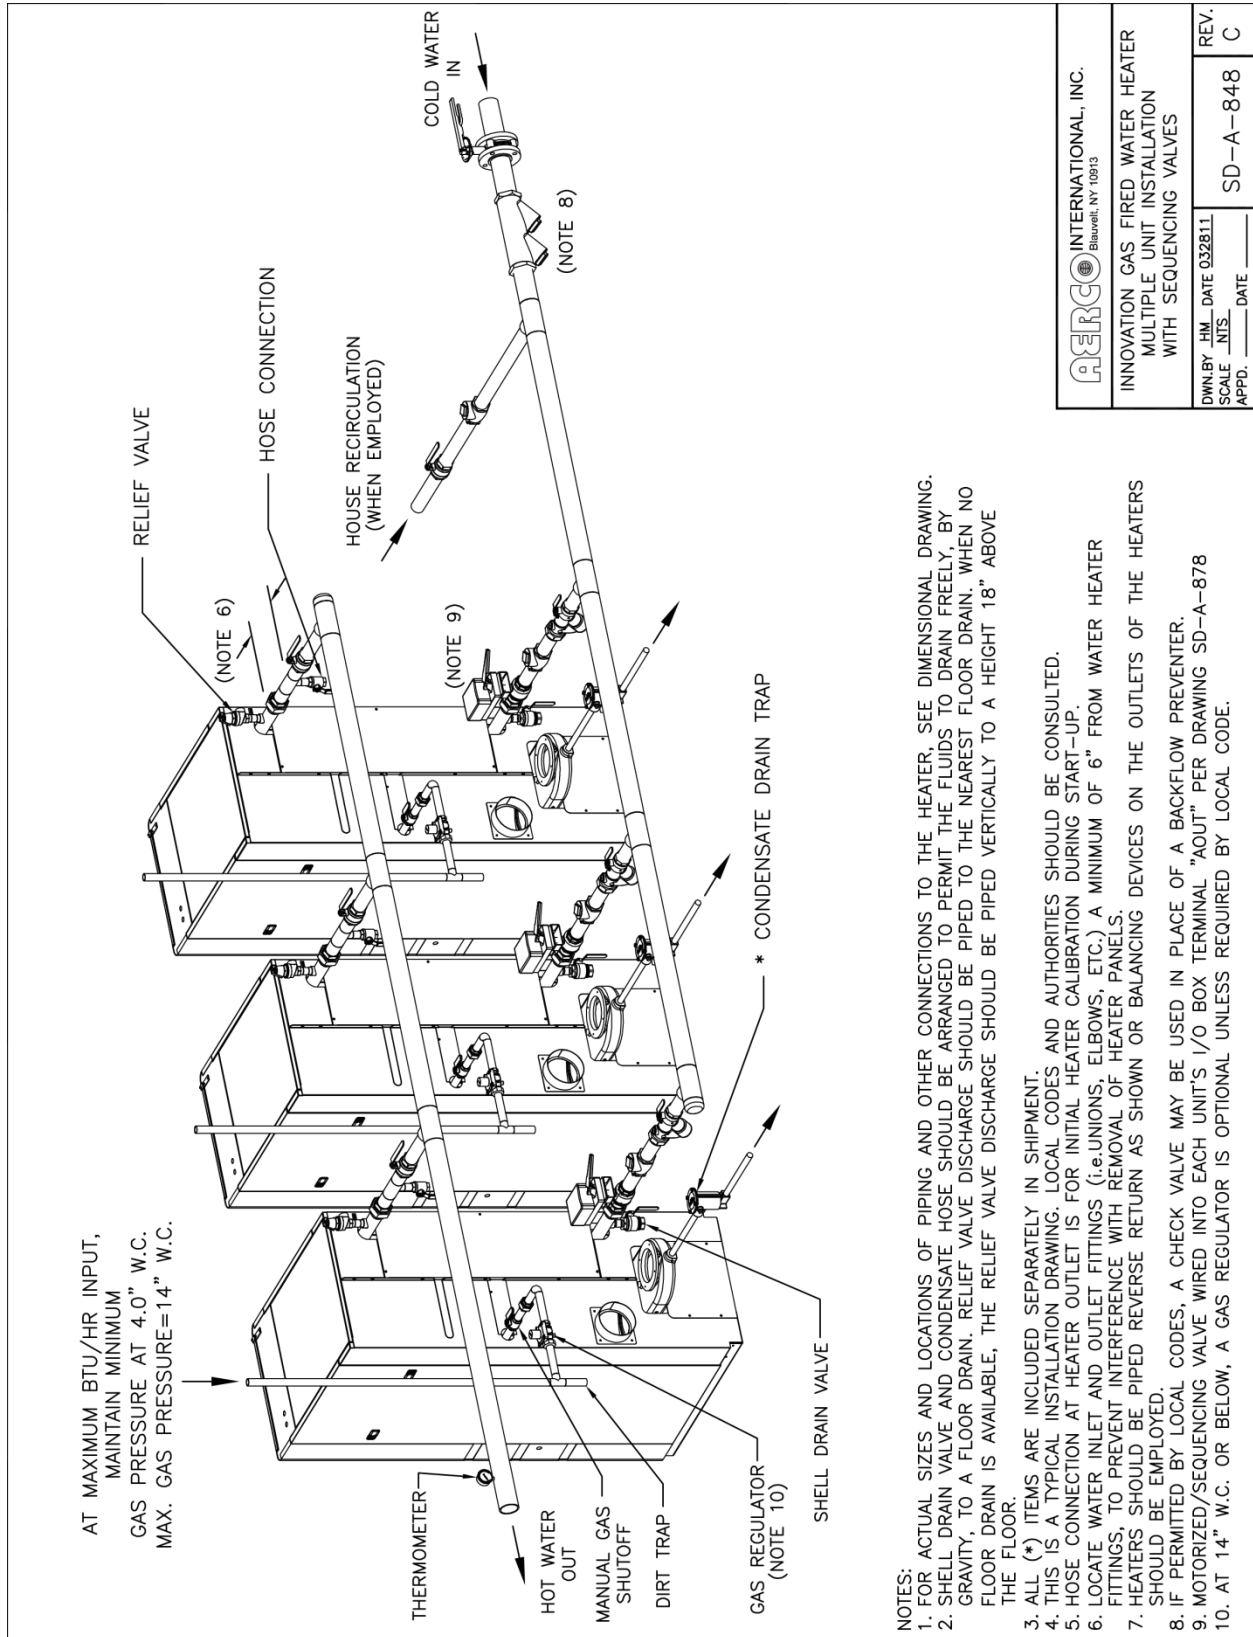


 INTERNATIONAL, INC. <small>Blauvelt, NY 10913</small>	
INNOVATION GAS FIRED WATER HEATER MULTIPLE UNIT INSTALLATION WITH SEQUENCING VALVES	
DWN BY: HM DATE 03/28/11 SCALE: NTS. DATE _____ APPD: _____	SD-A-848 C

Drawing Number: SD-A-848 rev C

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX G – PIPING DRAWINGS

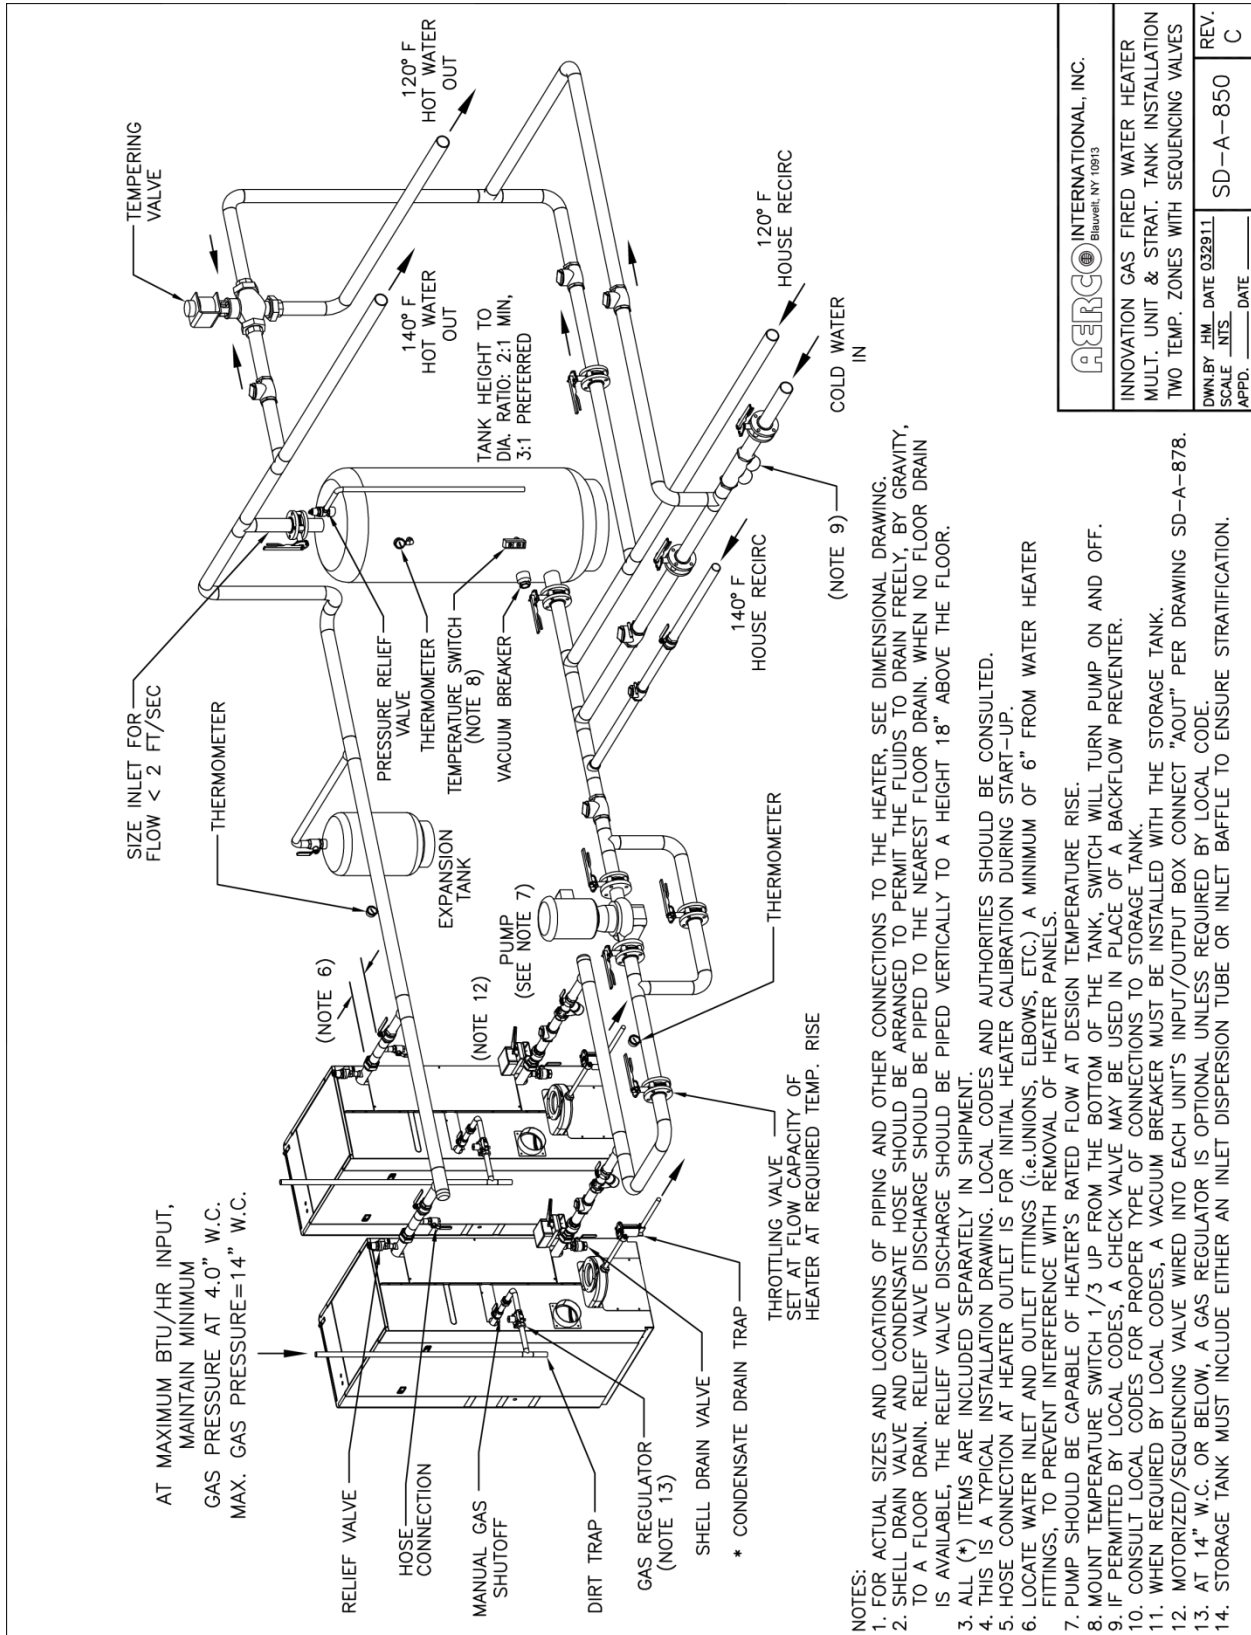


AERCO INTERNATIONAL, INC. <small>Blauvelt, NY 10913</small>	
INNOVATION GAS FIRED WATER HEATER MULT. UNIT & STRAT. TANK INSTALLATION TWO TEMP. ZONES WITH SEQUENCING VALVES	
DWN. BY: <u> </u>	DATE: <u>03/29/11</u>
SCALE: <u> </u>	DATE: <u> </u>
APPD. <u> </u>	DATE: <u> </u>
SD-A-850	REV. C

Drawing Number: SD-A-850 rev C

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX G – PIPING DRAWINGS

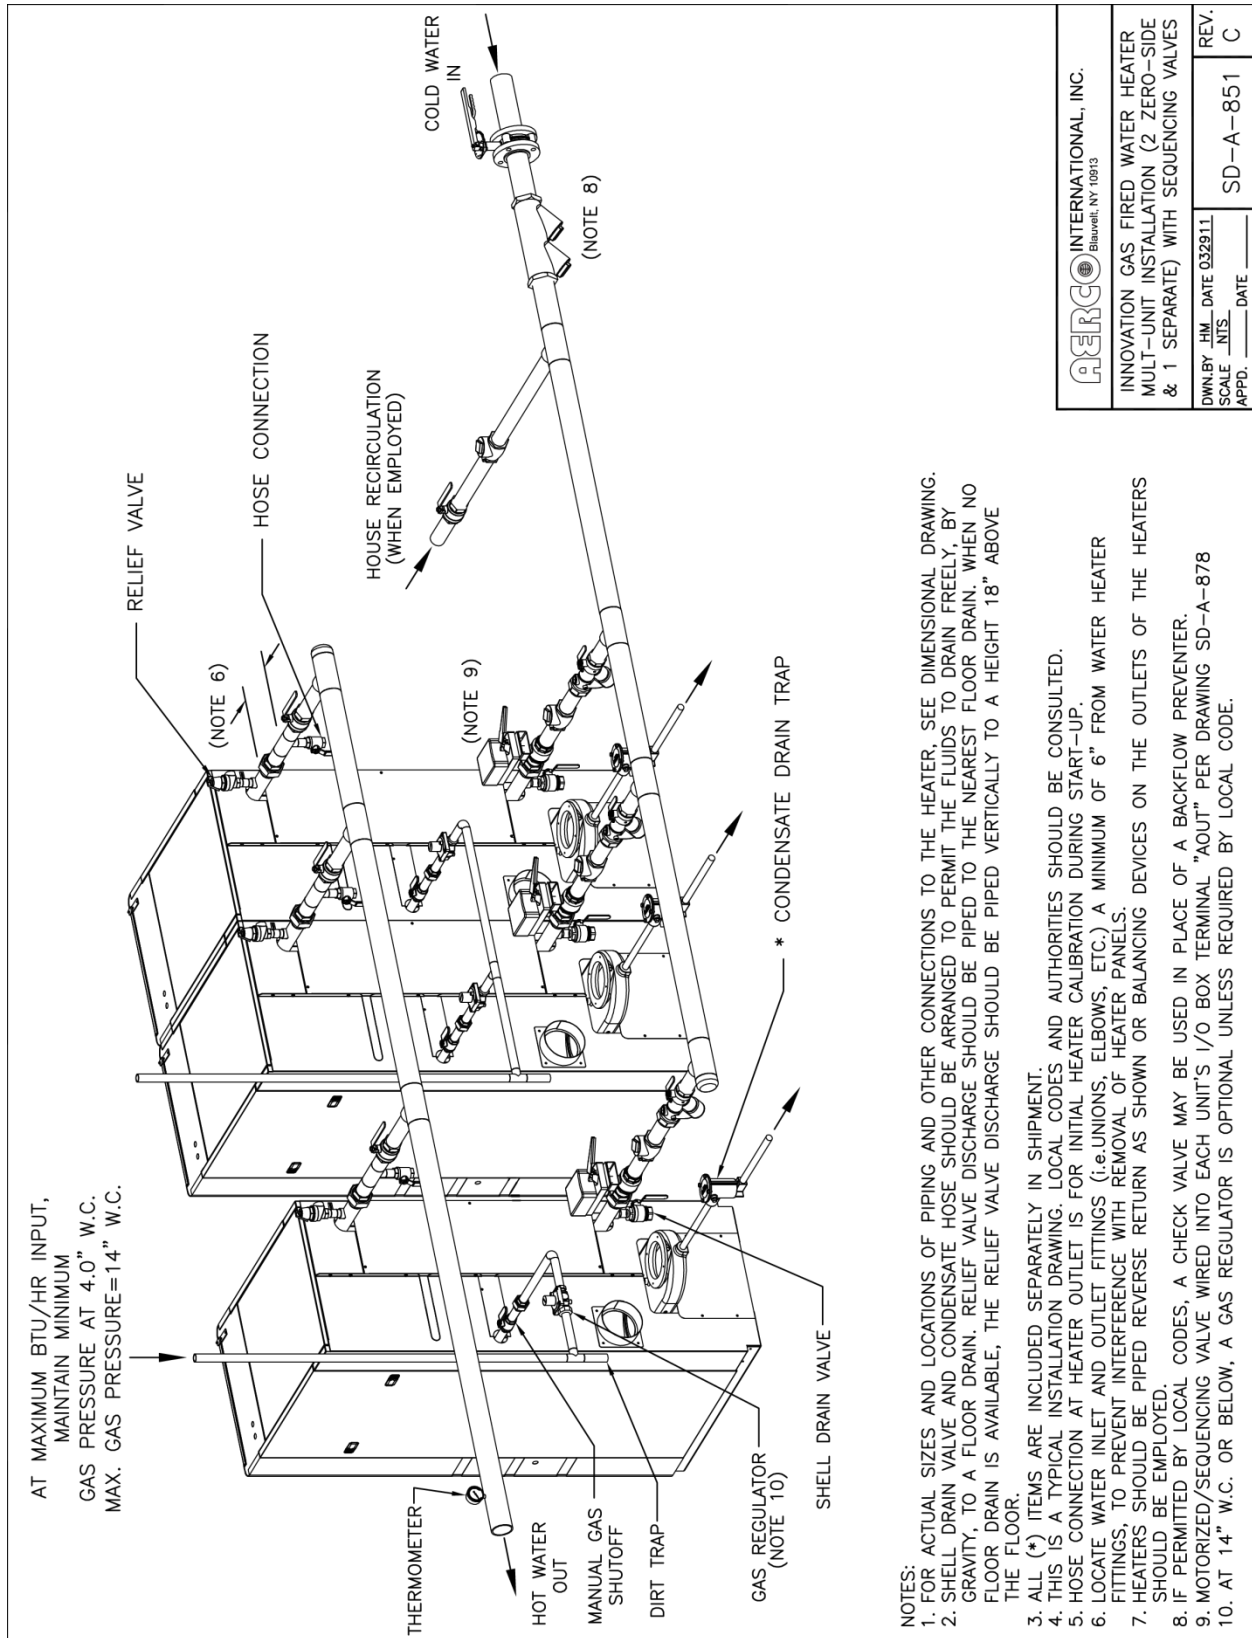


 AERCO INTERNATIONAL, INC. Blauvelt, NY 10913	
INNOVATION GAS FIRED WATER HEATER MULTI-UNIT INSTALLATION (2 ZERO-SIDE & 1 SEPARATE) WITH SEQUENCING VALVES	
DWN BY: HM SCALE: NTS APPD: _____	DATE: 032911 DATE: _____ DATE: _____
SD-A-851	REV. C

Drawing Number: SD-A-851 rev C

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX G – PIPING DRAWINGS

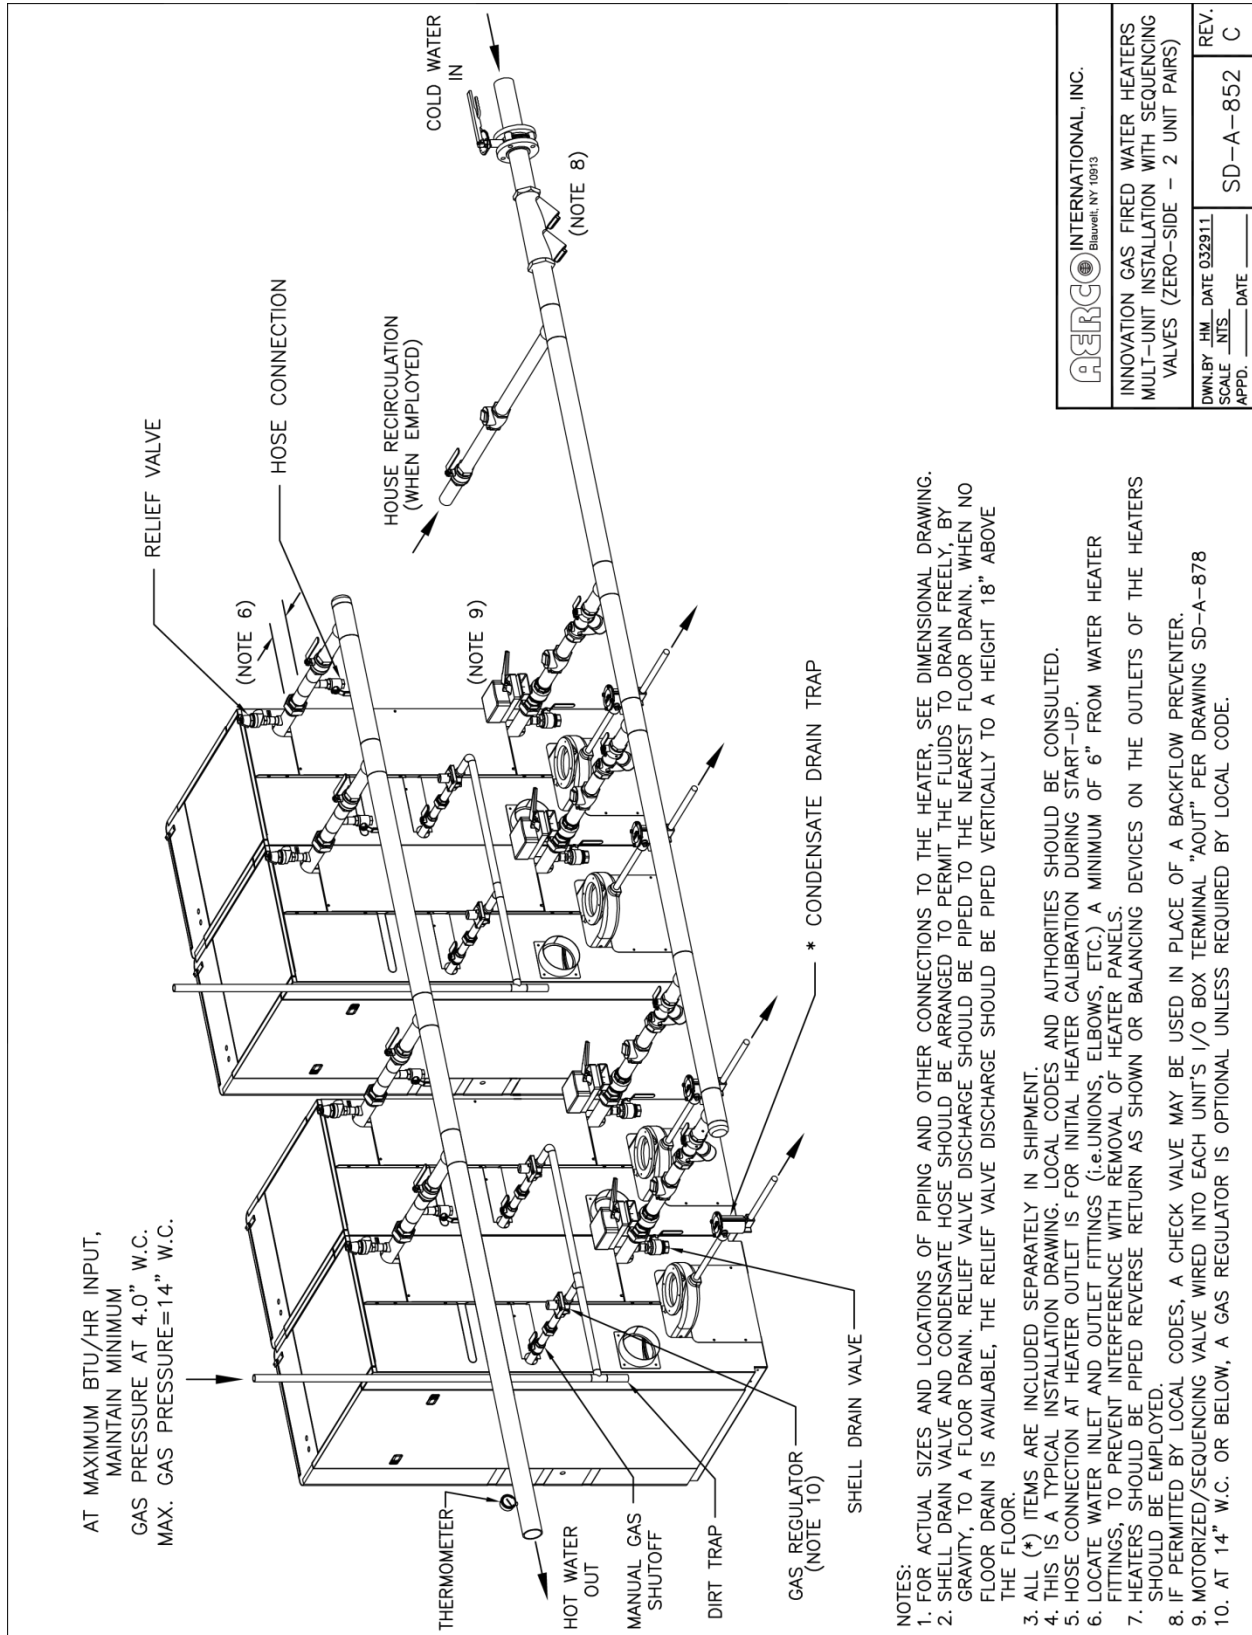


 INTERNATIONAL, INC. <small>Blauvelt, NY 10913</small>	
INNOVATION GAS FIRED WATER HEATERS MULT-UNIT INSTALLATION WITH SEQUENCING VALVES (ZERO-SIDE - 2 UNIT PAIRS)	
DWN BY: HM DATE 03/29/11 SCALE: NTS.	REV. C SD-A-852 APPD. DATE

Drawing Number: SD-A-852 rev C

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX G – PIPING DRAWINGS

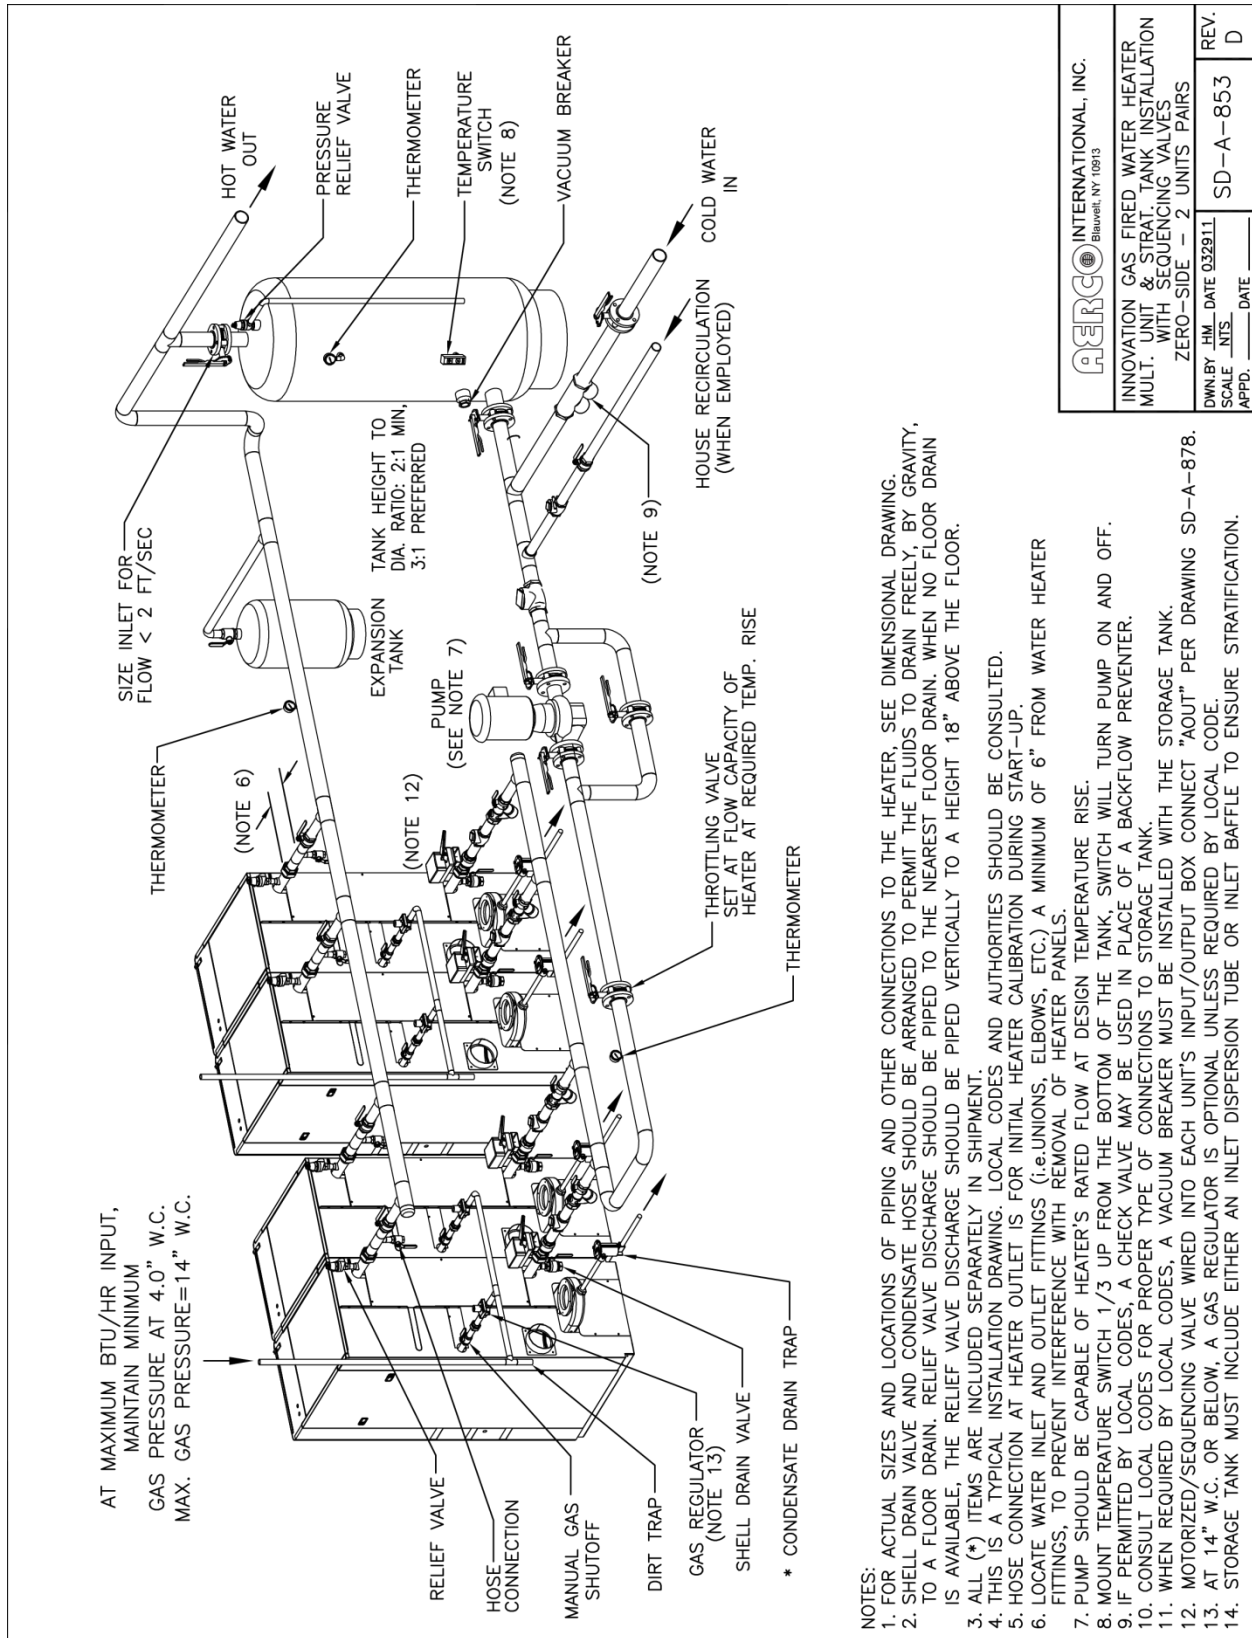


AERCO INTERNATIONAL, INC. <small>Blauvelt, NY 10913</small>	
INNOVATION GAS FIRED WATER HEATER MULT. UNIT & STRAT. TANK INSTALLATION WITH SEQUENCING VALVES ZERO-SIDE - 2 UNITS PAIRS	
DWN BY: <u>HM</u> DATE <u>032911</u>	SD-A-853
SCALE: <u>NIS</u>	REV. <u>D</u>
APPD. _____ DATE _____	

- NOTES:
- FOR ACTUAL SIZES AND LOCATIONS OF PIPING AND OTHER CONNECTIONS TO THE HEATER, SEE DIMENSIONAL DRAWING.
 - SHELL DRAIN VALVE AND CONDENSATE HOSE SHOULD BE ARRANGED TO PERMIT THE FLUIDS TO DRAIN FREELY, BY GRAVITY, TO A FLOOR DRAIN. RELIEF VALVE DISCHARGE SHOULD BE PIPED TO THE NEAREST FLOOR DRAIN. WHEN NO FLOOR DRAIN IS AVAILABLE, THE RELIEF VALVE DISCHARGE SHOULD BE PIPED VERTICALLY TO A HEIGHT 18" ABOVE THE FLOOR.
 - ALL (*) ITEMS ARE INCLUDED SEPARATELY IN SHIPMENT.
 - THIS IS A TYPICAL INSTALLATION DRAWING. LOCAL CODES AND AUTHORITIES SHOULD BE CONSULTED.
 - HOSE CONNECTION AT HEATER OUTLET IS FOR INITIAL HEATER CALIBRATION DURING START-UP.
 - LOCATE WATER INLET AND OUTLET FITTINGS (i.e. UNIONS, ELBOWS, ETC.) A MINIMUM OF 6" FROM WATER HEATER FITTINGS, TO PREVENT INTERFERENCE WITH REMOVAL OF HEATER PANELS.
 - PUMP SHOULD BE CAPABLE OF HEATER'S RATED FLOW AT DESIGN TEMPERATURE RISE.
 - MOUNT TEMPERATURE SWITCH 1/3 UP FROM THE BOTTOM OF THE TANK. SWITCH WILL TURN PUMP ON AND OFF.
 - IF PERMITTED BY LOCAL CODES, A CHECK VALVE MAY BE USED IN PLACE OF A BACKFLOW PREVENTER.
 - CONSULT LOCAL CODES FOR PROPER TYPE OF CONNECTIONS TO STORAGE TANK.
 - WHEN REQUIRED BY LOCAL CODES, A VACUUM BREAKER MUST BE INSTALLED WITH THE STORAGE TANK.
 - MOTORIZED/SEQUENCING VALVE WIRED INTO EACH UNIT'S INPUT/OUTPUT BOX CONNECT "AOUT" PER DRAWING SD-A-878.
 - AT 14" W.C. OR BELOW, A GAS REGULATOR IS OPTIONAL UNLESS REQUIRED BY LOCAL CODE.
 - STORAGE TANK MUST INCLUDE EITHER AN INLET DISPERSION TUBE OR INLET BAFFLE TO ENSURE STRATIFICATION.

Drawing Number: SD-A-853 rev D

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX G – PIPING DRAWINGS

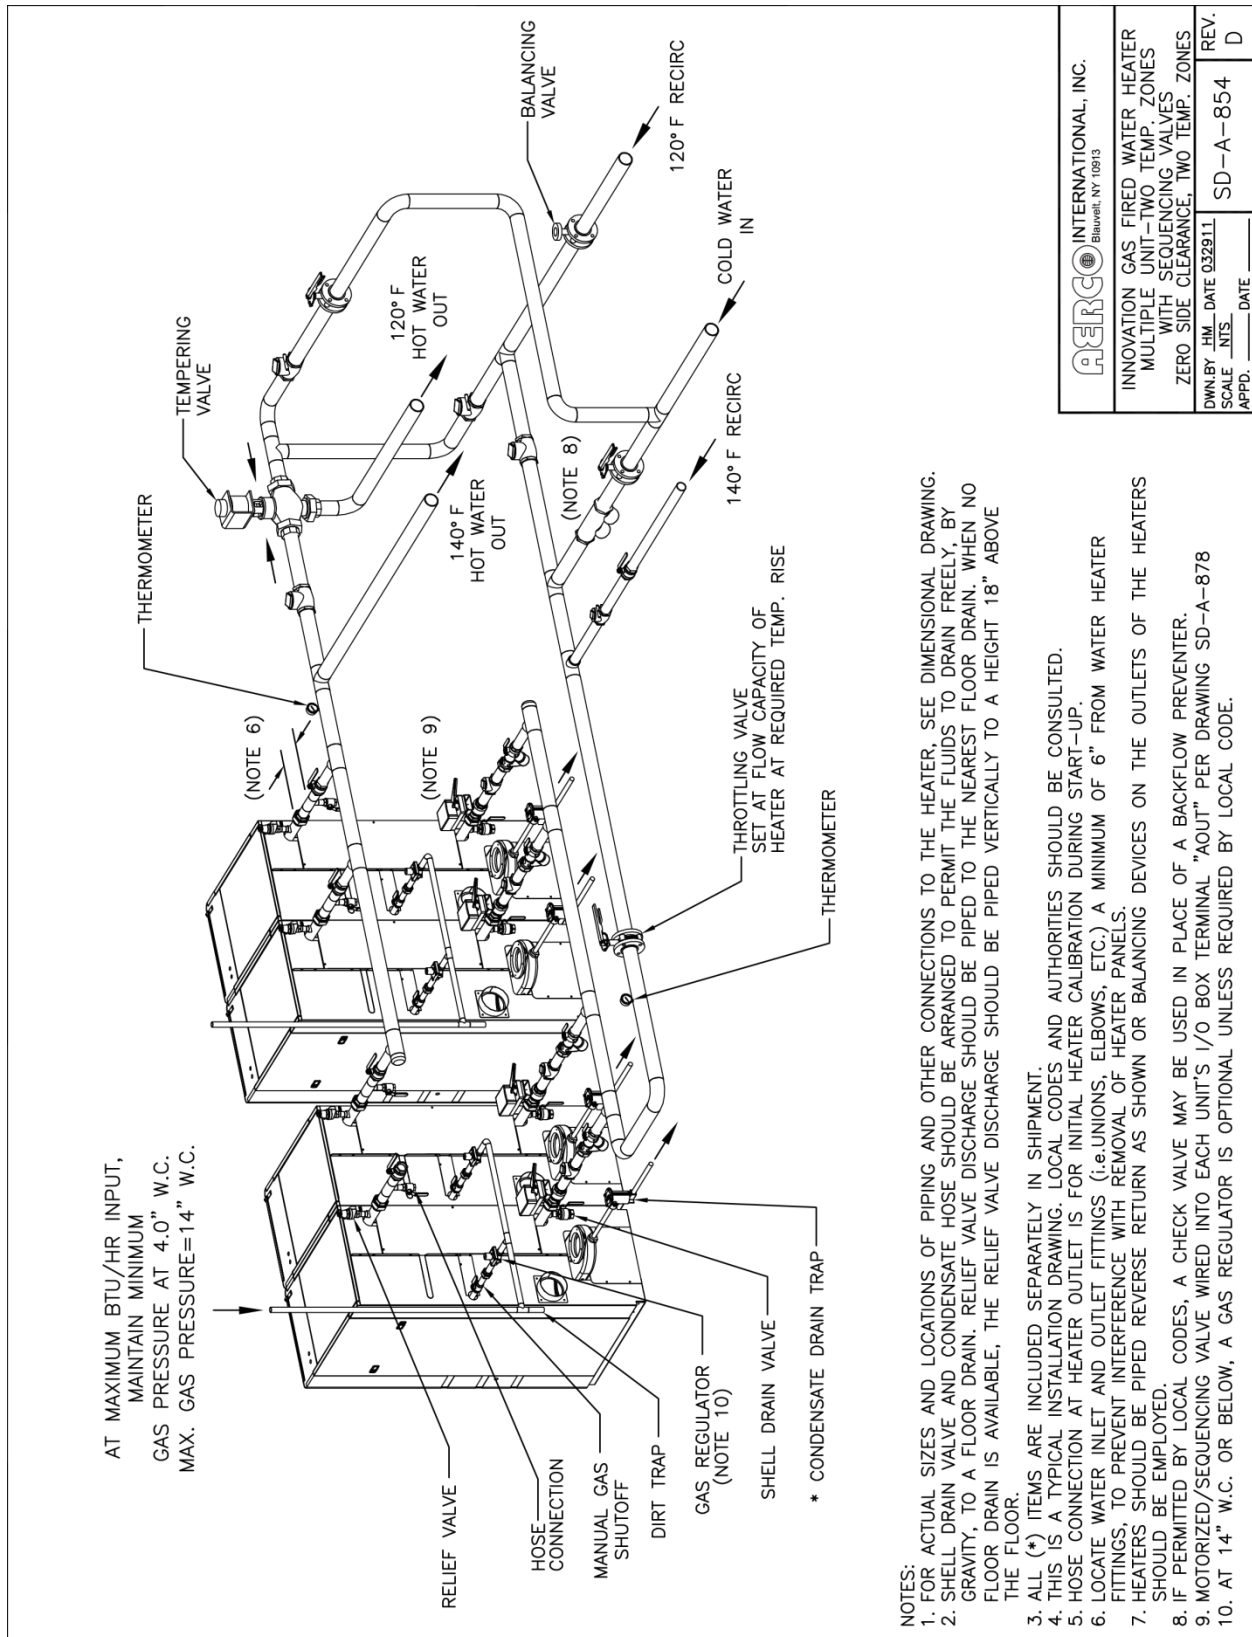


 AERCO INTERNATIONAL, INC. <small>Blauvelt, NY 10913</small>	
INNOVATION GAS FIRED WATER HEATER MULTIPLE UNIT - TWO TEMP. ZONES WITH SEQUENCING VALVES ZERO SIDE CLEARANCE, TWO TEMP. ZONES	
DWN. BY: JML DATE 03/29/11 SCALE: NTS	SD-A-854 APPD. DATE _____ REV. D

Drawing Number: SD-A-854 rev D

Innovation Water Heaters Installation, Operation & Maintenance Manual


APPENDIX G – PIPING DRAWINGS

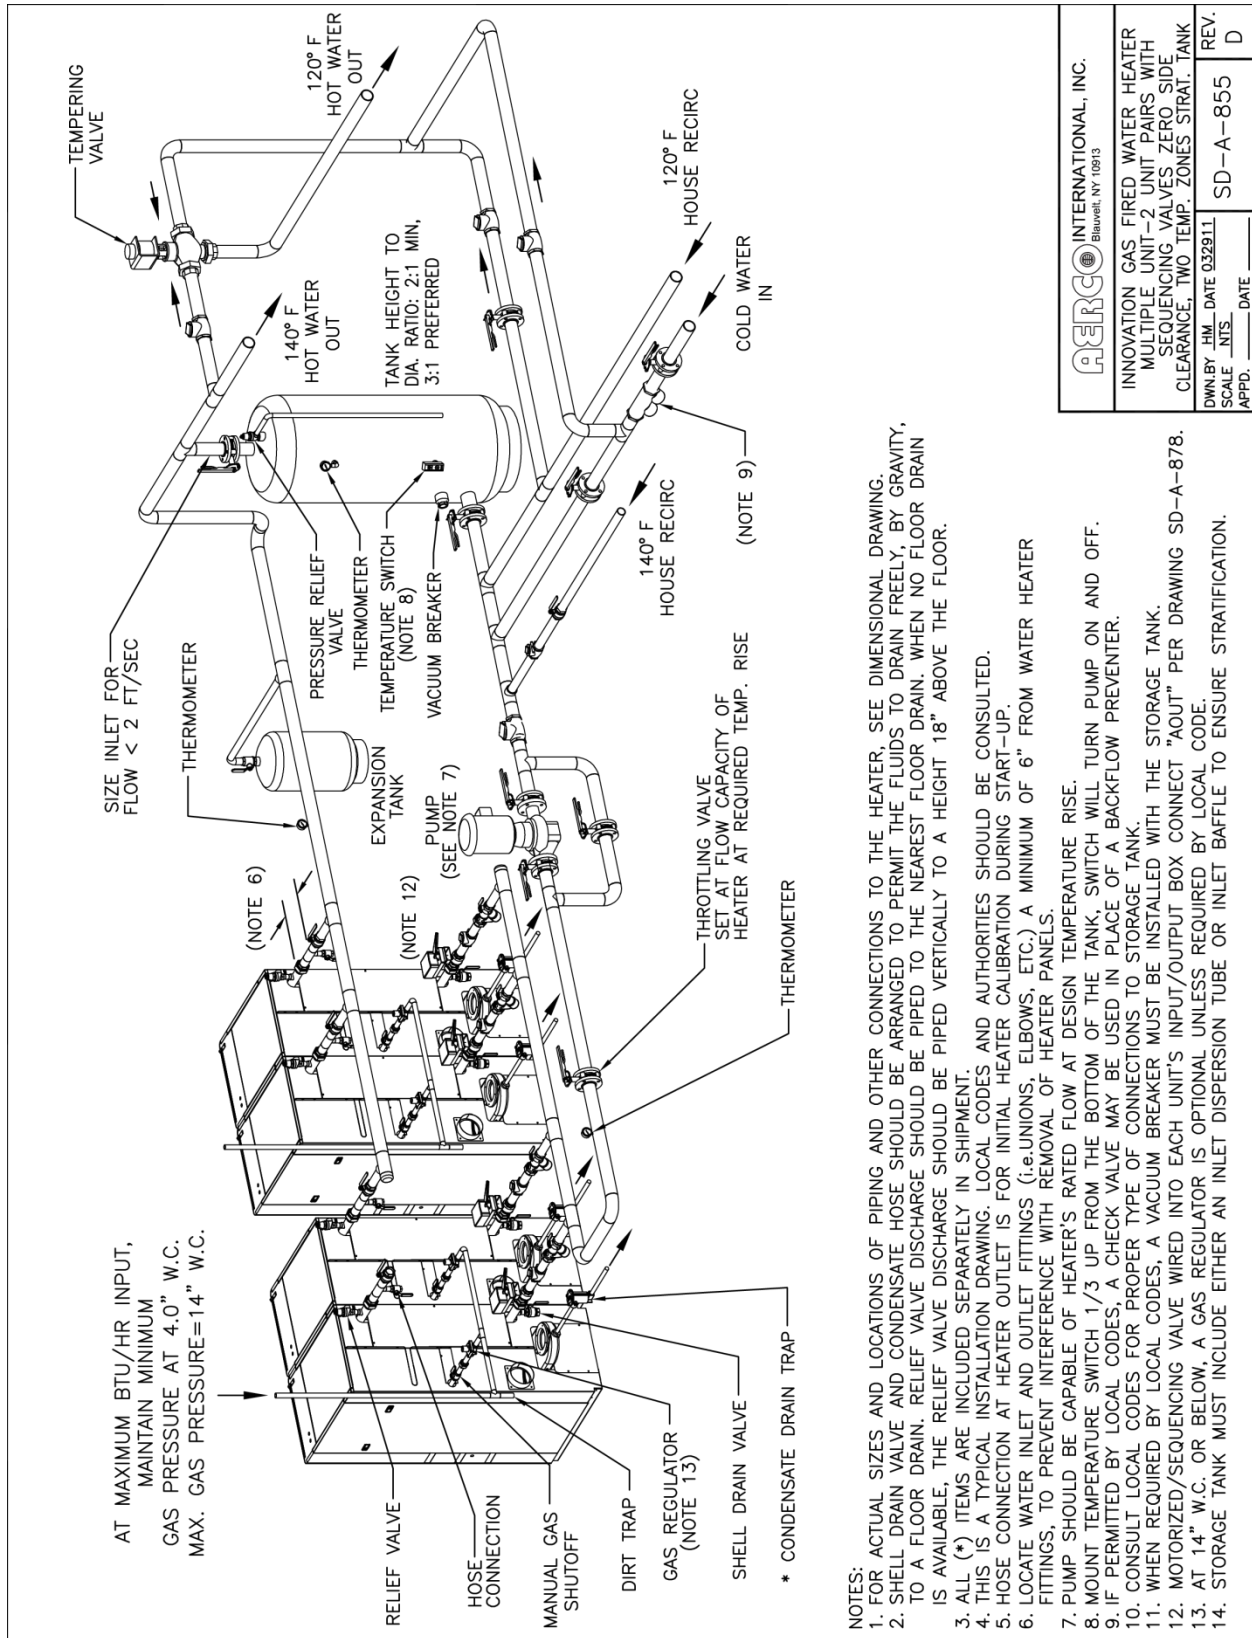

Drawing Number: SD-A-855 rev D

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX G – PIPING DRAWINGS

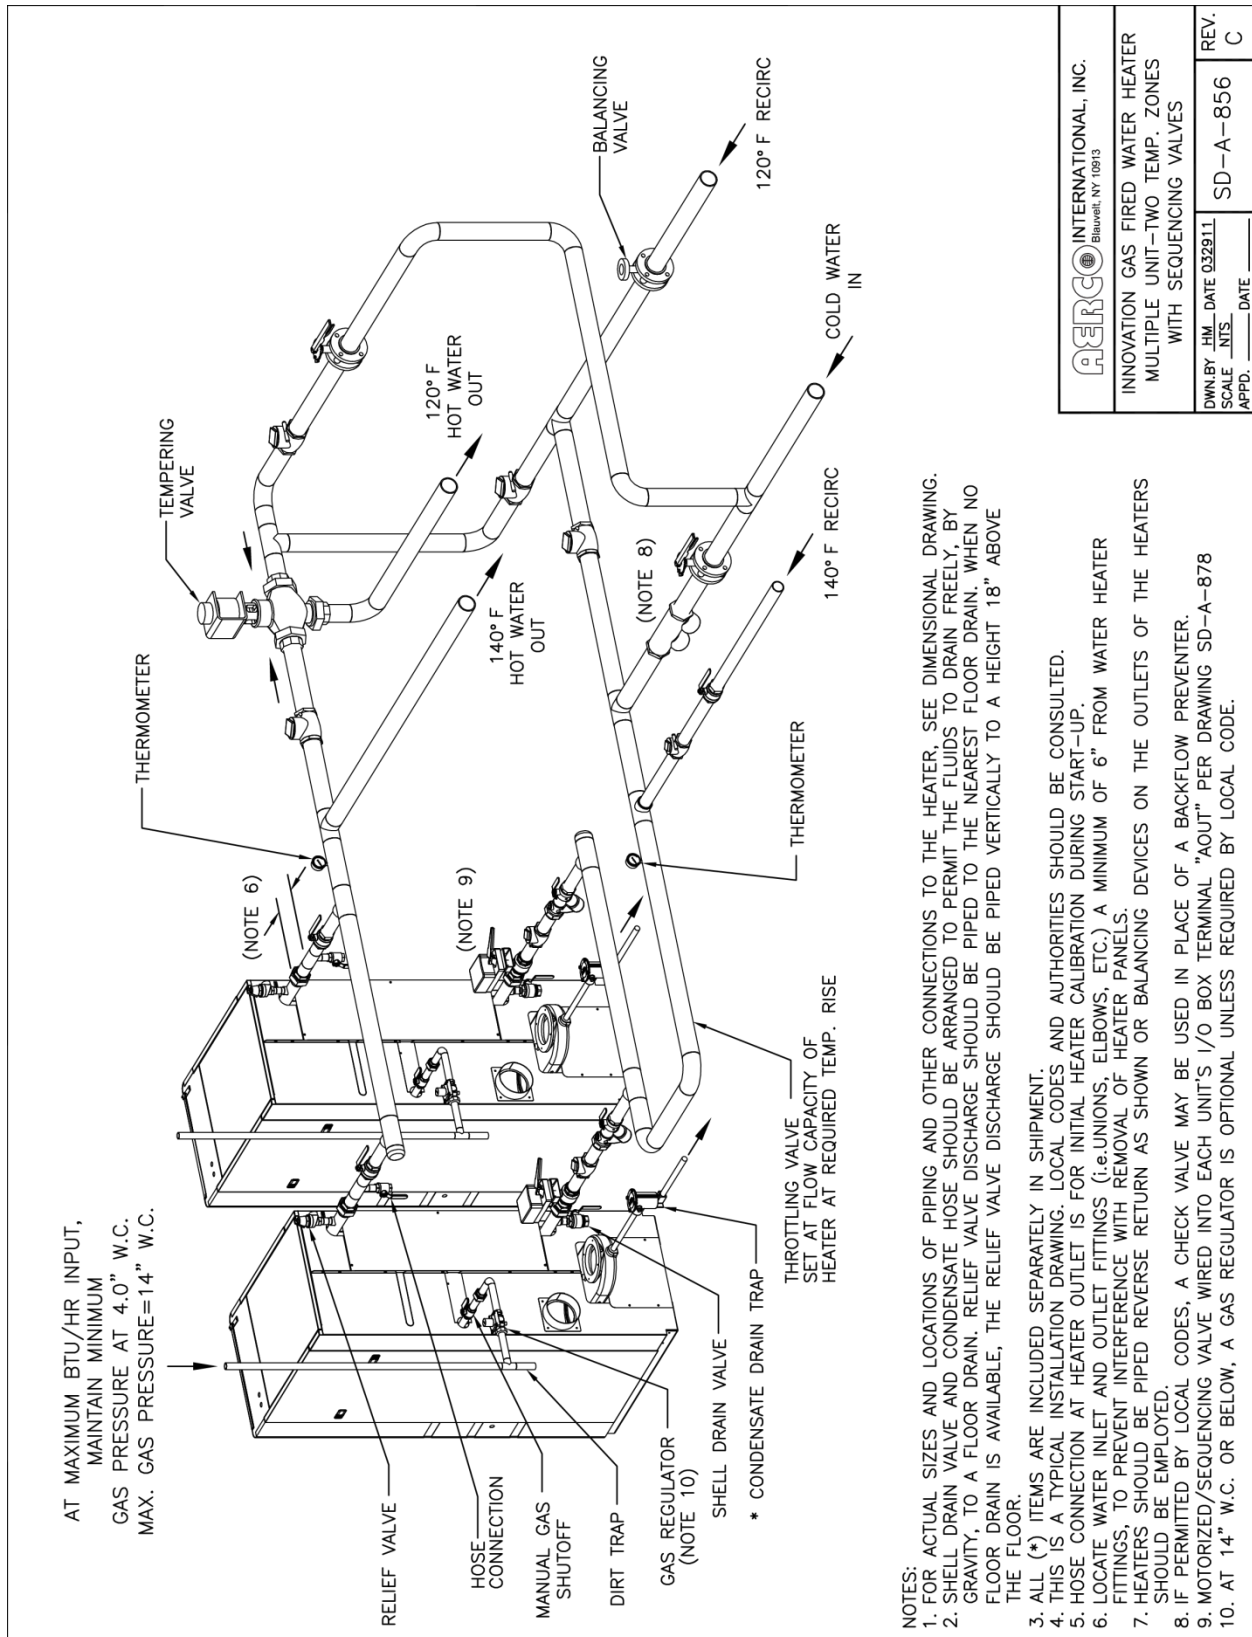


 AERCO INTERNATIONAL, INC. <small>Blauvelt, NY 10913</small>	
INNOVATION GAS FIRED WATER HEATER MULTIPLE UNIT-TWO TEMP. ZONES WITH SEQUENCING VALVES	
DWN. BY: <u> </u> DATE: <u>03/29/11</u> SCALE: <u> </u> INTS. <u> </u> APPD. <u> </u> DATE: <u> </u>	SD-A-856 REV. C

Drawing Number: SD-A-856 rev C

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX G – PIPING DRAWINGS

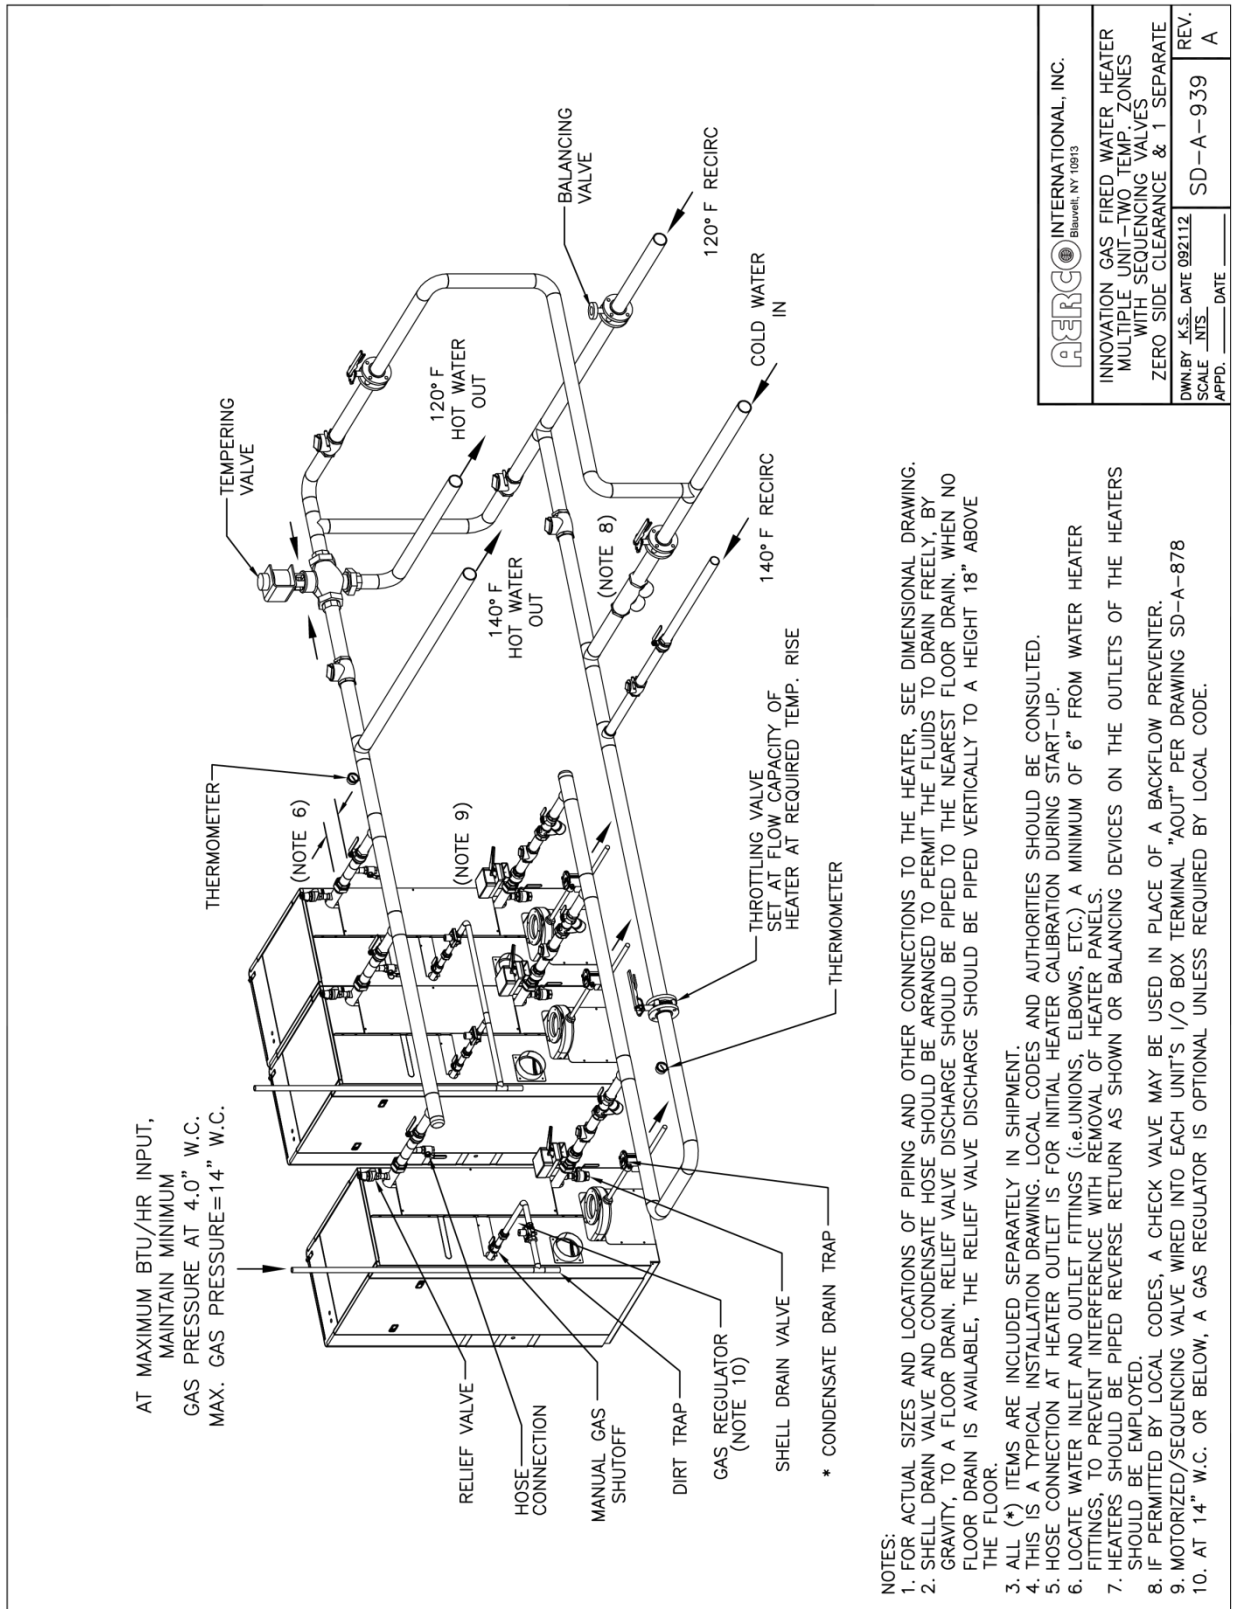

AERCO INTERNATIONAL, INC. <small>Blauvelt, NY 10913</small>	
INNOVATION GAS FIRED WATER HEATER MULTIPLE UNIT - TWO TEMP. ZONES WITH SEQUENCING VALVES ZERO SIDE CLEARANCE & 1 SEPARATE	
DWN. BY: K.S. DATE 092112	SCALE: NTS
APPD. _____	DATE _____
SD-A-939	REV. A


Drawing Number: SD-A-939 rev A

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX G – PIPING DRAWINGS


(This page left intentionally blank)

APPENDIX H – C-MORE CONTROL PANEL VIEWS

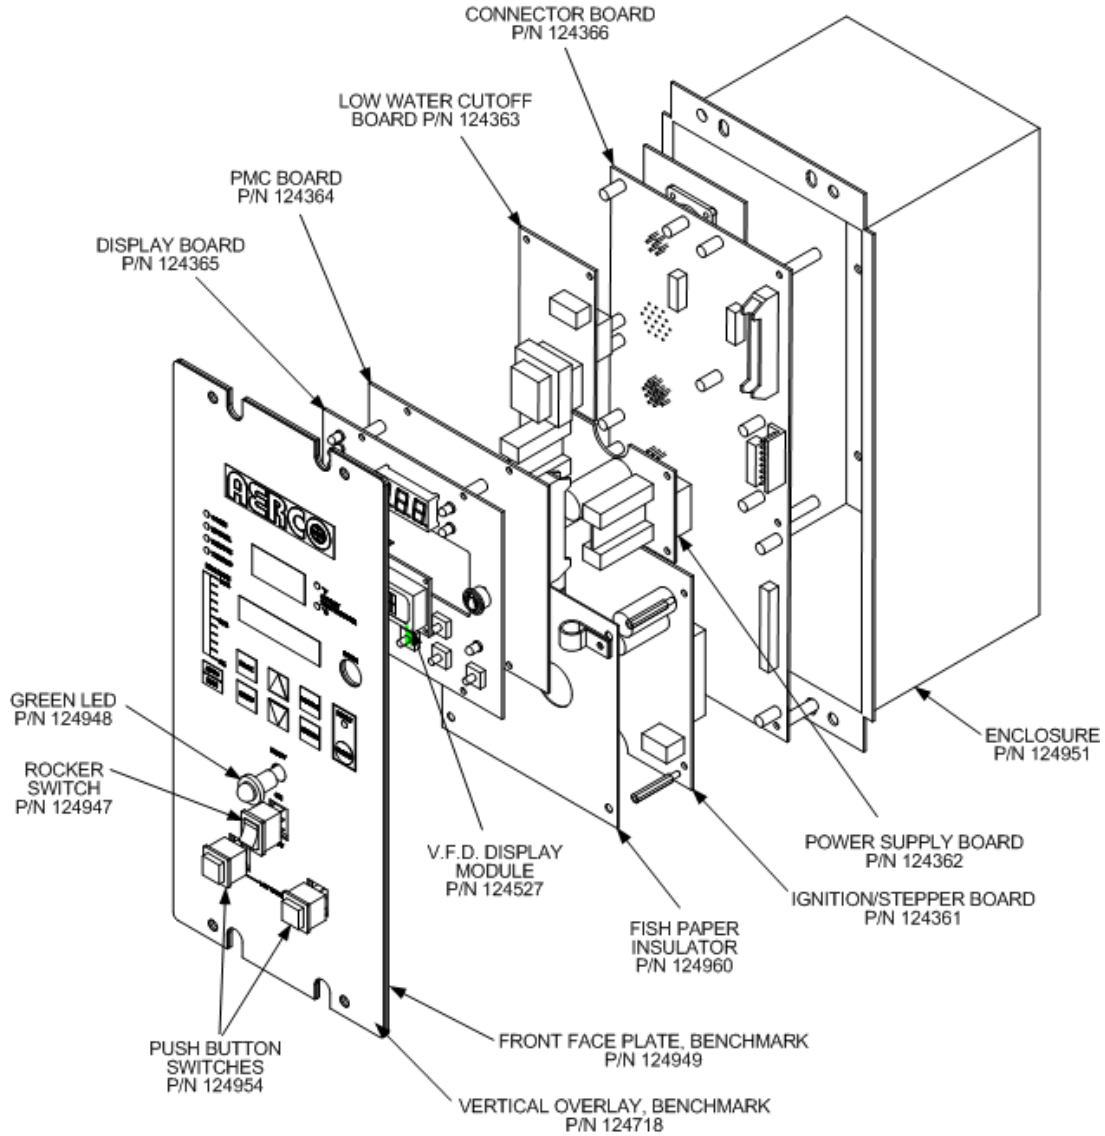

C-MORE CONTROL PANEL EXPLODED VIEW


C-MORE CONTROL PANEL VIEWS

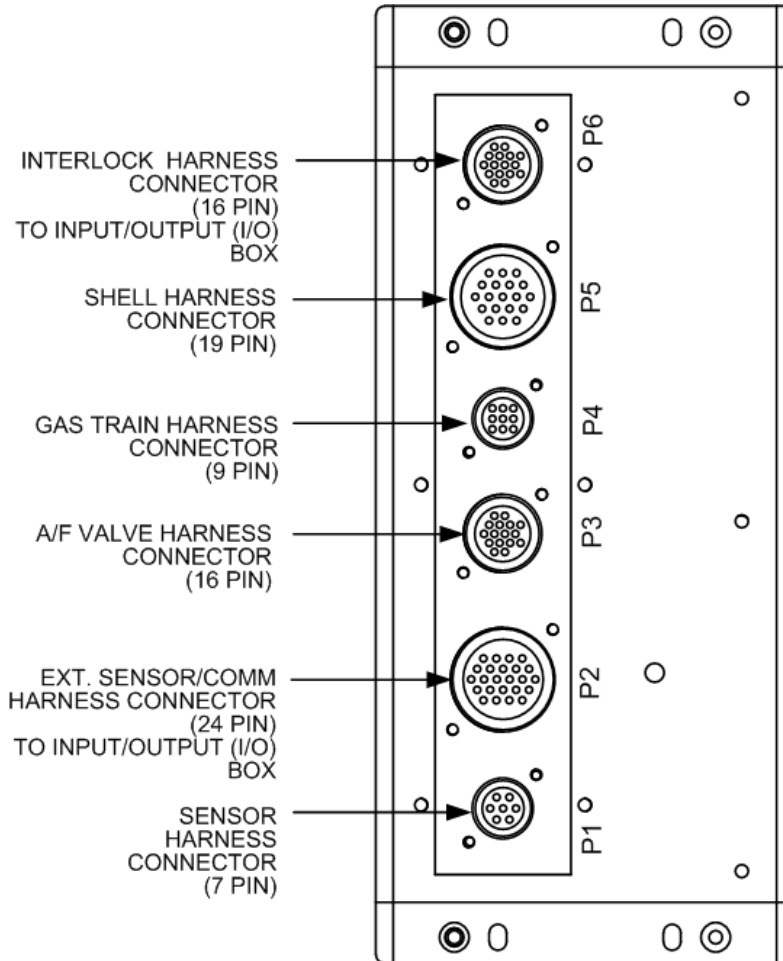

C-MORE CONTROL PANEL REAR VIEW

APPENDIX I – C-MORE WIRING DIAGRAMS

CONTROL BOX CONNECTIONS

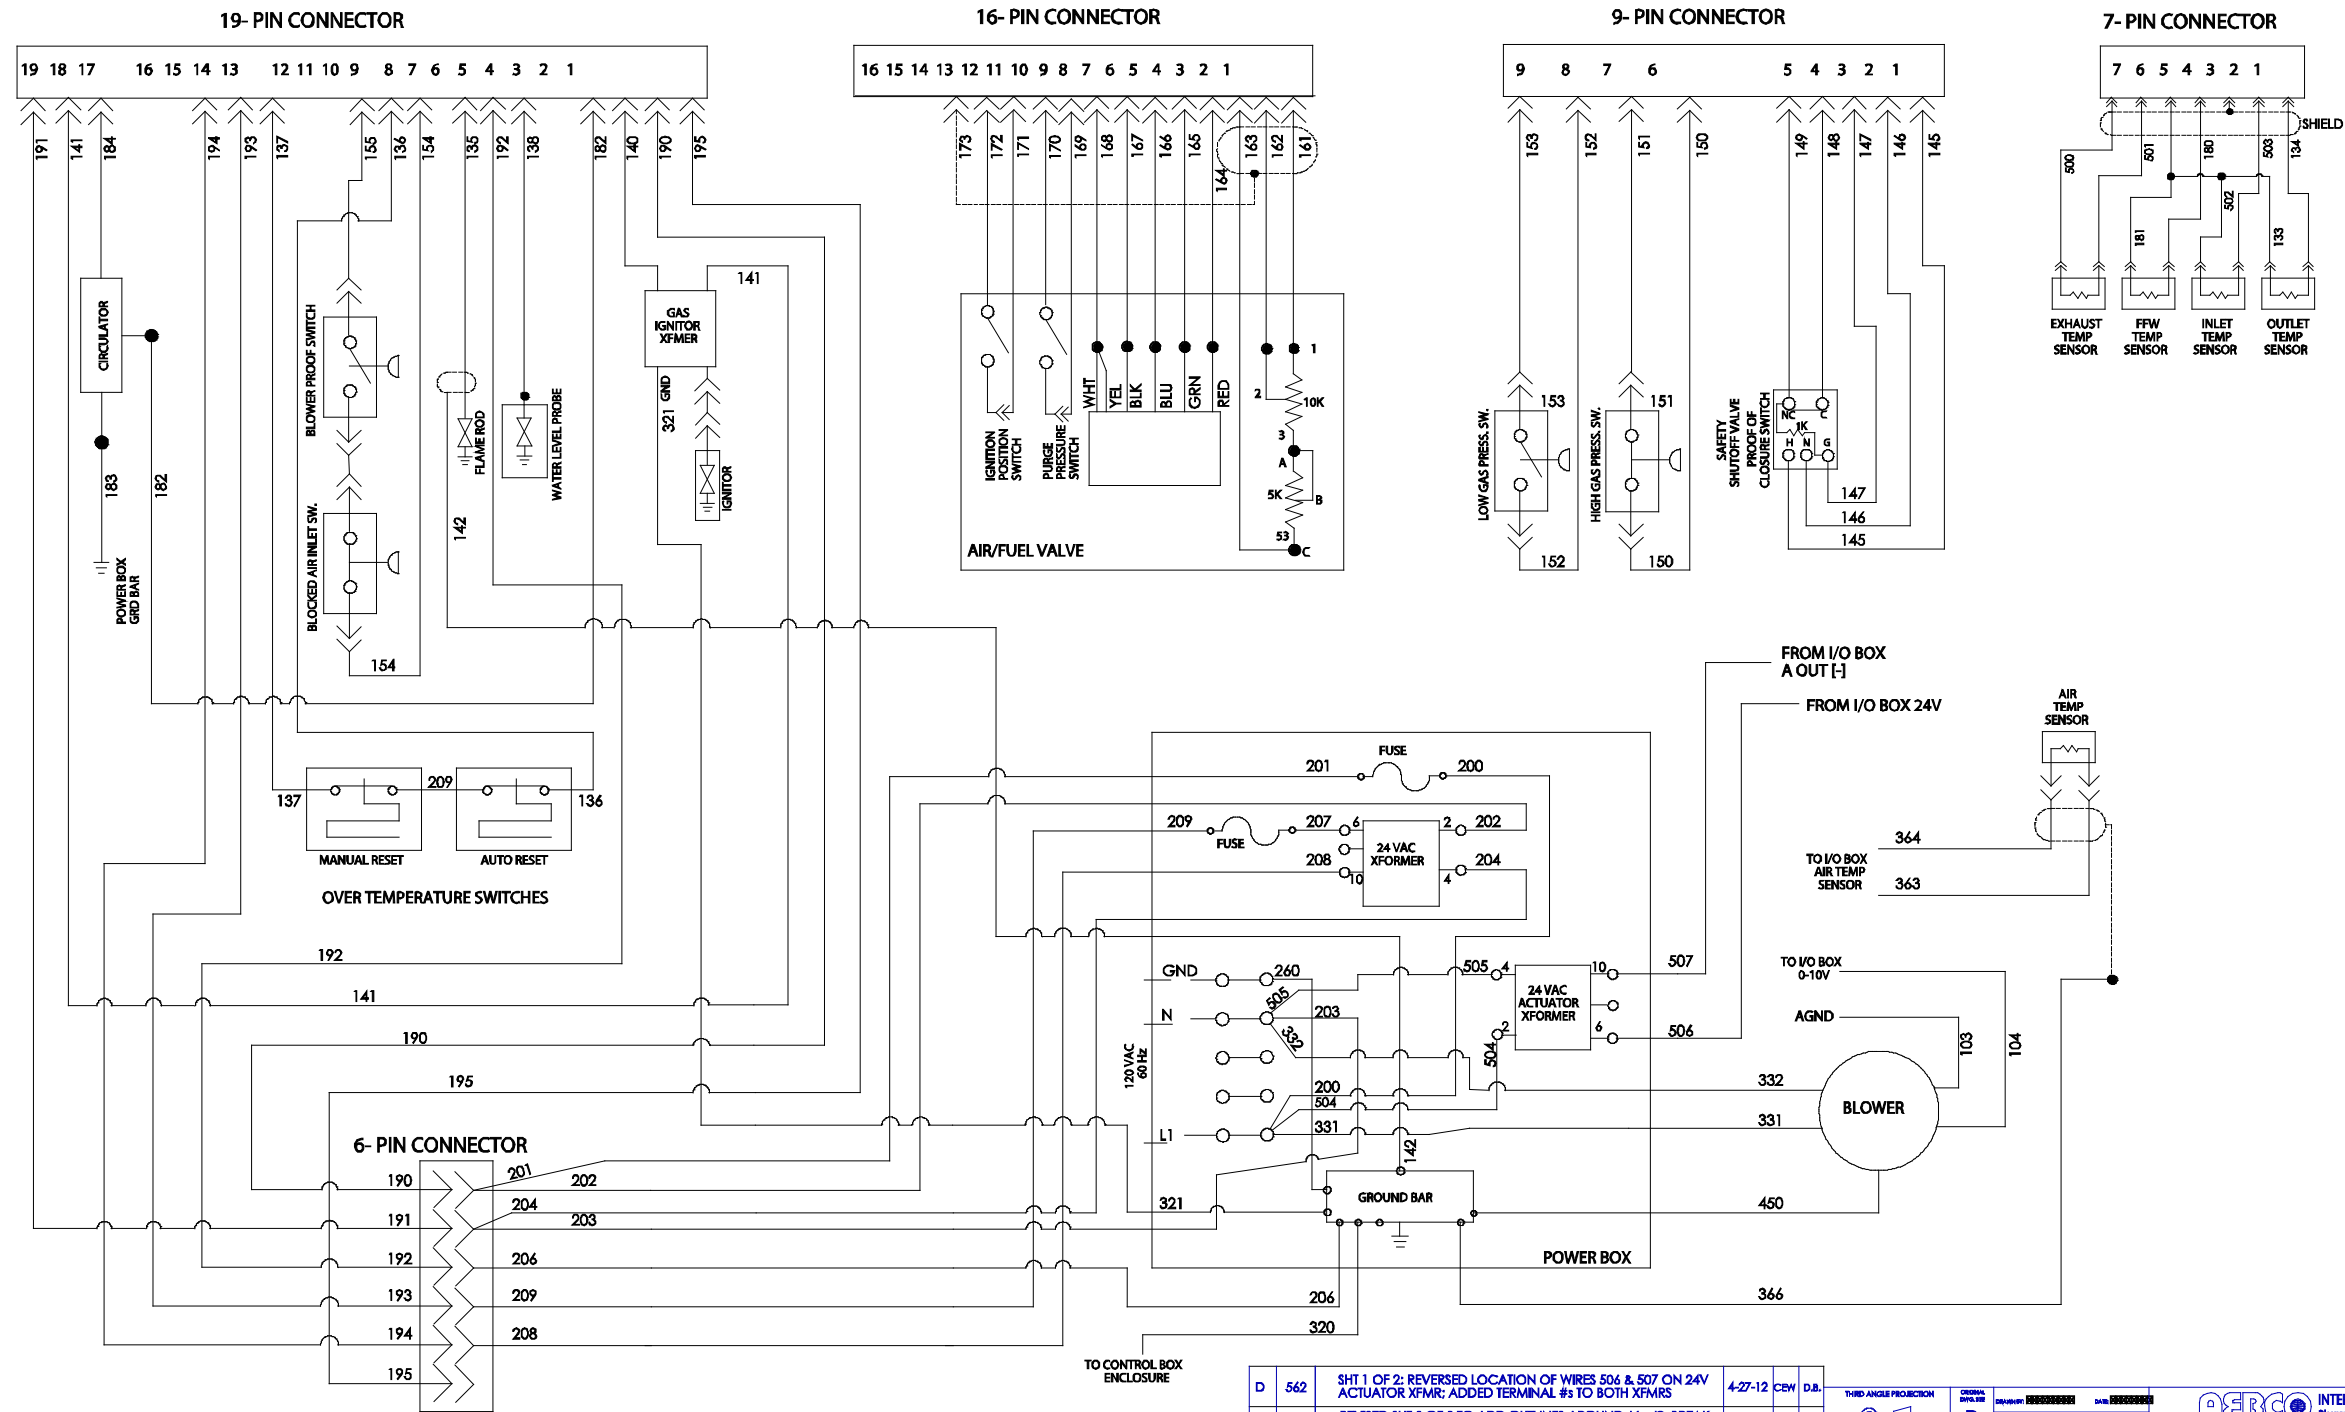

D	562	SHT 1 OF 2: REVERSED LOCATION OF WIRES 506 & 507 ON 24V ACTUATOR XFMR; ADDED TERMINAL #S TO BOTH XFMRs	4-27-12	CEW	D.B.
C	529	REVISED SHT 2 OF 2 TO ADD OUTLINES AROUND J6 - J9; BREAK CONTACT BETWEEN PIN 1&2 ON J7 SHT 1 OF 2	4-23-12	CEW	
B	529	REVISED SHT 2 OF 2 TO REARRANGE 24-PIN # ASSIGNMENTS	4-18-12	CEW	
A	529	RELEASED FOR PRODUCTION VALIDATION	4-2-12	CEW	
REV	EDD	REVISED	DATE	BY	CRD

THIRD ANGLE PROJECTION		DESIGN	REVISIONS	DATE	BY
D		DESIGNED BY	DATE		

AERCO INTERNATIONAL INC. Blauvelt, NY 10913	
TITLE WIRING SCHEMATIC 120 VAC, 60 Hz INNOVATION w/SEQ. VALVE @ 24 VAC	
MATL. PRIC.	DWG. NO. 68039
	SHEET 1 OF 2


Drawing Number: 68039 rev D Sheet 1 of 2

This Page Is Intentionally Blank

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX I – C-MORE WIRING DIAGRAMS

CONTROL BOX CONNECTIONS

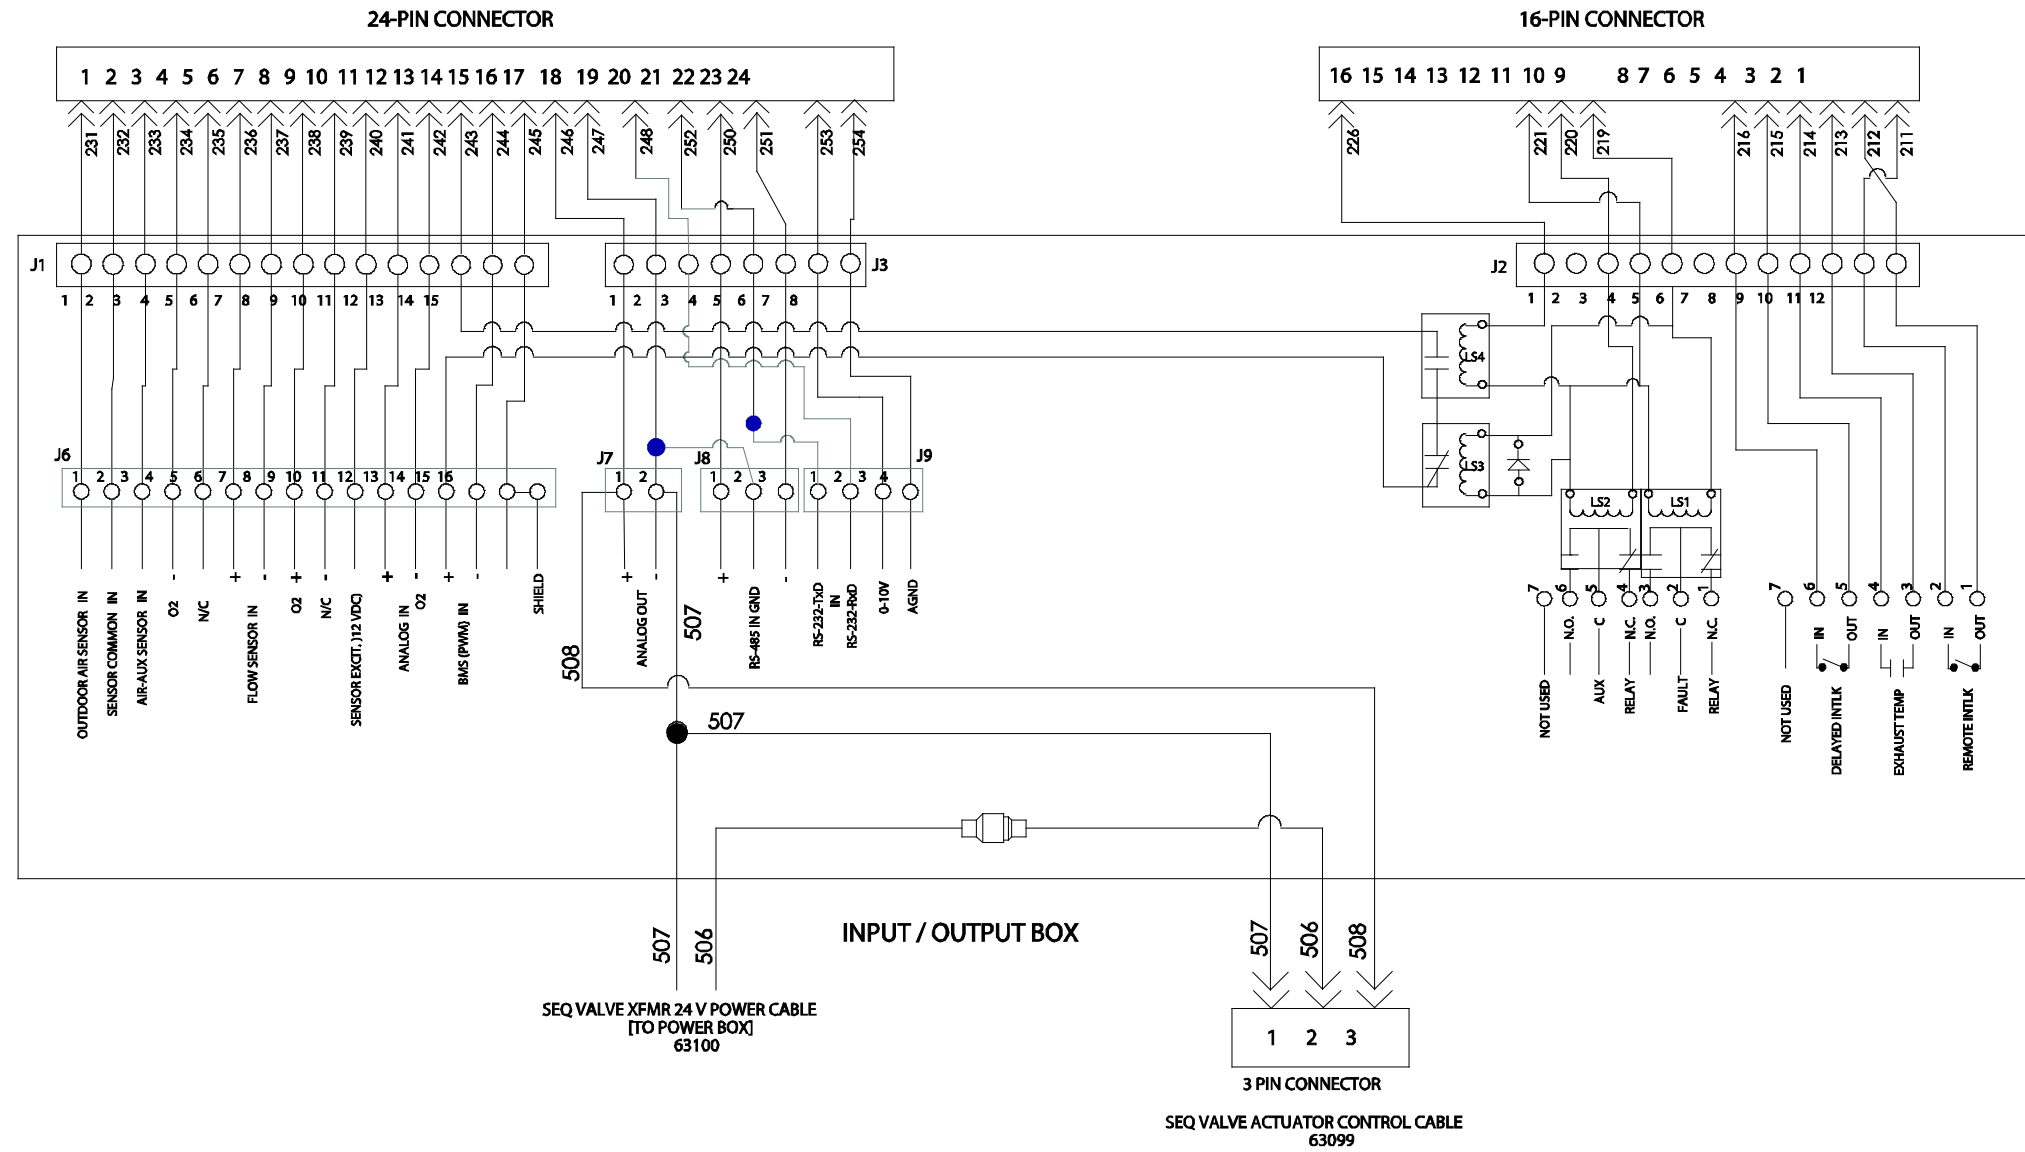

REV	ECO	REVISIONS	DATE	BY	CHKD

SEE SHEET 1 OF 2

THESE DRAWINGS AND/OR SPECIFICATIONS ARE THE PROPERTY OF AERCO INTERNATIONAL, INC. THEY ARE REPLIED IN STRICT CONFIDENCE AND SHALL NOT BE REPRODUCED, COPIED, OR USED AS THE BASIS FOR MANUFACTURE OR SALE OF APPARATUS WITHOUT PERMISSION OF THE OWNER.


THIRD ANGLE PROJECTION	ORIGINAL FILE NO. D	DATE 08/05/2014	DATE 08/05/2014	
TITLE WIRING SCHEMATIC 120 VAC, 60 Hz INNOVATION w/SEQ. VALVE @ 24 VAC				INTERNATIONAL INC. Blauvelt, NY 10913
MAT'L SPEC.:			DWG. NO.: 68039	REV: D
SHEET 2 OF 2				D

Drawing Number: 68039 rev D Sheet 2 of 2

This Page Is Intentionally Blank

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX I – C-MORE WIRING DIAGRAMS

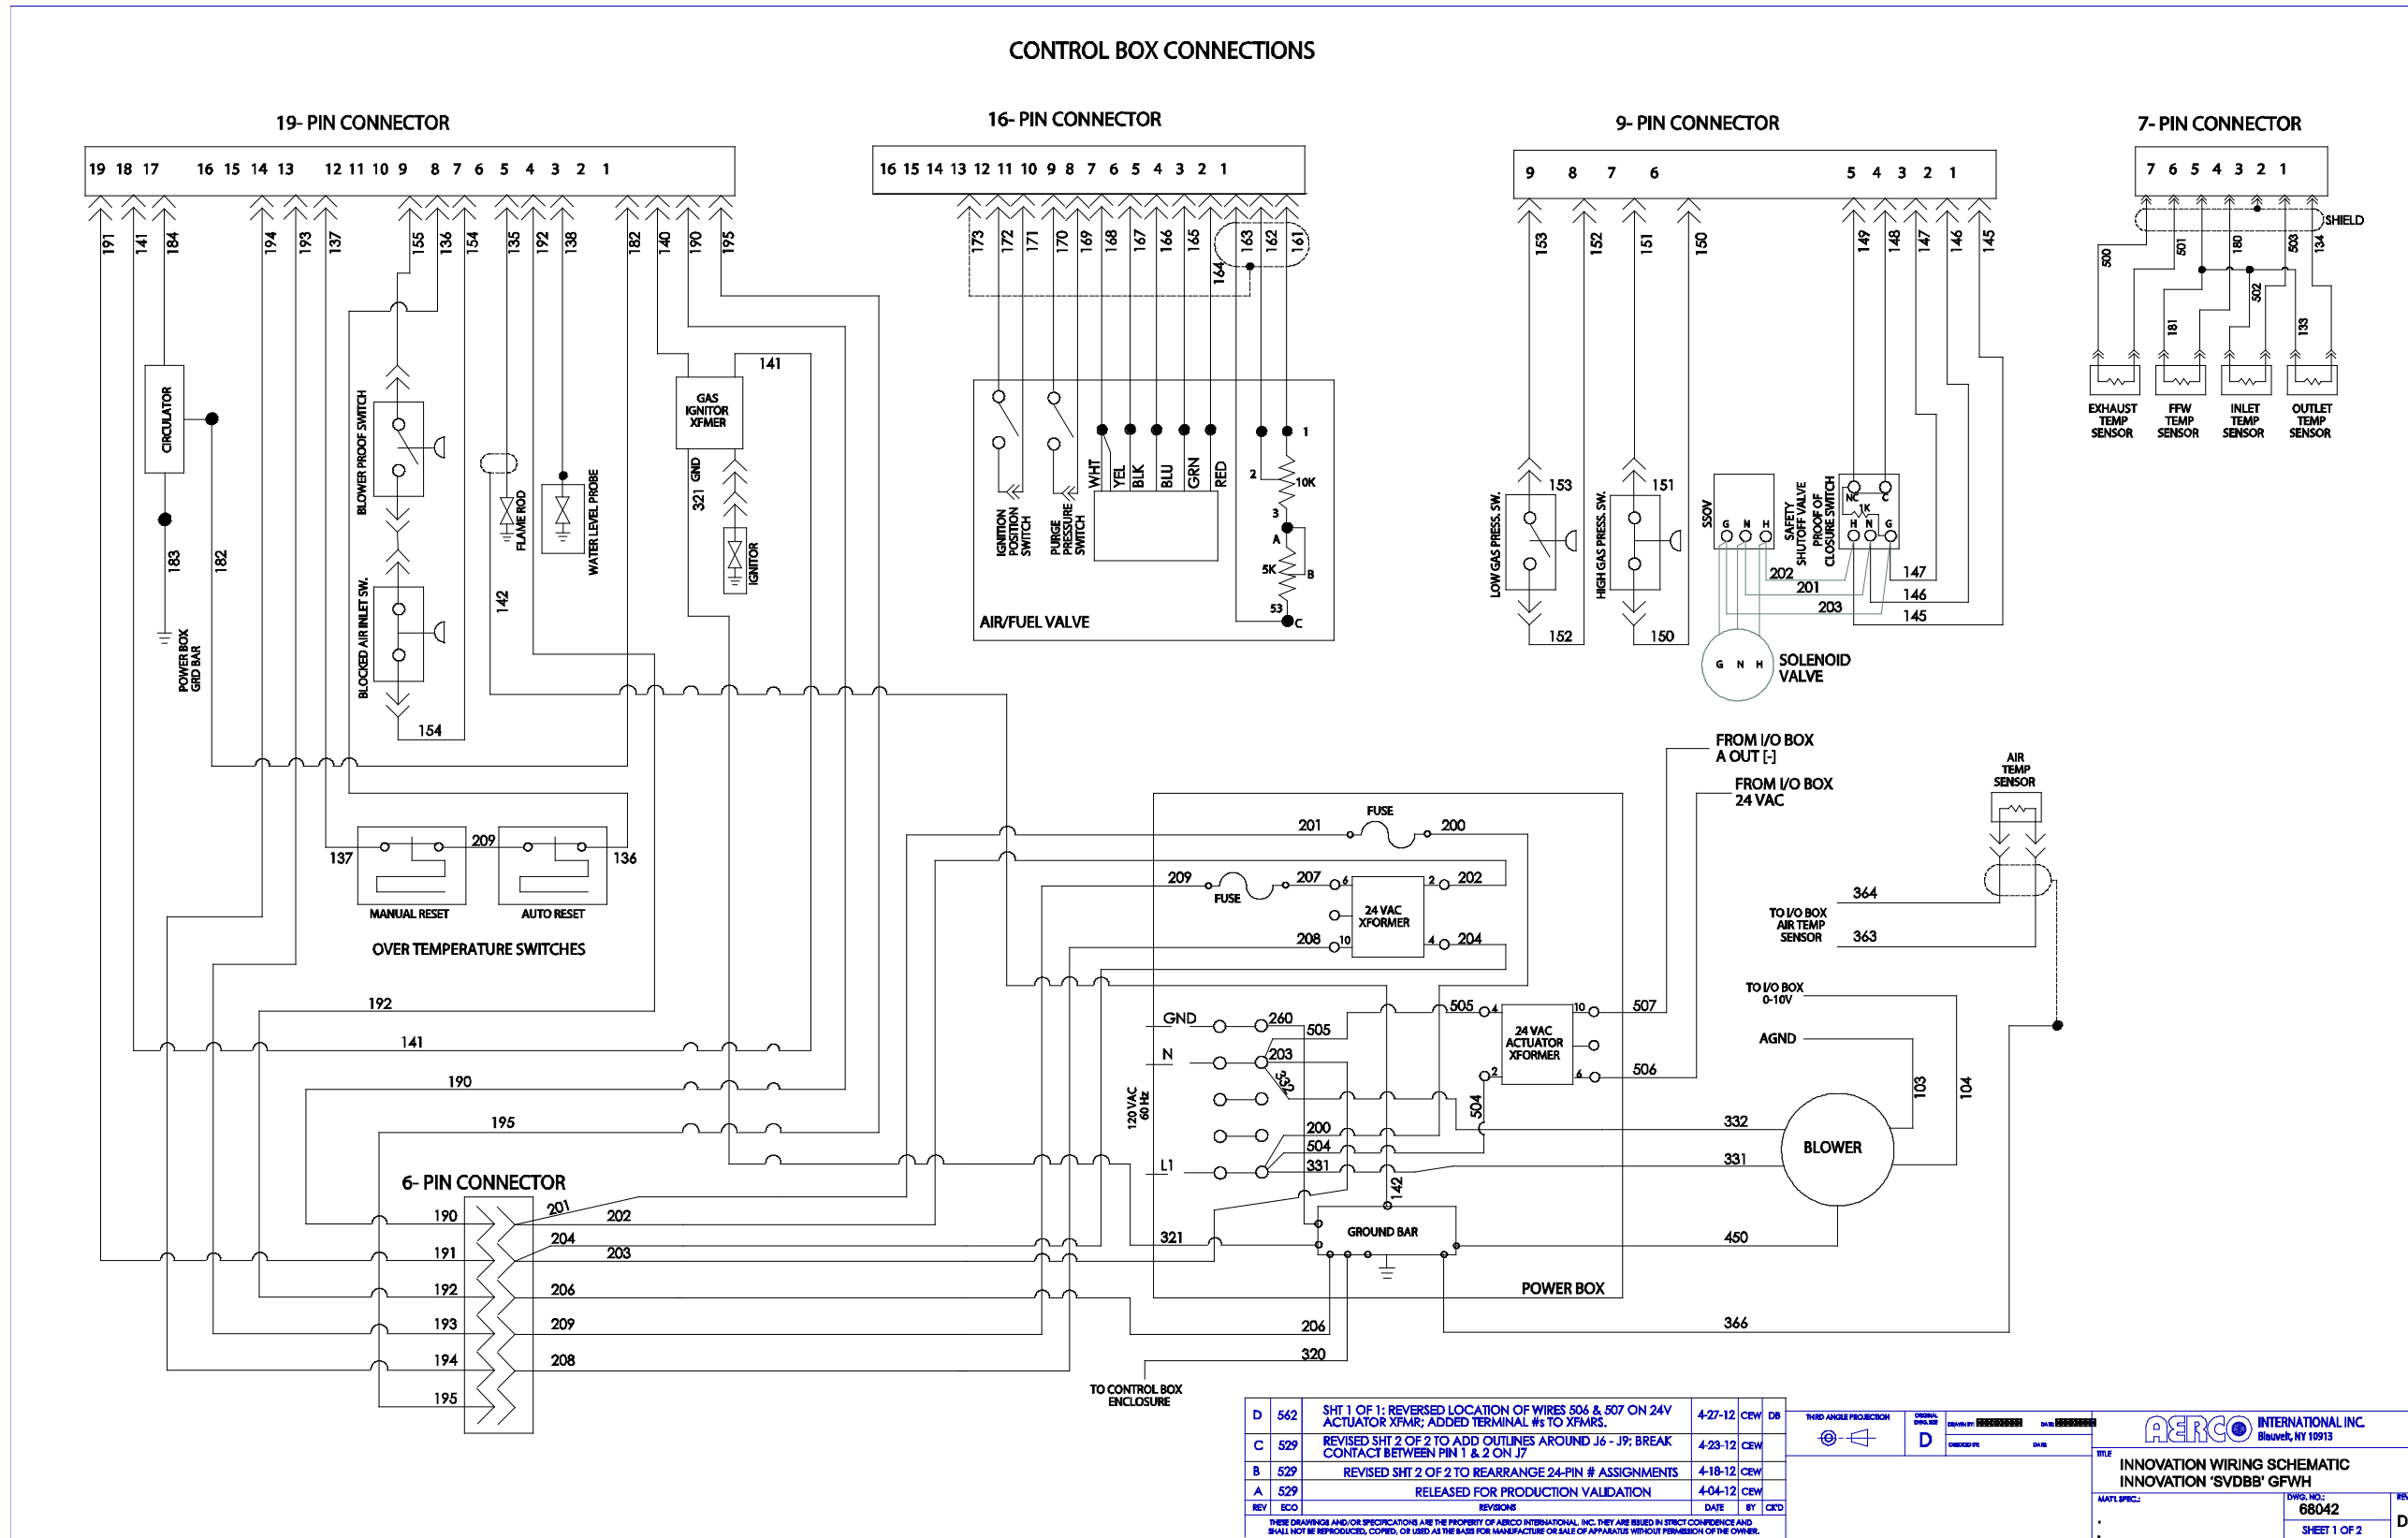


Drawing Number: 68042 rev D Sheet 1 of 2

This Page Is Intentionally Blank

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX I – C-MORE WIRING DIAGRAMS

CONTROL BOX CONNECTIONS

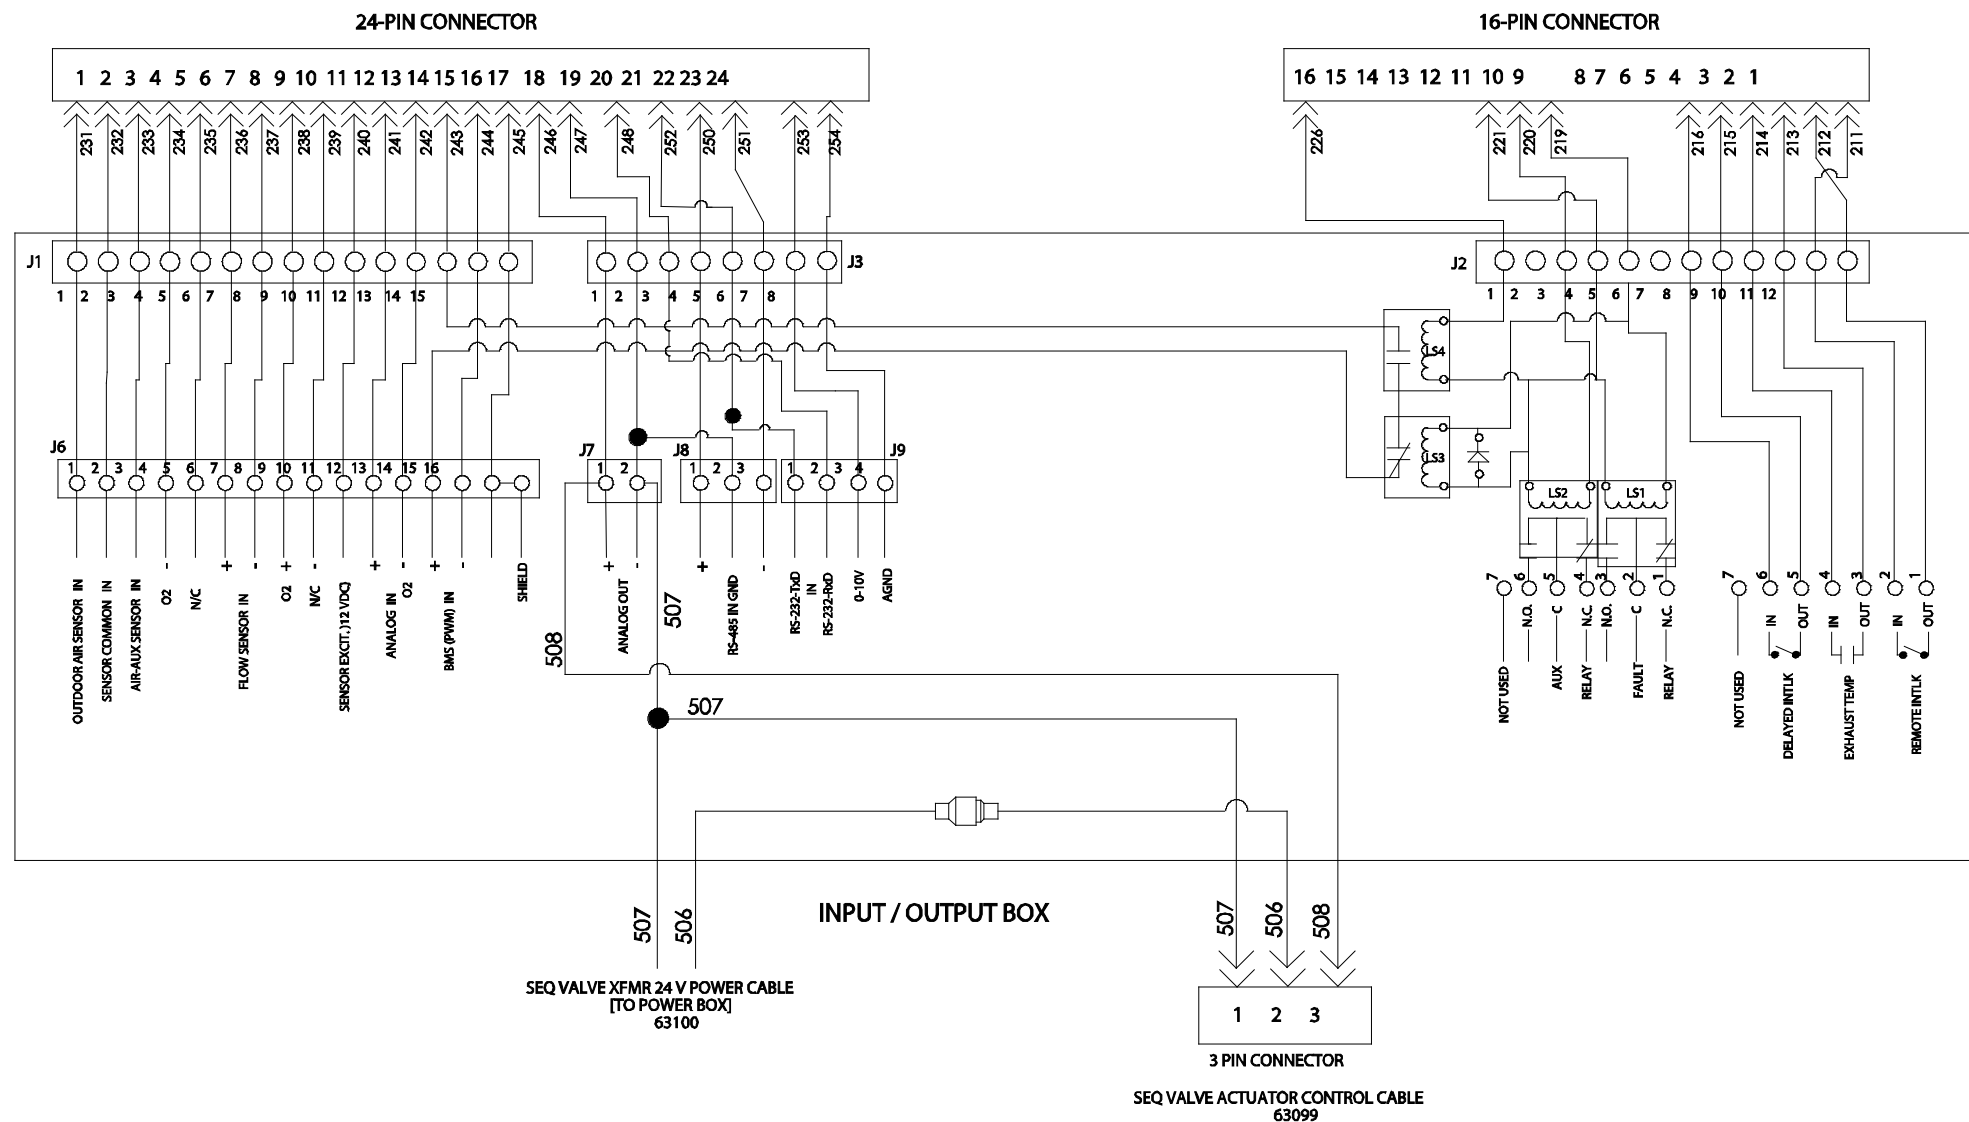

THIRD ANGLE PROJECTION	ORIGIN	DRAWN BY	DATE	CHECKED BY	DATE	AERCO INTERNATIONAL INC. Blauvelt, NY 10913
SEE SHEET 1 OF 2						TITLE INNOVATION WIRING SCHEMATIC INNOVATION 'SVDBB' GFWH
REV	ECO	REVISIONS	DATE	BY	CKD	MAPL SPEC: DWG. NO.: 68042 SHEET 2 OF 2 REV D

Drawing Number: 68042 rev D Sheet 2 of 2

This Page Is Intentionally Blank

APPENDIX J – RECOMMENDED SPARES

NOTE

Refer to the Parts List Illustrations in Appendix F for the locations of the recommended and optional spare parts listed in the following Tables.

Table J-1. Recommended Emergency Spare Parts

DESCRIPTION	PART NUMBER
120 VAC/Single-Phase Blower	24111
SSOV Actuator/Regulator Combo - Used on: <ul style="list-style-type: none"> • ALL FM gas train models • Downstream SSOV of DBB (IRI) gas train models 	64048
SSOV Actuator <u>Without</u> Proof of Closure Switch - Used on: <ul style="list-style-type: none"> • Upstream SSOV of DBB (IRI) gas train models 	69038
Temperature Switch - Manual Reset (SEE NOTE 1)	123552

Table J-2. Spare Parts Recommended for Maintenance

DESCRIPTION	PART NUMBER
Annual Maintenance Kit	58036-01
24-month Waterside/Fireside Inspection Kit	58036-02

Table J-3. Optional Spare Parts

DESCRIPTION	PART NUMBER
C-More Control Box	181197
Burner	46023
Temperature Switch - Auto Reset (SEE NOTE 1)	123966

NOTE

If unit is installed in the State of Kentucky, contact your local AERCO Sales Representative for Temperature Switch rated for 200°F.

(This Page Is Intentionally Blank)

APPENDIX K – COMBUSTION CALIBRATION (KOREA ONLY)

K.1 NATURAL GAS COMBUSTION CALIBRATION

The Innovation Heater is combustion calibrated at the factory prior to shipping. However, recalibration as part of initial start-up is necessary due to changes in the local altitude, gas BTU content, gas supply piping and supply regulators. Factory Test Data sheets are shipped with each unit. These sheets must be filled out and returned to AERCO for proper Warranty Validation.


It is important to perform the following procedure as outlined below. This will keep readjustments to a minimum and provide optimum performance.

Natural Gas Combustion Calibration

1. Open the water supply and return valves to the unit and ensure that the system pumps are running.
2. Open the natural gas supply valve(s) to the unit.
3. Set the control panel ON/OFF switch to the OFF position.
4. Turn on external AC power to the unit. The display will show LOSS OF POWER and the time and date.
5. Set the unit to the Manual Mode by pressing the AUTO/MAN key. A flashing Manual Valve Position message will be displayed with the present position in %. Also, the MANUAL LED will light.
6. Adjust the air/fuel valve position to 0% by pressing the ▼ arrow key.
7. Ensure that the leak detection ball valve downstream of the SSOV is open.
8. Set the ON/OFF switch to the ON position.
9. Change the valve position to 29% using the ▲ arrow key. The unit should begin its start sequence and fire.
10. Next, verify that the gas pressure downstream of the SSOV is within the appropriate range shown below for the Innovation Model being tested. If gas pressure adjustment is required, remove the brass hex nut on the SSOV actuator to access the gas pressure adjustment screw (Figure J-1). Make gas pressure adjustments using a flat-tip screwdriver to obtain a gas pressure reading within the required range for the INN model being tested.

INNOVATION MODEL	GAS PRESSURE RANGE DOWNSTREAM OF SSOV
INN1350	2.8" – 3.0" W.C.
INN1060	2.4" – 2.6" W.C.
INN800	1.3" – 1.5" W.C.
INN600	0.7" – 0.9" W.C.

Natural Gas Combustion Calibration – Continued

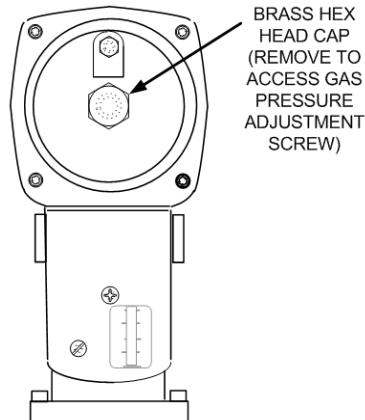

TYPICAL SSOV ACTUATOR WITH REGULATOR

Figure K-1. Gas Pressure Adjustment Screw Location

11. Next, decrease the valve open position to 16% using the ▼ arrow key. Verify that the gas pressure at the inlet of the SSOV is 11.0" W.C. Readjust the inlet gas pressure if necessary.
12. Insert the combustion analyzer probe into the 1/8" port at the rear of the exhaust manifold. Allow enough time for the combustion analyzer to settle.
13. Verify that the oxygen (O₂) level is within the range shown below. Also, ensure that the carbon monoxide (CO) and nitrogen oxide (NO_x) readings do not exceed the values shown.

Combustion Oxygen Level at 16% Valve Position

Oxygen % ± 0.5	Carbon Monoxide	NO _x
6.5 %	<50 ppm	<15 ppm

14. If the oxygen level is not within the required tolerance, the gas pressure on the downstream side of the SSOV must be adjusted using the adjustment screw on the SSOV regulator (Figure J-1). Slowly rotate the gas pressure adjustment (approximately 1/4-turn increments). Allow the combustion analyzer to stabilize following each adjustment. Clockwise rotation reduces the oxygen level, while counterclockwise rotation increases the oxygen level.

Natural Gas Combustion Calibration – Continued

15. Once the oxygen level is within the required range listed in step 13, the gas pressure on the downstream side of the SSOV should be within the appropriate range shown below for the Innovation Model being tested.

INNOVATION MODEL	GAS PRESSURE RANGE DOWNSTREAM OF SSOV
INN1350	2.8" – 3.0" W.C.
INN1060	2.4" – 2.6" W.C.
INN800	1.3" – 1.5" W.C.
INN600	0.7" – 0.9" W.C.

16. Replace the brass cap on the SSOV gas pressure adjustment if it was previously removed.
17. This completes the combustion calibration procedure.

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX K – COMBUSTION CALIBRATION (KOREA ONLY)

(This Page Is Intentionally Blank)

APPENDIX L – WARRANTY

**INNOVATION WATER HEATER
LIMITED WARRANTY**

Innovation Water Heaters Installation, Operation & Maintenance Manual

APPENDIX L – WARRANTY

LIMITED WARRANTY: INNOVATION GAS-FIRED WATER HEATER

PRESSURE VESSEL: 10 YEARS NON-PRORATED

The shell assembly shall carry a non-prorated 10 year limited warranty from date of shipment against leakage due to thermal shock, water side corrosion, mechanical defects or workmanship.

HEAT EXCHANGER TUBES/COMBUSTION CHAMBER: 10 YEARS

The heat exchanger/combustion chamber shall carry a 10 year prorated, limited warranty from date of shipment against any condensate corrosion, thermal stress failure, mechanical defects or workmanship. Operation of the heater using contaminated air will void the warranty. The heat exchangers combustion chamber shall not be warranted from failure due to scaling, liming, corrosion, or erosion due to water or installation conditions. **AERCO** will repair, rebuild or exchange, at its option the heat exchanger/combustion chamber according to the following schedule:

<u>Year</u>	<u>Discount From Then Prevailing List Price</u>
5	100%
6	70%
7	60%
8	50%
9	40%
10	30%

“C-MORE” CONTROL PANEL: 2 YEARS FROM SHIPMENT

AERCO labeled control panels are conditionally warranted against failure for (2) two years from shipment.

OTHER COMPONENTS: 18 MONTHS FROM SHIPMENT

All other components, with the exception of the igniter and flame detector, are conditionally guaranteed against any failure for 18 months from shipment.

The warranty as set forth on the back page of the Operations & Maintenance Manual is in lieu of and not in addition to any other express or implied warranties in any documents, or under any law. No salesman or other representative of **AERCO** has any authority to expand warranties beyond the face of the said warranty and purchaser shall not rely on any oral statement except as stated in the said warranty. An Officer of **AERCO** must do any modifications to this warranty in writing. **AERCO MAKES NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE OR ANY OTHER EXPRESS OR IMPLIED WARRANTIES.** **AERCO** disclaims all responsibility for any special, incidental or consequential damages. Any claim relating to the product must be filed with **AERCO** not later than 14 days after the event-giving rise to such claim. Any claims relating to this product shall be limited to the sale price of the product at the time of sale. The sale of the product is specifically conditioned upon acceptance of these terms.

LIMITED WARRANTY: INNOVATION GAS-FIRED WATER HEATER

CONDITIONS OF WARRANTY:

Should an **AERCO** gas-fired (natural gas, propane, and natural gas/propane dual fuel only) water heater fail for any of the above reasons within the specified time period from the date of original shipment(s), AERCO shall at its option modify, repair or exchange the defective item. **AERCO** shall have the option of having the item returned, FOB its factory, or to make field replacements at the point of installation. **In no event shall AERCO be held liable for replacement labor charges** or for freight or handling charges.

AERCO shall accept no responsibility if such item has been improperly installed, operated, or maintained – as defined in AERCO O&M manual OMM-0001, or if the buyer has permitted any unauthorized modification, adjustment, and/or repairs to the item. The use of replacement parts not manufactured or sold by **AERCO** will void any warranty, express or limited.

AERCO shall accept no responsibility if such item has been damaged due to contaminated combustion air containing but not limited to sheetrock particles, plaster board particles, dirt, dust, lint, and corrosive chemicals such as chlorine gas, halogenated hydrocarbons, and Freon.

In order to process a warranty claim a formal purchase order number is required prior to shipment of any warranty item. In addition, the returned item must include a Returned Goods Authorization (RGA) label, attached to the shipping carton, which identifies the item's return address, register number and factory authorized RGA number.

Warranty coverage for all components and equipment mentioned in said warranty are not valid unless the water heater is started up by a factory certified SST (Service, Start-Up and Troubleshooting) Technician and an AERCO start-up sheet is completed.

This warranty coverage is only applicable within the United States and Canada. All other geographical areas carry a standard warranty of 18 months from date of shipment or 12 months from startup, whichever comes first.

Rev. 09/25/12

Change Log

Date	Description	Changed By
11/22/2013	Rev J: <ul style="list-style-type: none"> • Replaced p/n 93367 in gas train drawings (PIR 890) • Replaced wiring harness 63072 with 63143 in Part List drawing, item 50 (PIR 855) • Added Snubber to A/F assy. (per PIR 890) • Changed wiring harness (PIR 855) • Replaced exhaust manifold with 44085-1 (PIR 926-1) • Added new gas pressure regulator info (PIR 934-5) • Changed “sealed” combustion air to “ducted” combustion air, section 2.14 (PIR 934-3) • Added info about RS-232 cable for C-More (PIR 934-5) • Added further Analog Out description per Jerry/Jon (PIR 934-1). • Updated both dimensional drawings in Appendix E 	Curtis Harvey Chris Blair
08/05/2014	Rev K PIRs: <p>754: Addendum 1, replaced 161450 with 63147 in ALL gas train BOMs</p> <p>708: Removed Combustion Chamber Liner, 161151</p> <p>934-21: Changed name of Chapter 5 to SAFETY DEVICE TESTING</p> <p>934-41: Clarified instructions on opening sequencing valve, section 9.9.2</p> <p>934-50: Added new CAUTION to section 2.9 regarding acceptable condensate drain material</p> <p>1018: Replaced Dynamic Load Anticipator 22151 with 22225 in Appendix F.</p> <p>934-575: Added new note to section 2.9 regarding use of condensate Neutralizer Kit; modified combustion calibration per Tech Service Bulletin TSB-2014-01.</p> <p>934-57: Modified values in steps 10, 13 & 17 in section 4.4 - Natural Gas Combustion Calibration.</p> <p>934-80: Clarification to sections 2.3, 2.8, 2.9 & 2.10.2 to related to the pressure relief and manual shutoff valves.</p> <p>1034: Updated graphic & instructions in section 2-10, updated tables 3-2, 3-3 and 3-4, added/removed WHM menu options to Appendix A, added new options to Chapter 9 - Water Heater Management</p>	Chris Blair

